

User Guide

Premier 412/816/832

IINS195-3



Texecom
Designed to Perform

Operating Your Alarm System

This document covers the everyday operation of your alarm system, for details on more advanced operation and system programming, please refer to the *Premier 412/816/832 Master User Manual*.

Away Arming the System

Enter your Access code (?) (?) (?) (?) followed by the (Arm) / (Yes) key. The **Armed** light will flash and the exit sounder will sound for the duration of the exit time.

Stay Arming the System

Enter your Access code (?) (?) (?) (?) followed by the (Stay) key. The system will normally arm immediately, the **Armed** light will flash slowly indicating that the system is **Stay** armed.

Disarming During Entry

Enter the premises via the designated entry point. The entry tone will sound, proceed directly to the remote keypad and enter your Access code (?) (?) (?) (?).

Disarming When Not in Entry

Proceed directly to the remote keypad and enter your Access code (?) (?) (?) (?) followed by the (Disarm) / (No) key. **Note:** If your system consists of only one partition you will not have to press the (Disarm) / (No) key.

Bypassing Zones

Enter your Access code (?) (?) (?) (?) followed by the (Bypass) key. Enter the zone or zones to be bypassed e.g. 02, 04 etc. When all required zones have been selected, press:

(Arm) / (Yes) to Away arm the system with the selected zones bypassed

(Stay) to Stay arm the system with the selected zones bypassed

(Menu) to return to the normal disarmed state with the selected zones bypassed

Reset Alarms/Faults

Enter your Access code (?) (?) (?) (?), then enter (Menu) 0 or press (Reset).

Last Alarm Log

Enter your Access code (?) (?) (?) (?), and then enter (Menu) 1. The remote keypad will display the zones that caused an alarm when the system was last armed. Press (Menu) to return to the normal disarmed state.

Acknowledging a New Service Fault

Should the **Service** light start flashing, enter your Access code (?) (?) (?) (?), and then enter (Menu) (2). The remote keypad will display all Service Faults (see Service Faults Table on back page). Press (Menu) or (Reset) to acknowledge the fault and return to the normal disarmed state.

Toggle Chime On and Off

Enter your Access code (?) (?) (?) (?), and then enter (Menu) (4) or (Chime).

Change User Access Code

Enter your existing Access code (?) (?) (?) (?), and then enter (Menu) (5). Enter your **new** Access code (?) (?) (?) (?) followed by the (Arm)/(Yes) key. Now re-enter your **new** Access code (?) (?) (?) (?) for confirmation.

Abort Communications

Enter your Access code (?) (?) (?) (?), and then enter (Menu) (7).

Operating Your Alarm System with Quick Commands

If your Installer has programmed the Quick Commands the following procedures can be used:

Away Arming the System

Press the (Arm)/(Yes) key. The **Armed** light will flash and the exit sounder will sound for the duration of the exit time.

Stay Arming the System

Press the (Stay) key. The system will normally arm immediately, the **Armed** light will flash slowly indicating that the system is **Stay** armed.

Bypassing Zones

Press the (Bypass) key. Enter the zone or zones to be bypassed e.g. 02, 04 etc. When all required zones have been selected, press:

(Arm)/(Yes) to Away arm the system with the selected zones bypassed

(Stay) to Stay arm the system with the selected zones bypassed

(Menu) to return to the normal disarmed state with the selected zones bypassed

Service Faults Displayed on LED Keypads	
Light	Fault Condition
1	AC Fail
2	Telephone Line Fault
3	2-Wire Smoke Alarm
4	Box Tamper & Auxiliary Input: Press (4) to view type, lights 1 - 5 indicate: Light 1 = Box Tamper Light 2 = Auxiliary Tamper Light 3 = Auxiliary PA Light 4 = Auxiliary Tamper (UK Bell Module) Light 5 = Bell Tamper (UK Bell Module)
5	Date or Time Lost
6	Zone Tamper/Trouble Press (6) to view zone number
7	Keypad Tamper/Removed Press (7) to view keypad number
8	Equipment Faults Press (8) to view fault type: Light 1 = Output 1 Fault Light 2 = Output 2 Fault Light 3 = Siren/Bell Fault Light 4 = 2-Wire Smoke Sensor Fault Light 5 = Auxiliary Fuse Failed Light 6 = Battery Fault Light 7 = Service Timer/Zone Soak Test Failed Light 8 = Communication Fault

FCC Statement

Operation is subject to the following conditions.

- The device must not cause harmful Interference.
- The device must accept any interference received, including interference that may cause undesired operation.

LAB545 Premier 816 UL label



LAB545

UES1000000

US: 5MIAL09B P832-P816

IC: 8283A - 832816

REN = 1B, Plug Type = RJ - 31X

Product complies with part15B
and part 68 FCC rules

LAB545 Premier 832 UL label



LAB546

UET1000000

US: 5MIAL09B P832-P816

IC: 8283A - 832816

REN = 1B, Plug Type = RJ - 31X

Product complies with part15B
and part 68 FCC rules

LAB558 Premier 832 RTC UL Label



LAB558

UER1000000

US: 5MIAL09BP832-P816

IC: 8283A - 832816

REN = 1B, Plug Type = RJ - 31X

Product complies with part15B
and part 68 FCC rules

Canadian Emissions Statements

This class B digital apparatus complies with Canadian ICES – 003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

ANSI/SIA CP-01-2007 Defaults.

FEATURE	REQUIREMENT	DEFAULT
Exit Time	Required (programmable)	60 Seconds
Progress Annunciation / Disable - for Silent Exit	Allowed	All annunciators enabled
Exit Time Restart	Required Option	Enabled
Auto Stay Arm on Unvacated Premises	Required Option (except for remote arm)	Enabled
Exit Time and Progress Annunciation / Disable - for Remote Arm	Allowed Option (for remote arm)	Enabled
Entry Delay(s)	Required (programmable)	30 Seconds
Abort Window – for Non-Fire Zones	Required Option	Enabled
Abort Window Time – for Non-Fire Zones	Required (programmable)	30 Seconds
Abort annunciation	Required Option	Enabled
Cancel Window	Required	Not required to be programmable.
Cancel Annunciation	Required Option	Enabled
Duress Feature	Allowed Option	Disabled
Cross Zoning	Required Option	Disabled
Programmable Cross Zoning Time	Allowed	Per manufacturer
Swinger Shutdown	Required (programmable)	One trip
Swinger Shutdown Disable	Allowed	Enabled
Fire Alarm Verification	Required Option	Disabled



For the following please see INS141 Master User Manual

Arming and Disarming the alarm system please refer to the UL-CUL notes on Page 7 & 8

System Programming Menus. Please refer to UL-CUL Notes on Page 16

Glossary Please see page 25

Notes



Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden, Lancashire BB4 4PW, England.

© Texecom Limited 2007

INS195
