

Quick Reference Guide

Premier Elite 24/48/88/168 & 640

INS222-7



Texecom
Designed to Perform

Quick Reference Guide

Default Engineer Code (00)	1234
Default User Code (01)	5678

0	Log Off Engineer
Yes	Press Yes to log out of the Engineer Programming menu

1	Zone Setup					
Yes	Zone Types	Use 1 - 8 to enter zone number, No to edit, 0 - 9 or ↕ to select a zone type, Yes to accept				
		0 Not Used	↕	Medical	↕	Conf PA audible
		1 Entry/Exit 1	↕	24Hr Gas	↕	Conf PA silent
		2 Entry/Exit 2	↕	Auxiliary		
		3 Guard	↕	Tamper		
		4 Guard Access	↕	Exit Terminator		
		5 24Hr Audible	↕	Moment Key		
		6 24Hr Silent	↕	Latching Key		
		7 PA Audible	↕	Security		
		8 PA Silent	↕	Omit Key		
	9 Fire	↕	Custom			
Yes	Zone Attributes 1	Press No to edit, 1 - 8 to select an attribute, Yes to accept				
		1 O = Omittable	5 3 = Part 3 Omit			
		2 F = Force Omit	6 A = Access			
		3 1 = Part 1 Omit	7 E = Entry/Exit 2			
		4 2 = Part 2 Omit	8 G = Guard			
Yes	Zone Attributes 2	Press No to edit, 1 - 8 to select an attribute, Yes to accept				
		1 D = Double Knock	1 R = Reset			
		2 B = Beam Pair	6 A = Auto Re-arm			
		3 S = Soak Test	7 Q = Quick Resp.			
		4 F = Activity	8 E = Eng. Alarm			
Yes	Key Attributes (only applicable for keyswitch zone types)	Press No to edit, 1 - 5 to select an attribute, Yes to accept				
		1 I = Instant Arming	5 S = Silent Arming			
		2 P = Part Arming	6 T = Time Arm Disable			
		3 F = Full Disable	7 K = Key Tube (Monitor Only)			
		4 D = Disarm Only				
Yes	Custom Attributes (only applicable for custom zone types)	Press No to edit, 1 - 5 to select an attribute, Yes to accept				
		1 B = Bell/Strobe	4 C = Enable Coms			
		2 I =Internals	5 W = Warning			
		3 M = Monitor 24Hr				
Yes	Zone Areas 24/48/88/168	Press No to edit, 1 - 8 to select an area, (0 = all areas, Area = areas A – H and I –P), Yes to accept.				
Yes	Zone Areas 640	Press No to edit, Chime or Part to select an area group (1-4), use Area to select areas A – H and I –P), Yes to accept.				
Yes	Zone Text	Press No to edit, 0 - 9 to select characters (press the required key the appropriate number of times), Yes to accept				
		1 . , ? ! 1 @ " -	6 M N O 6	↕	Move Cursor	
		2 A B C 2	7 P Q R S 7	Chime	Copy Text to Memory	
		3 D E F 3	8 T U V 8	Part	Paste Text from Memory	
		4 G H I 4	9 W X Y Z 9	No	Upper, Lower Case, Predictive Text and Numerical	
		5 J K L 5	0 0 _			
Yes	Zone Chime	Press No to alter chime tone, Yes to accept				
		No Silent	No Chime 1	No Chime 2	No Chime 3	
Yes	Zone Test	Press No to alter Test option, Yes to accept				
Yes	Zone Wiring	Press No to alter wiring type, Yes to accept				
		0 Normally Open	3 Triple EOL	6 2K2/4K7/(6K8)		
		1 Normally Cosed	4 1K/1K/(3K)	7 4K7/4K7		
		2 Double Pole EOL	5 4K7/6K8(12K)	8 WD Monitor		

Area Programming	
2 _{abc}	
0 _{abc}	Timers Use to select an area, (Yes) to select a timer, (0_{abc}) - (9_{abc}) to enter a value, (Yes) to accept 1: Exit Dly for Areas: 6: Bell Duration for Areas: 2: Entry Dly 1 for Areas: 7: Coms Dly for Areas: 3: Entry Dly 2 for Areas: 8: Part Bell Dly for Areas: 4: 2 nd Entry Dly for Areas: 9: Conf PA Timer for Areas 5: Bell Dly for Areas:
1 _{abc}	Arming Modes Use to select an area, (1_{abc}) - (5_{abc}) to select arming an mode, (Yes) to accept 1 _{abc} Entry/Exit 4 _{abc} Instant 2 _{abc} Exit Term. 5 _{abc} Deferred 3 _{abc} Timed Exit
2 _{abc}	Area Arm Suites 24/48/88/168 Use to select a suite, (No) no to edit, (1_{abc}) - (8_{abc}) to select an area, (0_{abc}) = all areas, (Area) = areas A – H and I – P), (Yes) to accept
2 _{abc}	Area Arm Suites 640 Use to select a suite, (No) no to edit, (Chime) - (Part) to select an area group (1-4), use (Area) to select areas A – H and I – P), (Yes) to accept.
3 _{abc}	Area Suite Text Use (1 _{abc}) - (8 _{abc}) to select a suite, (No) to edit, (0_{abc}) - (9_{abc}) to select characters (press the required key the appropriate number of times), (Yes) to accept 1 _{abc} . , ? ! 1 @ " - 6 _{abc} M N O 6 Move Cursor 2 _{abc} A B C 2 7 _{abc} P Q R S 7 Copy Text to Memory 3 _{abc} D E F 3 8 _{abc} T U V 8 Paste Text from Memory 4 _{abc} G H I 4 9 _{abc} W X Y Z 9 Upper, Lower Case, Predictive Text & Numerical 5 _{abc} J K L 5 0 _{abc} 0 _
4 _{abc}	Suite Arm Mode Use to select an area, (1_{abc}) - (5_{abc}) to select an arming mode, (Yes) to accept 1 _{abc} Entry/Exit 4 _{abc} Instant 2 _{abc} Exit Term. 5 _{abc} Deferred 3 _{abc} Timed Exit
5 _{abc}	Area Options 24/48/88/168 Use to select an option, (No) to edit, (1_{abc}) - (8_{abc}) to select an area, (0_{abc}) = all areas, (Area) = areas A – H and I – P), (Yes) to accept 640 Use to select an option, (No) no to edit, (Chime) - (Part) to select an area group (1-4), use (Area) to select areas A – H and I – P), (Yes) to accept. 01: Auto Part Arm 21: Unarm Fire Coms 02: Part Arm Instant 22: Unarm Tamper Coms 03: Part Arm Silent 23: Auto Arm Areas 04: Remote Arm 24: Area A Foyer 05: Remote Disarm 25: Log Part Omits 06: Panel Tamper 26: Multi Knock Area 07: Bell Tamper 27: UDL Keypad 08: Auxiliary Tamper 28: Auto Chime (C2A) 09: Panel Speaker 29: Confirm in Entry 10: Bell & Strobe op 30: Conf. After Entry 11: Alarm Eng Reset 31: Enable Part Arms 12: Confirmation Reset 32: Bell Squawk 13: Tamper Eng Reset 33: Fob After Entry 14: Anti-code Reset 34: Armed = Coms 15: Phone Line Fault 35: 2-Wire Smoke 16: Arm With L/Fault 36: Fault Eng Reset 17: AC Mains Fail 37: L/Fault Eng Rst 18: Arm With AC Fail 38: AC Fail Eng Rst 19: Area Arm Coms 39: Anti-Masking When Armed 20: Part Arm Coms
6 _{abc}	Time Arm Areas Use to select an area, (Yes) to toggle between the arm and disarm timer, (1_{abc}) - (8_{abc}) to select timers, (Yes) to
7 _{abc}	Area Text Use to select an area, (No) to edit, (0_{abc}) - (9_{abc}) to select characters (press the required key the appropriate number of times), (Yes) to accept

3 _{Set}	Global Options		
0 _{...}	System Timers	Use ↻ to select a timer, 0 _{...} - 9 _{...} to enter a value, Yes to accept 00: Exit Settle Time 12: Pulse Period 2 24: Zone Response 01: Global Bell Dly. 13: Pulse Period 3 25: Keypad PA Delay 02: Global Bell Dur. 14: Line Fault Delay 26: Confirmation Dly 03: Double Knock Dly 15: AC Off Delay 27: Warning Delay 04: Beam Pair Time 16: Batt Test Period 28: Keypad Lock Time 05: Activity Delay 17: Batt Test Time 29: Eng. Log Off Dly 06: Abort Delay 18: Soak Test Time 30: Fire Bell Delay 07: Courtesy Time 19: Service Interval 31: Forced Entry Dly 08: Defer Arming By 20: Test Call Every 32: Supervision Time 09: Auto Arm Delay 21: Min Random Time 33: Poll IP Every 10: Menu Time Out 22: Max Random Time 11: Pulse Period 1 23: Door Strike Time	
1 _{...}	System Config.	Use ↻ to select an option, No to change the option, Yes to accept 00: (No Bell/Bell on) Arm Fail 19: (Auto/Manual) Area Select 38: (Enable/Disable) RF FOB PA 01: Bell is an (SAB/SCB) 20: (Predictive/Normal) Text 39: Mask=(Fault/Alarm) 02: Clock is (12Hr/24Hr) 21: Zone Short=(Active/Tamper) 40: FOB PA (Audible/Silent) 03: (Manual/Auto) BST/GMT 22: R/R=(Reset Only/Silence/RST) 41: PSU Batt (Monitor/No Flts) 04: (Hide/View) Armed Areas 23: User Codes (Pulse/Latch) 42: Exp Loss Tamp (On/Off) 05: (Area/Global) Bell Time 24: Test Call = (Timed/Timed) 43: Soak Test Warn (On/Off) 06: 24Hr Omit (Global/Local) 25: Batt Test = (Timed/Disarm) 44: Fob Batt Warn (On/Off) 07: (Leave/Remove) Omits 26: Bell = (1 st Alarm/2 nd Alarm) 45: Entry Stray (On/Off) 08: Away (Override/Enforce) 27: SNDR = (1 st Alarm/2 nd Alarm) 46: BS Entry Stray (On/Off) 09: NVM is (Unlocked/Locked) 28: Conf. = (Instant/Delayed) 47: Tamper = Confirmed (No Confirm/Confirm) 10: Engineer (Only/+ User) 29: Abort = (Eng. Reset/User Reset) 48: Radio 2 Step Arm (2 Steps/1 Step) 11: Chime (Audible/Visible) 30: (Auto/Manual) AV Outputs 49: Radio Step1 (Zone/RKP) 12: Omit Tamper (NO/YES) 31: Clock = (50Hz/Crystal) 50: Radio Step 2 (Fob/Zone) 13: (Offline/Online) Printing 32: (40/80) Column Printer 51: Conf Hold Up (Enabled/None) 14: Activity Fault (View/Hide) 33: (Enable/Disable) Text 52: Max Log msgs (3/Off) 15: (Hide/View) Exit Errors 34: EN50131 (Disabled/Enabled) 53: Code entry timed (On/Off) 16: (No/Enable) Code Tamper 35: (2 nd Zone /1 st Zone) = Confirm 54: PD6662:2010 (On/Off) 17: Code Tamp (Alarms/Locks) 36: (Global/Local) Keypads 18: Areas (1-8/A-H) & I-P 37: Panel Grade (2/3)	
2 _{...}	System Options	Use ↻ to select an Option, 0 _{...} - 9 _{...} to enter a value, Yes to accept 0: Advisory Volume 4: Multiple Knocks 8: Language 1: Chime Volume 5: Adjust Clock 9: Country Code & Defaults 2: Number Of Re-Arms 6: Quick Count 3: Anti-code Resets 7: Modem Level	
3 _{...}	Monitor Hardware	Press No to edit, ↻ to select an option, No to change the option, Yes to accept 1 _{...} P = Line Fault 4 _{...} B = Bell Tamper 7 _{...} B = Battery Faults 2 _{...} A = AC Power Failure 5 _{...} A = Aux Tamper 3 _{...} F = Aux Fuse Blown 6 _{...} L = Panel Lid Tamper	
4 _{...}	Control Timers	Use ↻ to select an area, 0 _{...} - 9 _{...} to enter the 1 st On time, Yes to accept Use 1 _{...} - 7 _{...} to select the 1 st On time days of operation, Yes to accept Use 0 _{...} - 9 _{...} to enter the 1 st Off time, Yes to accept Use 1 _{...} - 7 _{...} to select the 1 st Off time days of operation, Yes to accept	
5 _{...}	System Text	Use ↻ to select a message, 0 _{...} - 9 _{...} to select characters (press the required key the appropriate number of times), Yes to accept	
6 _{...}	Part Arm Text	Use ↻ to select a Part Arm, No to edit the Part Arm text, 0 _{...} - 9 _{...} to select characters (press the required key the appropriate number of times), Yes to accept	
7 _{...}	Holiday Dates	Use ↻ to select a holiday date, 0 _{...} - 9 _{...} to enter the required date (D D M M Y Y), Yes to accept	
8 _{...}	Speaker Tones	Use ↻ to select a tone type, No to turn the tone on/off, Yes to accept	
9 _{...}	PC Output Text	Use ↻ to select an Output, No to edit, 0 _{...} - 9 _{...} to select characters (press the required key the appropriate number of times), Yes to accept	
↻	Custom O/P Text	Use ↻ to select an Output, No to edit, 0 _{...} - 9 _{...} to select characters (press the required key the appropriate number of times), Yes to accept	

4 th Keypad Setup		
Yes	Areas 24/48/88/168	Use (1) - (8 _{ms}) to select keypad, (0 _{ms}) to select network, (No) to edit, (1) - (8 _{ms}) to select an area, (0 _{ms}) = all areas, (Area) = areas A – H and I – P), (Yes) to accept
Yes	Areas 640	Use (1) - (8 _{ms}) to select keypad, (0 _{ms}) to select network, (No) to edit, (Chime) - (Part) to select an area group (1-4), use (Area) to select areas A – H and I – P), (Yes) to accept.
Yes	Zone Mapping	Press (No) to edit, (1) - (8 _{ms}) to enter zone number, (Yes) to accept, Repeat for 2 nd zone
Yes	Options	Press (No) to edit, (↩) to select an option, (No) to change the option, (Yes) to accept
		(1) P = PA Enabled (5 _{ms}) A = PA is Audible
		(2 _{ms}) F = Fire Enabled (6 _{ms}) D = PA is Delayed
		(3 _{ms}) F = Medical Enabled (7 _{ms}) Q = Quick Arm On
		(4 _{ms}) T = Tamper Enabled (8 _{ms}) O = Info.LED>Output
Yes	Volume	Press (No) to edit, (0 _{ms}) - (8 _{ms}) to enter a value, (Yes) to accept
Yes	Sounder Options	Press (No) to edit, (↩) to select an option, (No) to change the option, (Yes) to accept
		(1) F = Fire Tones Enabled (5 _{ms}) E = Entry Tones Enabled
		(2 _{ms}) A = Alarm Tones Enabled (6 _{ms}) X = Exit Tones Enabled
		(3 _{ms}) F = Fault Tones Enabled (7 _{ms}) C = Chime Tones Enabled
		(4 _{ms}) S = Service Tones Enabled (8 _{ms}) K = Use Keypad Areas

5 th Expander Setup		
Yes	Areas 24/48/88/168	Use (1) - (8 _{ms}) to select expander, (0 _{ms}) to select network, (No) to edit, (1) - (8 _{ms}) to select an area, (0 _{ms}) = all areas, (Area) = areas A – H and I – P), (Yes) to accept
Yes	Areas 640	Use (1) - (8 _{ms}) to select expander, (0 _{ms}) to select network, (No) to edit, (Chime) - (Part) to select an area group (1-4), use (Area) to select areas A – H and I – P), (Yes) to accept.
Yes	Text	Press (No) to edit text, (↩) - (9 _{ms}) to select characters (press the required key the appropriate number of times), (Yes) to accept
		(1) . , ? ! 1 @ " - (6 _{ms}) M N O 6 (↩) Move Cursor
		(2 _{ms}) A B C 2 (7 _{ms}) P Q R S 7 (Chime) Copy Text to Memory
		(3 _{ms}) D E F 3 (8 _{ms}) T U V 8 (Part) Paste Text from Memory
		(4 _{ms}) G H I 4 (9 _{ms}) W X Y Z 9 (No) Upper, Lower Case, Predictive Text & Numerical
Yes	Auxiliary Input	(5 _{ms}) J K L 5 (0 _{ms}) 0 _
		Press (No) to edit, (0 _{ms}) - (7 _{ms}) to select an input type, (Yes) to accept
		(0 _{ms}) Not Used (6 _{ms}) Silence Sounders
		(1) Auxiliary Tamper (7 _{ms}) Global Omit Key
		(2 _{ms}) Bell Tamper (8 _{ms}) Local Omit Key
Yes	Volume	(3 _{ms}) Remote Reset (9 _{ms}) PSU Monitor
		(4 _{ms}) Line Fault +ve (↩) Defer Auto Arming
		(5 _{ms}) Line Fault -ve
		Press (No) to edit, (0 _{ms}) - (8 _{ms}) to enter a value, (Yes) to accept
		Press (No) to edit, (↩) to select an option, (No) to change the option, (Yes) to accept
Yes	Sounder Options	(1) F = Fire Tones Enabled (5 _{ms}) E = Entry Tones Enabled
		(2 _{ms}) A = Alarm Tones Enabled (6 _{ms}) X = Exit Tones Enabled
		(3 _{ms}) F = Fault Tones Enabled (7 _{ms}) C = Chime Tones Enabled
		(4 _{ms}) S = Service Tones Enabled

6 th System Outputs		
(0 _{ms}) (1) (2 _{ms}) (3 _{ms})	Panel Outputs Digi Outputs Com? Channels RedCARE Pins	Use (1) - (8 _{ms}) to select an output, (No) to edit, (1) - (7 _{ms}) to enter an output group, (0 _{ms}) - (9 _{ms}) to enter output type, (Yes) to accept
(4 _{ms})	Keypad Outputs	Use (1) - (8 _{ms}) to select device, (0 _{ms}) to select network, (↩) to select an output, (No) to edit, (1) - (7 _{ms}) to enter an output group, (0 _{ms}) - (9 _{ms}) to enter output type, (Yes) to accept
(5 _{ms})	Expander Outputs	
(6 _{ms})	Custom Outputs	Use (0 _{ms}) to select output, (1) - (8 _{ms}) to select a switch, (No) to edit, (1) - (7 _{ms}) to enter an output group, (0 _{ms}) - (9 _{ms}) to enter output type, (Yes) to accept
(7 _{ms})	X-10 Outputs	Use (1) - (8 _{ms}) to select an output, (No) to edit, (1) - (7 _{ms}) to enter an output group, (0 _{ms}) - (9 _{ms}) to enter output type, (0 _{ms}) - (9 _{ms}) to enter House/device Number, (Yes) to accept

Key	Output Group	Outputs Types																																																																																																																																																								
0	Not Used:	Press Yes to accept																																																																																																																																																								
1	System:	Use 0 - 9 to enter an output type or use to search, Yes to accept <table><tr><td>00:</td><td>Phone Line Fault</td><td>18:</td><td>UDL Lockout</td><td>35:</td><td>Custom 4 Stage A</td></tr><tr><td>01:</td><td>Mains Power Off</td><td>19:</td><td>UDL Call Active</td><td>36:</td><td>Custom 4 Stage B</td></tr><tr><td>02:</td><td>Aux Fuse Fault</td><td>20:</td><td>UDL Enabled</td><td>37:</td><td>Custom 4 Stage AB</td></tr><tr><td>03:</td><td>Auxiliary Tamper</td><td>21:</td><td>Confirmed Alarm</td><td>38:</td><td>Com 1 Fault</td></tr><tr><td>04:</td><td>Bell Tamper</td><td>22:</td><td>Custom 1 Stage A</td><td>39:</td><td>Com 2 Fault</td></tr><tr><td>05:</td><td>Panel Lid Tamper</td><td>23:</td><td>Custom 1 Stage B</td><td>40:</td><td>Com 1 No Signal</td></tr><tr><td>06:</td><td>Engineer Working</td><td>24:</td><td>Custom 1 Stage AB</td><td>41:</td><td>Com 2 No Signal</td></tr><tr><td>07:</td><td>Confirm Devices</td><td>25:</td><td>Custom 2 Stage A</td><td>42:</td><td>Coms Fault</td></tr><tr><td>08:</td><td>Service Required</td><td>26:</td><td>Custom 2 Stage B</td><td>43:</td><td>Radio Jamming</td></tr><tr><td>09:</td><td>Bell Fuse Blown</td><td>27:</td><td>Custom 2 Stage AB</td><td>46:</td><td>Radio RX Tamper</td></tr><tr><td>10:</td><td>Battery Fault</td><td>28:</td><td>Radio-Pad Failed</td><td>47:</td><td>Detector Test</td></tr><tr><td>11:</td><td>Battery Test On</td><td>30:</td><td>No Radio Signal</td><td>48:</td><td>ATS Remote Test</td></tr><tr><td>12:</td><td>Courtesy Light</td><td>31:</td><td>Radio-Pad Lost</td><td>49:</td><td>Dual Path Fault</td></tr><tr><td>13:</td><td>System Open</td><td>30:</td><td>No Radio Signal</td><td>50:</td><td>CIE Fault</td></tr><tr><td>14:</td><td>Fully Arm</td><td>31:</td><td>Radio-Pad Lost</td><td>51:</td><td>PSU Fuse Blown</td></tr><tr><td>15:</td><td>Digi Failed</td><td>32:</td><td>Custom 3 Stage A</td><td>52:</td><td>PSU Battery Flt</td></tr><tr><td>16:</td><td>Digi Successful</td><td>33:</td><td>Custom 3 Stage B</td><td>53:</td><td>WD Test Active</td></tr><tr><td>17:</td><td>Digi Active</td><td>34:</td><td>Custom 3 Stage AB</td><td></td><td></td></tr></table>	00:	Phone Line Fault	18:	UDL Lockout	35:	Custom 4 Stage A	01:	Mains Power Off	19:	UDL Call Active	36:	Custom 4 Stage B	02:	Aux Fuse Fault	20:	UDL Enabled	37:	Custom 4 Stage AB	03:	Auxiliary Tamper	21:	Confirmed Alarm	38:	Com 1 Fault	04:	Bell Tamper	22:	Custom 1 Stage A	39:	Com 2 Fault	05:	Panel Lid Tamper	23:	Custom 1 Stage B	40:	Com 1 No Signal	06:	Engineer Working	24:	Custom 1 Stage AB	41:	Com 2 No Signal	07:	Confirm Devices	25:	Custom 2 Stage A	42:	Coms Fault	08:	Service Required	26:	Custom 2 Stage B	43:	Radio Jamming	09:	Bell Fuse Blown	27:	Custom 2 Stage AB	46:	Radio RX Tamper	10:	Battery Fault	28:	Radio-Pad Failed	47:	Detector Test	11:	Battery Test On	30:	No Radio Signal	48:	ATS Remote Test	12:	Courtesy Light	31:	Radio-Pad Lost	49:	Dual Path Fault	13:	System Open	30:	No Radio Signal	50:	CIE Fault	14:	Fully Arm	31:	Radio-Pad Lost	51:	PSU Fuse Blown	15:	Digi Failed	32:	Custom 3 Stage A	52:	PSU Battery Flt	16:	Digi Successful	33:	Custom 3 Stage B	53:	WD Test Active	17:	Digi Active	34:	Custom 3 Stage AB																																														
00:	Phone Line Fault	18:	UDL Lockout	35:	Custom 4 Stage A																																																																																																																																																					
01:	Mains Power Off	19:	UDL Call Active	36:	Custom 4 Stage B																																																																																																																																																					
02:	Aux Fuse Fault	20:	UDL Enabled	37:	Custom 4 Stage AB																																																																																																																																																					
03:	Auxiliary Tamper	21:	Confirmed Alarm	38:	Com 1 Fault																																																																																																																																																					
04:	Bell Tamper	22:	Custom 1 Stage A	39:	Com 2 Fault																																																																																																																																																					
05:	Panel Lid Tamper	23:	Custom 1 Stage B	40:	Com 1 No Signal																																																																																																																																																					
06:	Engineer Working	24:	Custom 1 Stage AB	41:	Com 2 No Signal																																																																																																																																																					
07:	Confirm Devices	25:	Custom 2 Stage A	42:	Coms Fault																																																																																																																																																					
08:	Service Required	26:	Custom 2 Stage B	43:	Radio Jamming																																																																																																																																																					
09:	Bell Fuse Blown	27:	Custom 2 Stage AB	46:	Radio RX Tamper																																																																																																																																																					
10:	Battery Fault	28:	Radio-Pad Failed	47:	Detector Test																																																																																																																																																					
11:	Battery Test On	30:	No Radio Signal	48:	ATS Remote Test																																																																																																																																																					
12:	Courtesy Light	31:	Radio-Pad Lost	49:	Dual Path Fault																																																																																																																																																					
13:	System Open	30:	No Radio Signal	50:	CIE Fault																																																																																																																																																					
14:	Fully Arm	31:	Radio-Pad Lost	51:	PSU Fuse Blown																																																																																																																																																					
15:	Digi Failed	32:	Custom 3 Stage A	52:	PSU Battery Flt																																																																																																																																																					
16:	Digi Successful	33:	Custom 3 Stage B	53:	WD Test Active																																																																																																																																																					
17:	Digi Active	34:	Custom 3 Stage AB																																																																																																																																																							
2	Area:	24/48/88/168 Use 0 - 9 to enter an output type or use to search, 1 - 8 to select an area, (0 = all areas, Area = areas A – H and I – P), Yes to accept 640 Use 0 - 9 to enter an output type or use to search, to select an area, Yes to accept type, Chime - Part to select an area group (1-4), use Area to select areas A – H and I – P), Yes to accept. <table><tr><td>00:</td><td>Intruder Alarm</td><td>19:</td><td>Exit Mode</td><td>38:</td><td>Chime Mimic</td><td>57:</td><td>Zones Locked Out</td></tr><tr><td>01:</td><td>Guard 1 Alarm</td><td>20:</td><td>Entry/Exit Mode</td><td>39:</td><td>Chime Enabled</td><td>58:</td><td>All Armed</td></tr><tr><td>02:</td><td>Guard 2 Alarm</td><td>21:</td><td>Armed</td><td>40:</td><td>DK First Knock</td><td>59:</td><td>Auto Arm Disable</td></tr><tr><td>03:</td><td>Entry Alarm</td><td>22:</td><td>Full Arm</td><td>41:</td><td>BP First Knock</td><td>60:</td><td>Armed / Alarm</td></tr><tr><td>04:</td><td>Confirmed Alarm</td><td>23:</td><td>Part Armed</td><td>42:</td><td>On Test</td><td>61:</td><td>Intruder Alarm</td></tr><tr><td>05:</td><td>24Hr Audible</td><td>24:</td><td>Part Arming</td><td>43:</td><td>Test Fail</td><td>62:</td><td>Speaker Mimic</td></tr><tr><td>06:</td><td>24Hr Silent</td><td>25:</td><td>Force Arm</td><td>44:</td><td>Internal Alarm</td><td>63:</td><td>Full Arm/Exit</td></tr><tr><td>07:</td><td>24Hr Gas</td><td>26:</td><td>Force Arming</td><td>45:</td><td>Auto Arming</td><td>64:</td><td>Detector Fault</td></tr><tr><td>08:</td><td>PA Audible</td><td>27:</td><td>Arm Fail</td><td>46:</td><td>Time Arming</td><td>65:</td><td>Detector Mask</td></tr><tr><td>09:</td><td>PA Silent</td><td>28:</td><td>Bell SAB</td><td>47:</td><td>1st Code Entered</td><td>66:</td><td>Fault Present</td></tr><tr><td>10:</td><td>Duress</td><td>29:</td><td>Bell SCB</td><td>48:</td><td>2nd Code Entered</td><td>67:</td><td>LED Control</td></tr><tr><td>11:</td><td>Fire Alarm</td><td>30:</td><td>Strobe</td><td>49:</td><td>Area Secured</td><td>68:</td><td>Full Armed Entry</td></tr><tr><td>12:</td><td>Medical</td><td>31:</td><td>Switch 12 Volts</td><td>50:</td><td>Part Armed 1</td><td>69:</td><td>Fire Sounder</td></tr><tr><td>13:</td><td>Auxiliary Alarm</td><td>32:</td><td>Detector Reset</td><td>51:</td><td>Part Armed 2</td><td>70:</td><td>Confirmed PA</td></tr><tr><td>14:</td><td>Tamper Alarm</td><td>33:</td><td>Walk Test Active</td><td>52:</td><td>Part Armed 3</td><td>71:</td><td>Confirmed Intruder</td></tr><tr><td>15:</td><td>Alarm Abort</td><td>34:</td><td>Zones Omitted</td><td>53:</td><td>Custom Alarm</td><td></td><td></td></tr><tr><td>16:</td><td>Ready</td><td>35:</td><td>24Hr Zones Omit</td><td>54:</td><td>Zone Warning</td><td></td><td></td></tr><tr><td>17:</td><td>Entry Mode</td><td>36:</td><td>Reset Required</td><td>55:</td><td>Arm Fail Warning</td><td></td><td></td></tr><tr><td>18:</td><td>2nd Entry Mode</td><td>37:</td><td>Door Strike</td><td>56:</td><td>Forced Entry</td><td></td><td></td></tr></table>	00:	Intruder Alarm	19:	Exit Mode	38:	Chime Mimic	57:	Zones Locked Out	01:	Guard 1 Alarm	20:	Entry/Exit Mode	39:	Chime Enabled	58:	All Armed	02:	Guard 2 Alarm	21:	Armed	40:	DK First Knock	59:	Auto Arm Disable	03:	Entry Alarm	22:	Full Arm	41:	BP First Knock	60:	Armed / Alarm	04:	Confirmed Alarm	23:	Part Armed	42:	On Test	61:	Intruder Alarm	05:	24Hr Audible	24:	Part Arming	43:	Test Fail	62:	Speaker Mimic	06:	24Hr Silent	25:	Force Arm	44:	Internal Alarm	63:	Full Arm/Exit	07:	24Hr Gas	26:	Force Arming	45:	Auto Arming	64:	Detector Fault	08:	PA Audible	27:	Arm Fail	46:	Time Arming	65:	Detector Mask	09:	PA Silent	28:	Bell SAB	47:	1 st Code Entered	66:	Fault Present	10:	Duress	29:	Bell SCB	48:	2 nd Code Entered	67:	LED Control	11:	Fire Alarm	30:	Strobe	49:	Area Secured	68:	Full Armed Entry	12:	Medical	31:	Switch 12 Volts	50:	Part Armed 1	69:	Fire Sounder	13:	Auxiliary Alarm	32:	Detector Reset	51:	Part Armed 2	70:	Confirmed PA	14:	Tamper Alarm	33:	Walk Test Active	52:	Part Armed 3	71:	Confirmed Intruder	15:	Alarm Abort	34:	Zones Omitted	53:	Custom Alarm			16:	Ready	35:	24Hr Zones Omit	54:	Zone Warning			17:	Entry Mode	36:	Reset Required	55:	Arm Fail Warning			18:	2 nd Entry Mode	37:	Door Strike	56:	Forced Entry		
00:	Intruder Alarm	19:	Exit Mode	38:	Chime Mimic	57:	Zones Locked Out																																																																																																																																																			
01:	Guard 1 Alarm	20:	Entry/Exit Mode	39:	Chime Enabled	58:	All Armed																																																																																																																																																			
02:	Guard 2 Alarm	21:	Armed	40:	DK First Knock	59:	Auto Arm Disable																																																																																																																																																			
03:	Entry Alarm	22:	Full Arm	41:	BP First Knock	60:	Armed / Alarm																																																																																																																																																			
04:	Confirmed Alarm	23:	Part Armed	42:	On Test	61:	Intruder Alarm																																																																																																																																																			
05:	24Hr Audible	24:	Part Arming	43:	Test Fail	62:	Speaker Mimic																																																																																																																																																			
06:	24Hr Silent	25:	Force Arm	44:	Internal Alarm	63:	Full Arm/Exit																																																																																																																																																			
07:	24Hr Gas	26:	Force Arming	45:	Auto Arming	64:	Detector Fault																																																																																																																																																			
08:	PA Audible	27:	Arm Fail	46:	Time Arming	65:	Detector Mask																																																																																																																																																			
09:	PA Silent	28:	Bell SAB	47:	1 st Code Entered	66:	Fault Present																																																																																																																																																			
10:	Duress	29:	Bell SCB	48:	2 nd Code Entered	67:	LED Control																																																																																																																																																			
11:	Fire Alarm	30:	Strobe	49:	Area Secured	68:	Full Armed Entry																																																																																																																																																			
12:	Medical	31:	Switch 12 Volts	50:	Part Armed 1	69:	Fire Sounder																																																																																																																																																			
13:	Auxiliary Alarm	32:	Detector Reset	51:	Part Armed 2	70:	Confirmed PA																																																																																																																																																			
14:	Tamper Alarm	33:	Walk Test Active	52:	Part Armed 3	71:	Confirmed Intruder																																																																																																																																																			
15:	Alarm Abort	34:	Zones Omitted	53:	Custom Alarm																																																																																																																																																					
16:	Ready	35:	24Hr Zones Omit	54:	Zone Warning																																																																																																																																																					
17:	Entry Mode	36:	Reset Required	55:	Arm Fail Warning																																																																																																																																																					
18:	2 nd Entry Mode	37:	Door Strike	56:	Forced Entry																																																																																																																																																					
3	Zone:	Use 1 - 8 to enter a zone number or use to search, 0 - 5 to select a zone output type, Yes to accept <table><tr><td>1</td><td>Mimic</td><td>3</td><td>Alarm</td><td>5</td><td>MimicLatch</td></tr><tr><td>2</td><td>MimicArm</td><td>4</td><td>Tamper</td><td>6</td><td>Omitted</td></tr></table>	1	Mimic	3	Alarm	5	MimicLatch	2	MimicArm	4	Tamper	6	Omitted																																																																																																																																												
1	Mimic	3	Alarm	5	MimicLatch																																																																																																																																																					
2	MimicArm	4	Tamper	6	Omitted																																																																																																																																																					
4	User:	Use 1 - 8 to select a User code or use to search, Yes to accept																																																																																																																																																								
5	Control Timer:	Use 1 - 8 to select a Control Timer, Yes to accept																																																																																																																																																								
6	PC Control:	Use 1 - 8 to select a PC Control, Yes to accept																																																																																																																																																								
7	Door Control:	Use 1 - 8 to select a Door Control, Yes to accept																																																																																																																																																								
8	X-10:	Use 1 - 8 to select a an X-10 Output, Yes to accept																																																																																																																																																								

Key	Attributes	Attribute Types	
Yes	Attributes	Press Yes to edit, 1 - 8 to select attributes, Yes to accept	
		1 U = User Test	5 2 = Use Pulse Timer 2
		2 I = Inverted	6 3 = Use Pulse Timer 3
		3 L = Latching	7 C = Custom Output 1, Stage A
		4 1 = Use Pulse Timer 1	8 R = Random

7 pgs		UDL/Digi Options		
0	Reset Digi	Press Yes to reset communicator		
1	Start Test call	Press Yes to send test call to the ARC, 1 - 3 to initiate a call to the remote UDL computer (using Call Back numbers 1, 2 or 3)		
2	Msn Pre Dial Number	Press No to edit, enter call waiting number, Yes to accept		
		0 - 9 = Numbers 0 to 9	Chime Insert a '#'	
		No then Yes = Clear Screen	Part, (3 Second pause)	
		Omit Insert a '*'	Area W (10 Second pause)	
3	Program Digi	Use to select ARC sets 1 - 3, No to edit		
	Protocol	Press No to edit, 0 - 4 to select protocol, Yes to accept		
		0 Disabled	2 Contact ID	4 EasyCom Pager
		1 Fast Format	3 SIA Level II	5 SMS
	Primary Number	Press No to edit, 0 - 9 to enter telephone number, Yes to accept		
	Secondary Number	Press No to edit, 0 - 9 to enter number, Yes to accept		
	Account Number	Press No to edit, 0 - 9 to enter number, Yes to accept		
	Dialling Attempts	Press No to edit, 0 - 9 to enter number, Yes to accept		
	Reporting Channels	Press No to edit, 1 - 8 to select channels, Yes to accept (only available for Fast Format)		
	Restoring Channels	Press No to edit, 1 - 8 to select channels, Yes to accept (only available for Fast Format)		
	Open/Close Channels	Press No to edit, 1 - 8 to select channels, Yes to accept (only available for Fast Format)		
	Reporting Areas 24/48/88/168	Press No to edit, 1 - 8 to select an area, (0 = all areas, Area = areas A – H and I –P), Yes to accept (only available for Contact ID, SIA Level II, EasyCom Pager and SMS Messaging)		
	Reporting Areas 640	Press No to edit, Chime - Part to select an area group (1-4), use Area to select areas A – H and I –P), Yes to accept. (only available for Contact ID, SIA Level II, EasyCom Pager and SMS Messaging)		
	Reporting Options	Press No to edit, 1 - 8 to select option, Yes to accept (only available for Contact ID, SIA Level II, EasyCom Pager and SMS Messaging)		
		1 P = Priority Alarms	5 M = Maintenance	
		2 A = Normal Alarms	6 T = Tamper Alarms	
		3 C = Open/Close	7 C = Test Calls	
	4 O = Omits & Reinstates	8 R = Restores		
Config.	Press No to edit, 1 - 8 to select option, Yes to accept (only available for Contact ID, SIA Level II, EasyCom Pager & SMS Messaging)			
	1 A = Use Area Acc	5 A = Activate AV		
	2 S = Use SIA I	6 F = Use GSM First		
	3 R = Enable RadioPad	7 I = Connect Via IP		
	4 G = Enable GSM			
4	Digi Options	Press No to edit, to select an option, No to change the option, Yes to accept		
		1 E = Digi is Enabled	4 B = Blind Dialling	
		2 P = Pulse Dialling	5 W = Call Waiting On	
		3 3 = Pulse after 3	6 A = Dial All Numbers	
5	UDL Options	Press No to edit Call Back number 1, enter the number, Yes to accept		
		0 - 9 = Numbers 0 to 9	Chime Insert a '#'	
		No then Yes = Clear Screen	Part, (3 Second pause)	
		Omit Insert a '*'	Area W (10 Second pause)	
	Call Back Number 2	Press No to edit Call Back number 2, enter the number, Yes to accept		
Call Back Number 3	Press No to edit Call Back number 3, enter the number, Yes to accept			

UDL/Digi Options (continued)		
	UDL Password	Press No to edit, 0 - 9 to enter number, Yes to accept
	UDL options	Press No to edit, ↕ to select an option, No to change option, Yes to accept
	1 A = DL Attended	4 L = Armed DL Limited
	2 M = Manual Call-back	5 A = Any Area Armed
	3 D = Call Defeat On	6 K = Online RKP = Off)
	Rings Required	Press No to edit, 0 - 9 to enter number of rings, Yes to accept
	UDL Dial Attempt	Press No to edit, 0 - 9 to enter number of dialling attempts, Yes to accept
6	Area Accounts	Use ↕ to select an area, No to edit, 0 - 9 to enter account number, Yes to accept
7	Setup Modules	Press Reset to reset communicator
	Setup Radio-Pad?	Press Yes to set-up Radio-Pad, Menu to exit
	Pad ARC 1 Pri No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 1 Sec No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 1 Prefix	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Pad ARC 2 Pri No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 2 Sec No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 2 Prefix	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Pad ARC 3 Pri No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 3 Sec No	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 3 Prefix	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Setup AV Module?	Press Yes to set-up AV Module, Menu to exit
	AV No.1	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV No.2	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV No.3	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV Dial Attempts	Press No to edit, 0 - 9 to enter number of dialling attempts, Yes to accept
	AV Re-Dial Delay	Press No to edit, 0 - 9 to enter the re-dial delay, Yes to accept
	Setup IP Data?	Press Yes to set-up IP Module, Menu to exit
	ComIP Address	Press No to edit, 0 - 9 to enter an IP Address, Yes to accept
	ComIP Port	Press No to edit, 0 - 9 to enter a Port Number, Yes to accept
	ComIP Gateway	Press No to edit, 0 - 9 to enter a Gateway Address, Yes to accept
	ComIP Mask	Press No to edit, 0 - 9 to enter a Subnet Mask, Yes to accept
	Polling /SMG IP	Press No to edit, 0 - 9 to an IP Address, Yes to accept
	Name/SMG Port	Press No to edit, 0 - 9 to a Name, Yes to accept
	Setup GPRS Data?	Press Yes to set-up Chiron IRIS GPRS Data, Menu to exit
	Access Pnt Name	Press No to edit, 0 - 9 to enter an Access Point Name, Yes to accept
	User Name	Press No to edit, 0 - 9 to enter a User Name, Yes to accept
	Password	Press No to edit, 0 - 9 to enter a Password, Yes to accept
	SMS Centre Pri	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	SMS Centre Sec	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Modem Setup Stg.	Press No to edit, 0 - 9 to enter modem string, Yes to accept
	Modem Speed	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ESN	View only
	Pad NUA	View only
	Forward Signal	View only
	Reverse Signal	View only
	Bit Error Rate	View only
	Cyclic Redundancy	View only
	GSM Signal/BER	View only
	Com1,2,3	Press Reset to reset com port
8	Com Port Setup	Use 0 - 3 to select a com port, No to edit, ↕ to select an option, Yes to accept
	Onboard Digi Port	0 Nothing Fitted 5 Modem Unit ↕ RadioPlus
	Com Ports 1, 2 & 3* * 640 only	1 Com300 6 Radio-pad ↕ Inovonics Radio
		2 Com2400 7 GSM Module ↕ WebWayOne/Emizon Module
		3 ComISDN 8 Crestron System ↕ X-10 Control
		4 ComIP 9 SIP ↕ IRIS IP Module
	Expansion Port	0 Nothing Fitted 2 ID Module 4 Memory Module
		1 AV Module 3 X10 Module

8 _{hov}	Setup Users	
Yes	Select User	Use 0 _{...} - 9 _{...} to enter a user number, Reset to Delete User, Omit to assign a Radio FOB, Chime to Copy a TAG, Part to Import a TAG, Yes to enter a Code
Yes	User Code	Use 0 _{...} - 9 _{...} to enter a code, Yes to accept
Yes	User Areas 24/48/88/168	Use 1 - 8 _{...} to select an area, (0 _{...} = all areas, Area = areas A – H and I – P), Yes to accept
	User Areas 640	Use Chime - Part to select an area group (1-4), use Area to select areas A – H and I – P, Yes to accept.
Yes	User Types	Use 0 _{...} - 9 _{...} to select a user type, Yes to accept 1 _{...} Master 5 _{...} Arm Only 9 _{...} Custom 2 _{...} Manager 6 _{...} Duress 0 _{...} Engineer 3 _{...} Standard 7 _{...} Door Strike 4 _{...} Local 8 _{...} Vacation
Yes	User Options 1	Press No to edit, ⬅ to select an option, No to change option, Yes to accept 1 _{...} A = Arming 4 _{...} R = Eng. Reset 7 _{...} Y = Auto 'YES' 2 _{...} D = Disarming 5 _{...} a = Local Arming 8 _{...} D = Disarm First 3 _{...} O = Omitting 6 _{...} d = Local Disarming
Yes	User Options 2 (only available to Custom users)	Press No to edit, ⬅ to select an option, No to change option, Yes to accept 1 _{...} U = User Menu 4 _{...} V = Vacation 7 _{...} C = Duress Code 2 _{...} E = Eng. Program 5 _{...} S = Door strike 8 _{...} O = Open/Close 3 _{...} D = Dual Code 6 _{...} R = Call Rem. PC
Yes	User Config. (only available to Custom users with User Menu)	Press No to edit, ⬅ to select an option, No to change option, Yes to accept 1 _{...} C = Change Code 4 _{...} S = System tests 7 _{...} A = Add Eng. Code 2 _{...} Z = Chime Zones 5 _{...} U = Setup Users 8 _{...} N = NVM Locking 3 _{...} T = Change Timer 6 _{...} E = Eng. Access
Yes	User Time Lock	Use 1 - 8 _{...} to select a control timer, Yes to accept
Yes	User Text	Press No to edit, 0 _{...} - 9 _{...} to select characters (press the required key the appropriate number of times), Yes to accept 1 _{...} . , ? ! 1 @ " - 6 _{...} M N O 6 ⬅ Move Cursor 2 _{...} A B C 2 7 _{...} P Q R S 7 Chime Copy Text to Memory 3 _{...} D E F 3 8 _{...} T U V 8 Part Paste Text from Memory 4 _{...} G H I 4 9 _{...} W X Y Z 9 No Upper, Lower Case, Predictive Text & Numerical 5 _{...} J K L 5 0 _{...} 0 _
Yes	Door Control (only available to Users with Door Strike attribute)	Use 1 - 8 _{...} to select a door, 0 _{...} to select network Yes to accept 1 _{...} Door 1 4 _{...} Door 4 7 _{...} Door 7 2 _{...} Door 2 5 _{...} Door 5 8 _{...} Door 8 3 _{...} Door 3 6 _{...} Door 6 0 _{...} Select Network
Yes	Assign Prox TAG	Press Yes to assign TAG, present TAG to 'Prox' symbol on keypad

Engineer Utils		
9 _{sys}		
0 _{...}	View System Log	Yes to view System, Alarm or Mandatory log
1 _{...} 2 _{...} 3 _{...}	System log Alarm Log Mandatory Log	Use ↕ to move up and down through log (down moves back in time, up moves forward again), Area to show area information or time and date, 1 - 7_{sys} or Chime to find specific events
		↕ Move backwards and forwards Area View Area/Time and date 1 View Priority Alarms 2_{...} View Normal Alarms 3_{...} View Open/Close Events 4_{...} View Omits/Reinstate Events 5_{...} View Maintenance Events 6_{...} View Tamper Alarms 7_{sys} View Test Call Events Chime View Matching Events
1 _{...}	Do Bell Test	Use ↕ to select an option, use 1 - 8_{...} or Yes to activate outputs
		1: Test Bell 2: Test Strobe 3: Test Speaker 4: Test Digi 5: Test Panel 6: Test RedCARE 7: Fast 8: LCD Display 9: User Outputs
2 _{...}	Do Walk Test	Press Area to display zones that have been tested/still need testing, Chime to make zones Chime every time they are activated.
3 _{...}	View Zone Status	Use 0 - 9_{...} to enter zone number or use ↕ to search, Chime to walk test selected zone, Omit to omit zone temporarily
4 _{...}	System Tests	Use 1 - 4_{...} to select an option or use ↕ to search, Yes to accept
		1 View Sys. Status 2_{...} View Batt Status 3_{...} Test Outputs (see Do Bell Test) 4_{...} View Version No.
5 _{...}	Confirm Devices	Use ↕ to select network, Yes to confirm Devices, Area to view error count, Reset to reset error count
6 _{...}	Check RKP Status	Use 1 - 8_{...} to select keypad, 0 to select network, Area to display errors/tamper, No to test output, Omit to test sounder,
7 _{...}	Check Exp. Status	Use 1 - 8_{...} to select expander, 0 to select network, Area to display zones/voltage/outputs/errors, Chime to test zones, Omit to test sounder, 1 - 8_{...} to test outputs
8 _{...}	Set System Time	Use 0 - 9_{...} to enter time (24-hour format) H H M M , Yes to accept
9 _{...}	Set System Date	Use 0 - 9_{...} to enter date D D M M Y Y , Yes to accept
↕	Location Text	Press Yes to view Location Text
↕	Print Log	Use 1 - 8_{...} to enter number of events to be printed, Yes to print log
↕	Start Soak Test	Use 1 - 8_{...} to select an area, (0 = all areas, Area = areas A - H and I - P), Yes to accept, Yes to start test
↕	Change Eng.Code	Use 0 - 9_{...} to enter a code, Yes to accept
↕	Adjust Volumes	Use ↕ to select Panel, Keypad or Expander speakers. Press No to edit, 0 - 8_{...} to enter a value, Yes to accept
↕	Default NVM Data	Press 1 - 8_{...} to select an option or ↕ to search, Yes to default
		00: Panel Outputs 01: Digi Outputs 02: Expander Outputs 03: Keypad Outputs 04: Com???? Channels 05: RedCARE Pins 06: Zone Types 07: Zone Text 08: Expander Options 09: Remote Options 10: User Codes 11: System Timers 12: System Options 13: Area Options 14: System Text 15: UDL Options 16: Digi Options
↕	View iD Data	Use 0 to select loop, Area to select normal scan, quick scan or biscuit mapping. Use ↕ to select biscuit, No to edit, 0 - 9_{...} to enter zone number, Yes to accept
↕	Configure Radio	Use 1 - 8_{...} to select a device, Yes to learn device, No to map zone, 1 - 8_{...} to enter zone number, Yes accept

Alter Part Arms		
Part		
	Press 0 - 9_{...} to enter zone number or use ↕ to search, Omit , Chime OR Part to select Part Arms 1, 2 or 3	
	Omit Part Arm 1	Chime Part Arm 2
		Part Part Arm 3

Notes:

Texecom

Designed to Perform

Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden, Lancashire BB4 4PW,
England.

Technical Support:

UK Customers Tel: 08456 300 600

(Calls charged at local rate from a BT landline. Calls from other networks may vary.)

International Customers Tel: +44 1706 233875

Email: techsupport@texe.com

© Texecom Limited 2012

INS222-7



Certificate Number : FM 35285