

Premier Elite™ V2.10

Introduction

The **Premier Elite Series™** of control panels have been upgraded with a new learn/delete function for devices. The new **Ricochet®** Learn/delete process is **Easier & Smarter** and is in addition to the existing methods provided; devices can be learned right from first power up of the control panel, or accessed later on from a dedicated **Ricochet** Learn menu.

The new Menu can also be accessed from any top level menu by pressing the  /  key.


Learning Devices

Learn Devices from first power up


Follow the instructions given in INS176-8 or later for the first power up of the system. And for any details about programming not covered here.

When the "Confirm Devices" menu appears check and make sure all installed Keypads and Expanders are showing; press  /  and  /  again to confirm.

Providing the system has a **Ricochet** enabled expander installed, the following will appear. The flow diagram shows the procedure to learn devices:-

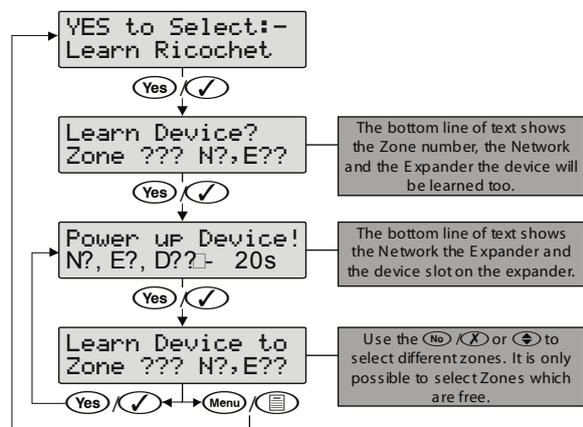

 
When all device slots have been used the following screen will be shown



Pressing the  /  key will return you to the **Ricochet** learn menu; pressing the  /  key will enter the Delete devices menu.

Access the Learn Menu using the Omit "Hot" key

From any top level engineering menu pressing the  /  key will take you to the **Ricochet®** learn menu above.

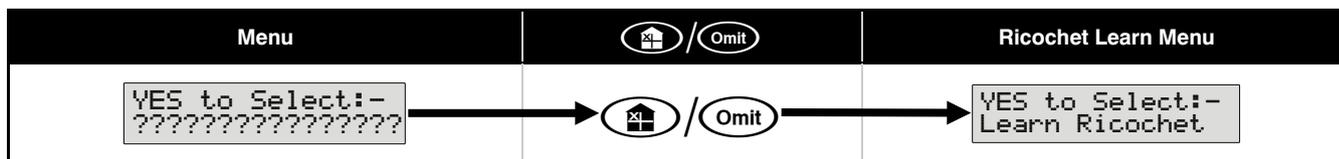

IMPORTANT

In all cases when entering the Learn menu the next available free Zone will be chosen to learn a device too. It will not be possible to learn a device to a Zone that already has a device learned to it. The number of expander's on the system will dictate which next "free" zone is chosen to learn to.

Auto Zone Type & Area

When learning devices, if no editing has taken place of the control panel onboard hardwired zones, these will be switched to Not Used after the first **Ricochet®** device is learned to the system; the following defaults will be used for **Ricochet®** devices learned to the system.

Zone	Type	Area
001-008	Not Used	N/A
009	Entry/Exit 1	A
010	Guard Access	A
011 & above	Guard	A

IMPORTANT

If any editing of any of the on board control panel zones is carried out **BEFORE** any **Ricochet** devices are learned to the system, the control panel zones will remain at factory defaults.

Deleting Devices


Delete Devices

To delete devices from the system, access the **Ricochet** Learn menu. Any of the methods previously detailed may be used.

Premier Elite™ V2.10

The / **Reset** key is used to access the Delete option.

Follow the flow diagram below to delete devices from the system.

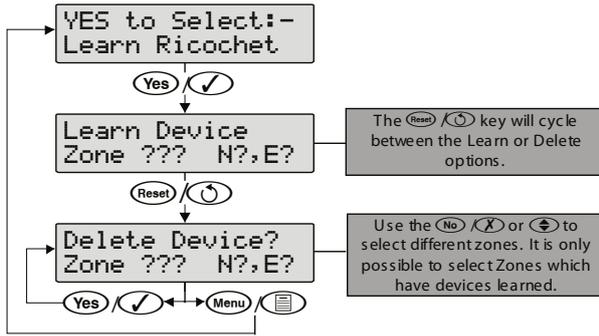

If all devices are deleted from the system the following will be shown

All Devices Deleted!

Pressing the / **Menu** key will return you to the **Ricochet** learn menu; pressing the / **Reset** key will enter the Learn devices menu.

Summary of Keys used


Key	Function
/ Omit	Use this key to access the Ricochet Learn menu from any top level engineering menu.
/ Reset	Use this key when in Ricochet Learn menu to delete devices, or cycle between learn and delete functions
/ Menu	Use this key to exit the Learn Menu.

Learning **SmartKey™**

Premier Elite SmartKey™ should only be learned to the system AFTER all devices have been learned and placed in their final location. Whilst it is possible to learn at any point during the programming of the system, learning and testing the functionality of the **Premier Elite SmartKey™** after all devices have been placed will ensure that the **Premier Elite SmartKey™** performs as expected, and works in locations where the user would expect it to.

Route By

The Route By function allows you to select which Zones (and therefore expander) the **Premier Elite SmartKey™** will use on the system for its routing. This should be selected BEFORE the device has been learned.

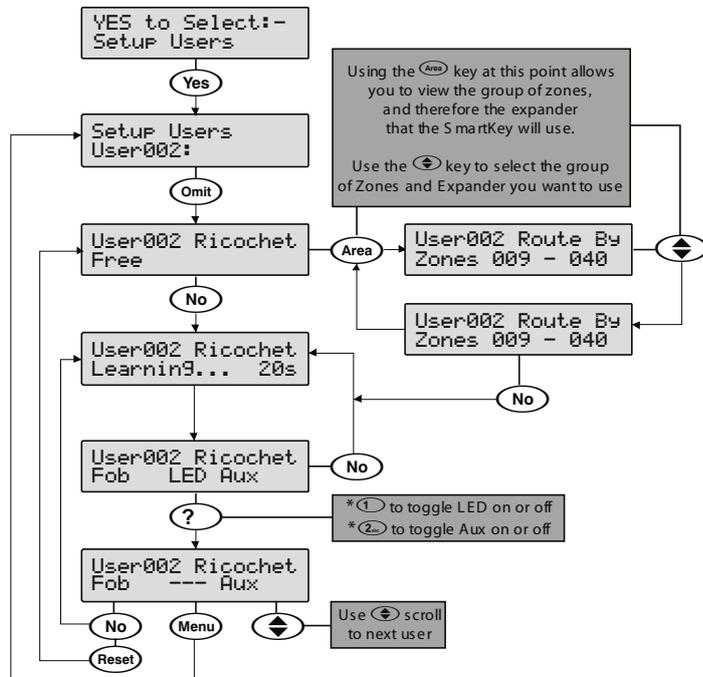

NOTE In either of the **Premier Elite SmartKey™** menu displays, any **Premier Elite SmartKey™** that logs onto the system will cause the menu to change to that **Premier Elite SmartKey™** - a handy way of finding out which user a **Premier Elite SmartKey™** in your hand belongs to!

* Please refer to INS 467 "Premier Elite SmartKey" for further details on the LED & Aux functions.

NOTE The dimensions for the Premier Elite 12-W are 229mm(h) x 283mm(w) x 85mm(d)