

# **High-Speed Positioning System Web3.0 Operation Manual**

**Version 1.0.1**

# Table of Contents

1	Network Connection .....	1
1.1	Preparation.....	1
1.2	Log in .....	1
1.3	Live Interface .....	3
1.4	Encode Setup .....	3
1.5	Video Window Setup .....	4
1.6	System Menu.....	5
1.7	Video Window Function Option .....	5
1.8	PTZ Control.....	6
1.9	PTZ Setup/Menu .....	7
2	Setup.....	10
2.1	Camera .....	10
2.1.1	Conditions .....	10
2.1.2	Video .....	20
2.1.3	Audio .....	25
2.2	Network.....	26
2.2.1	TCP/IP .....	26
2.2.2	Connection .....	28
2.2.3	PPPoE .....	30
2.2.4	DDNS .....	31
2.2.5	IP filter.....	32
2.2.6	SMTP (e-mail) .....	33
2.2.7	UPnP .....	34
2.2.8	SNMP.....	35

2.2.9	Bonjour .....	37
2.2.10	Multicast .....	38
2.2.11	IEEE802 .....	38
2.2.12	Qos .....	39
2.3	PTZ.....	40
2.3.1	Protocol.....	40
2.3.2	Function.....	41
2.4	Peripheral.....	50
2.4.1	IR Light .....	50
2.4.2	Wiper.....	51
2.5	Event.....	51
2.5.1	Video detect.....	51
2.5.2	Alarm.....	55
2.5.3	Abnormity .....	58
2.6	Storage .....	60
2.6.1	Record schedule and snapshot schedule .....	60
2.6.2	Destination .....	60
2.6.3	Record control .....	62
2.7	System.....	63
2.7.1	General .....	63
2.7.2	Account.....	65
2.7.3	PTZ.....	68
2.7.4	Default.....	69
2.7.5	Import/Export .....	70
2.7.6	Auto maintenance .....	70
2.7.7	Firmware update .....	71
2.8	Information .....	71
2.8.1	Version.....	71
2.8.2	Log.....	71
2.8.3	Online User .....	72
3	Alarm.....	74

4	Log out.....	75
---	--------------	----

**Important**

**The following functions are for reference only. Some series products may not support all the functions listed below.**

# 1 Network Connection

## 1.1 Preparation

This series high-speed positioning system product supports the Web access and management via PC. Web includes several modules: monitor channel preview, PTZ control, system configuration, alarm and etc.

Please follow the steps listed below for network connection.

- Make sure the high-speed positioning system has connected to the network properly.
- High-speed positioning system IP address and PC IP address shall be in the same network segment. If there is router, please set the corresponding gateway and subnet mask.
- Use order ping `***.***.***.***`(\* high-speed positioning system address) to check connection is OK or not.

## 1.2 Log in

Open IE and input high-speed positioning system address in the address bar.

For example, if your device IP is 192.168.1.108, then please input `http:// 192.168.1.108` in IE address bar. See Figure 1-1.

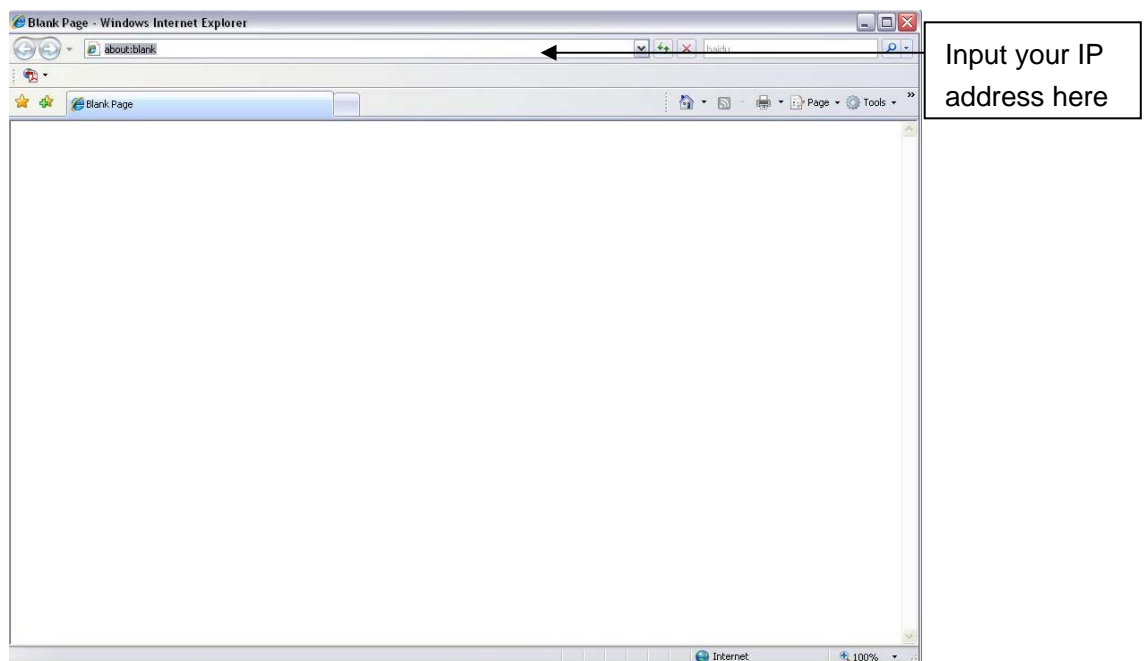


Figure 1-1

The login interface is shown as below. See Figure 1-2.

Please input your user name and password.

Default factory name is **admin** and password is **admin**.

**Note: For security reasons, please modify your password after you first login.**

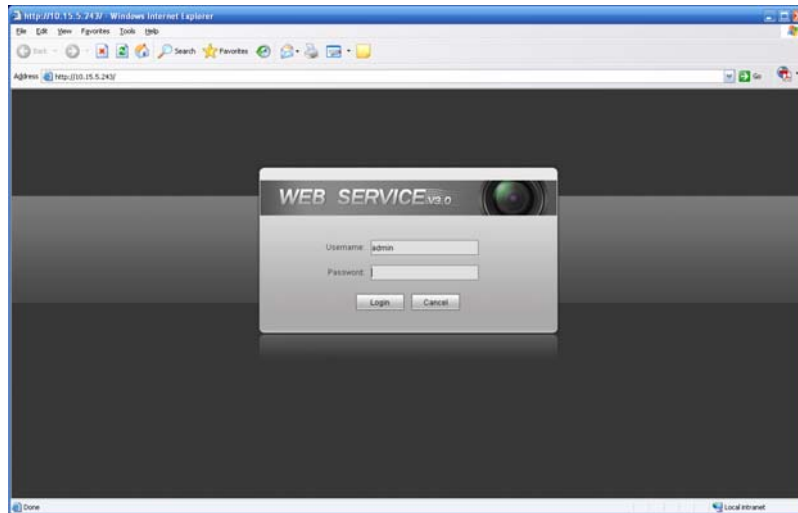


Figure 1-2

If it is your first time to login in, system pops up warning information to ask you whether install control webrec.cab or not. Please click OK button, system can automatically install the control. When system is upgrading, it can overwrite the previous Web too.

If you can't download the ActiveX file, please check whether you have installed the plug-in to disable the control download. Or you can lower the IE security level. See Figure 1-3.

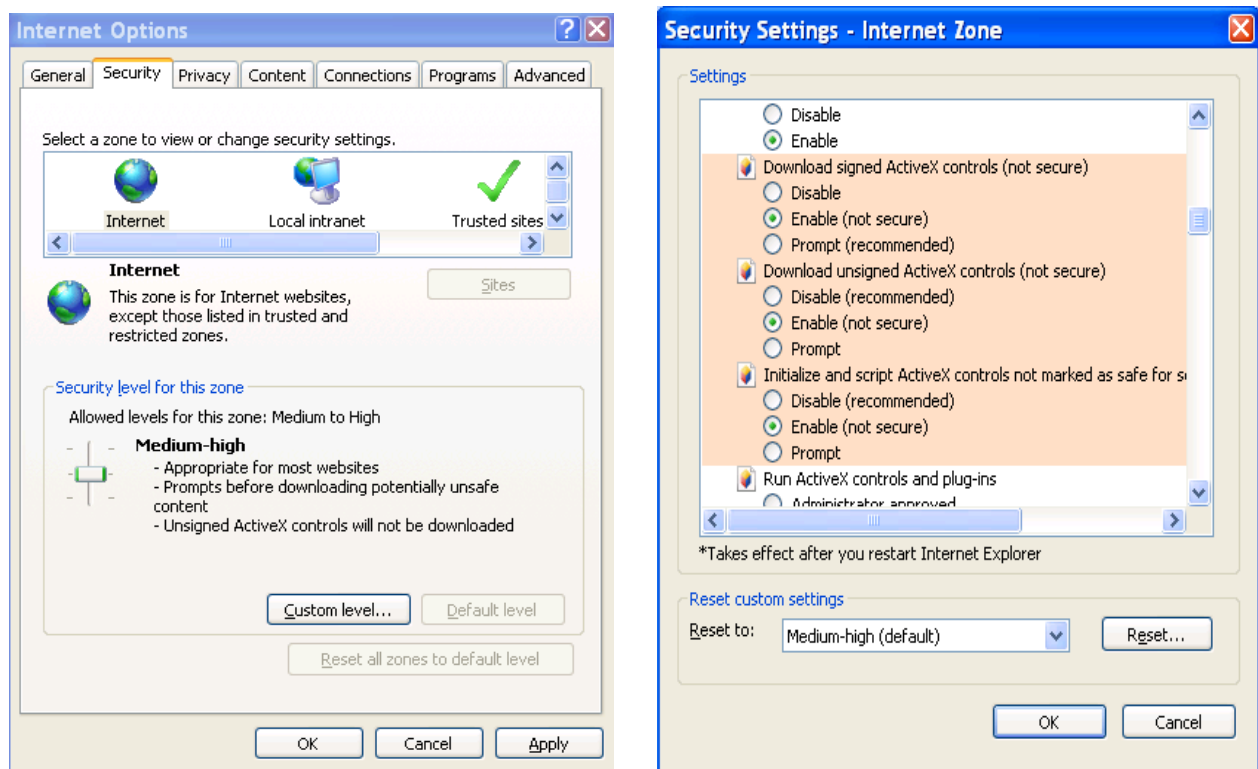


Figure 1-3

## 1.3 Live Interface

After you logged in, you can see the live monitor window. Now you can operate the high-speed positioning system via the WEB. See Figure 1-4.

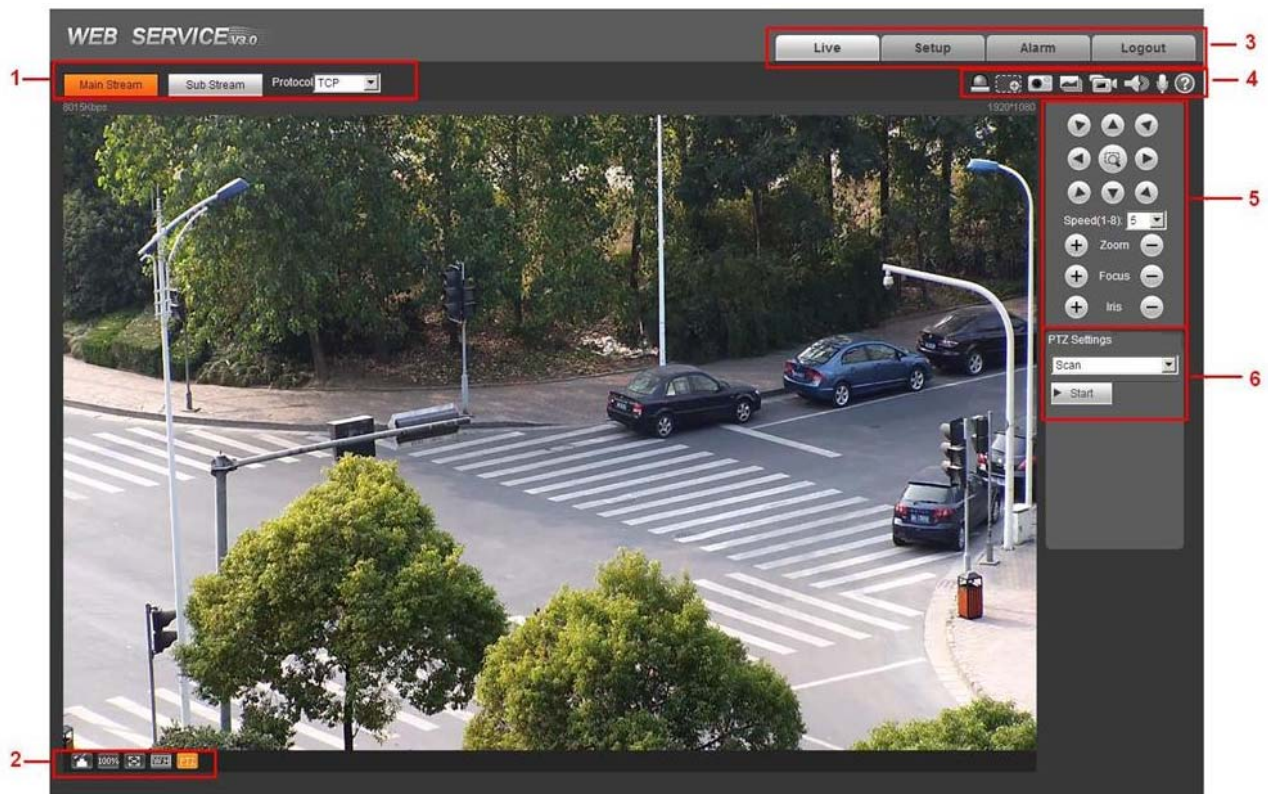


Figure 1-4

There are six sections:

- Section 1: Encode setup bar
- Section 2: Window adjust bar
- Section 3: System menu bar
- Section 4: Window function option bar
- Section 5: PTZ control
- Section 6: PTZ setup/menu

## 1.4 Encode Setup

The encode setup interface is shown as in Figure 1-5.



Figure 1-5

Please refer to the following sheet for detailed information.

Parameter	Function
Main stream	In normal network width environment, main stream can record audio/video file and realize network monitor.
Sub (Extra) stream	If network width is not sufficient, you can use sub stream to realize network monitor. It is to reduce network bandwidth usage.
Protocol	You can select video monitor protocol from the dropdown list. There are three options: TCP/UDP/Multicast.

## 1.5 Video Window Setup

The interface is shown as in Figure 1-6.

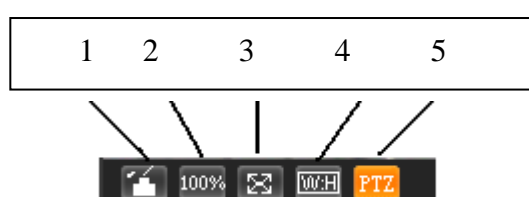


Figure 1-6

Please refer to the following sheet for detailed information.

SN	Parameter	Function
1	Image control	Click it to open picture setup interface. See Figure 1-7. This interface is on the top right pane.
2	Original size	Click this button to go to original size. It is to display the actual size of the video. It depends on the resolution of the video.
3	Full screen	Click it to go to full-screen mode. Double click the mouse or click the Esc button to exit the full screen.
4	Width and height ratio	Click it to restore original ratio or suitable window.
5	Open/close PTZ	Left click it to display or hide the PTZ control interface.

The picture setup interface is shown as in Figure 1-7.



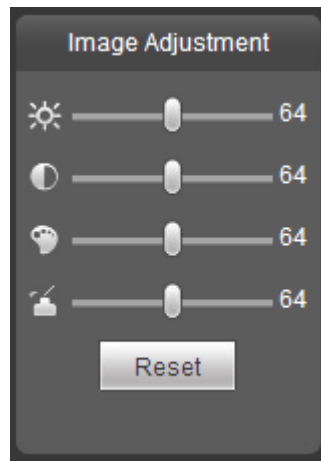






Figure 1-7

Please refer to the following sheet for detailed information.

Parameter		Function	
Video setup		Brightness setup icon. It is to adjust monitor video brightness.	Note: <ul style="list-style-type: none"> <li>● All the operations here apply to WEB end only.</li> <li>● Please go to Setup-&gt;Camera-&gt;Conditions to adjust brightness, contrast, hue and saturation setup.</li> </ul>
		Contrast setup icon. It is to adjust monitor video contrastness.	
		Saturation setup icon. It is to adjust monitor video saturation.	
		Hue setup icon. It is to adjust monitor video hue.	
	Reset	Restore brightness, contrastness saturation and hue to system default setup.	

## 1.6 System Menu

System menu is shown as in Figure 1-8.

Please refer to chapter 1.3 Live, chapter 2 Setup, chapter 3 Alarm, chapter 5 Log out for detailed information.



Figure 1-8

## 1.7 Video Window Function Option

The interface is shown as below. See Figure 1-9.

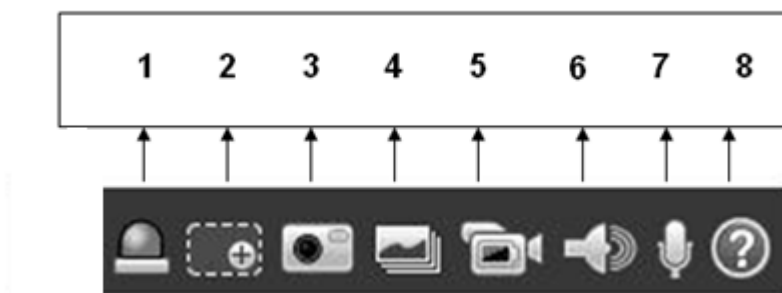


Figure 1-9

Please refer to the following sheet for detailed information.

SN	Parameter	Function
1	Alarm output	Click it to generate an alarm output. There is one alarm output icons since this series product supports two relay output.
3	Digital zoom	When video is in original status, click this button you can select any zone to zoom in. After zoom in ,you can drag the zoom in area in the specified area. Right click mouse system restores original status. You can use the wheel to zoom out the video.
4	Snapshot	You can snapshot important video. You can go to Setup->Camera->Video->Path to modify the local record save path.
5	Triple snap	Click it, system can snap at 1f/s for three times. All images are memorized in system storage folder.
6	Record	When you click local record button, the system begins recording. You can go to Setup->Camera->Video->Path to modify the local record save path.
7	Audio output	Turn on or off audio when you are monitoring. You can go to Setup->Camera->Audio to set.
8	Bidirectional talk	Click it to begin audio talk. You can go to Setup->Camera->Audio to set bidirectional talk mode.
9	Help	Click it to open help file.

## 1.8 PTZ Control

Before PTZ operation, please make sure you have properly set PTZ protocol. (Please go to Setup->System->PTZ to set.).

Here you can view direction keys, speed, zoom, focus, iris button. See Figure 1-10.

- PTZ direction: PTZ supports eight directions: left/right/up/down/upper left/upper right/bottom left/bottom right.
- 3D intelligent positioning: Click the button in the middle of the direction buttons, you can quickly track to the object your desired.
- Speed: The step 8 speed is faster than step 1.



Figure 1-10

## 1.9 PTZ Setup/Menu

The PTZ setup/Menu interface is shown as in Figure 1-11.

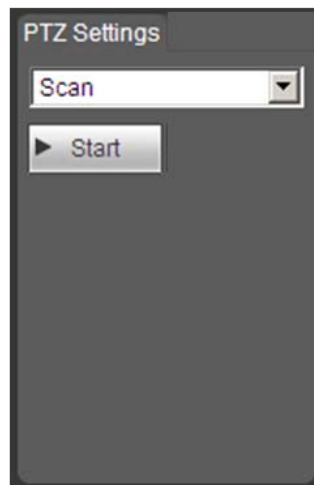


Figure 1-11

Click PTZ set button, the interface is shown as in Figure 1-12. Here you can set scan, preset, tour pattern, assistant function and etc.

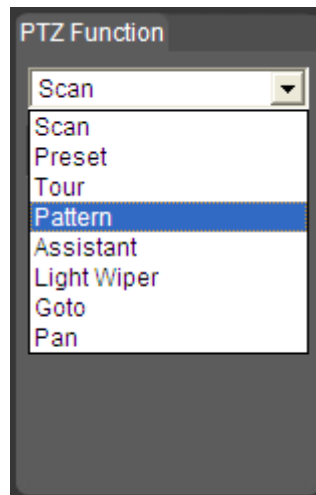


Figure 1-12

Please refer to the following sheet for PTZ setup information.

Parameter	Function
Scan	<ul style="list-style-type: none"> <li>Click Setup button, you can set scan left and right limit.</li> <li>Use direction buttons to move the system to you desired location and then click left limit button. Then move the system again and then click right limit button to set a right limit.</li> </ul>
Preset	<ul style="list-style-type: none"> <li>Input the preset value and then click Preset button, the system turns to the corresponding position of the preset.</li> <li>Click the Set preset button, you can set a preset. Use direction keys to move the system to your desired location and then input preset value. Click add button, you have set one preset.</li> <li>The preset value varies due to different protocols.</li> </ul>
Tour	<ul style="list-style-type: none"> <li>Click the Setup button, you can begin set tour.</li> <li>Input tour value and then click the Set button. The tour value ranges from 1 to 255. (It may vary due to different protocols.)</li> <li>Input preset value in the column. Click Add preset button, you have added one preset in the tour.</li> </ul> <p><b>Note:</b> Repeat the above procedures you can add more presets in one tour. Or you can click delete preset button to remove one preset from the tour.</p>
Pattern	You can input pattern value and then click start button to begin PTZ movement. Please go back to Figure 1-10 to implement system operation. Then you can click stop button in Figure 1-12. Now you have set one pattern.
Assistant	<p>Please input the corresponding aux value here.</p> <p>You can select one option and then click AUX on or AUX off button.</p>

Parameter	Function
Light and wiper	You can turn on or turn off the light/wiper.
Goto	It is the accurate positioning function. Please input corresponding horizontal angle, tilt angle, and high-speed positioning system zoom speed and then click Go to button to go to a specified position. One unit of the horizontal angle or tile angle stands for 0.1 degree.
Rotation	Begin or stop high-speed positioning system rotation movement.

## 2 Setup

### 2.1 Camera

#### 2.1.1 Conditions

Here you can set camera property. Adjust video parameter to get best preview effect. See Figure 2-1.

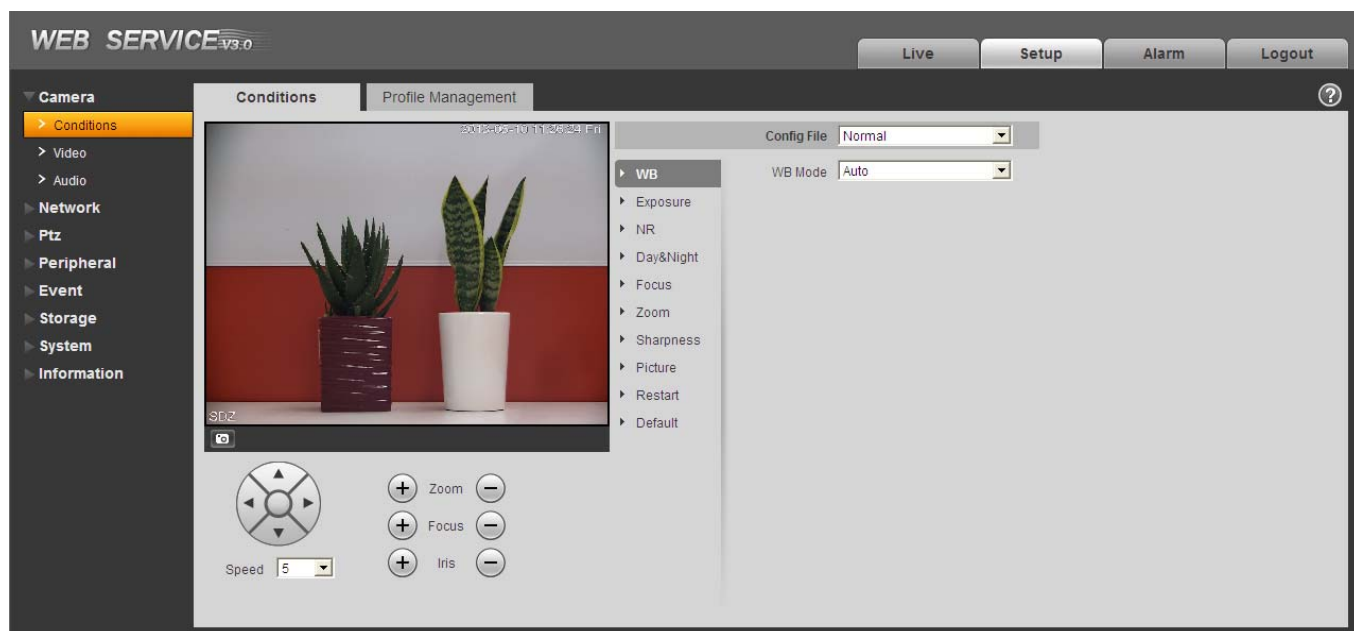


Figure 2-1

Please refer to the following sheet for detailed information.

Parameter	Function
Config File	Here you can set camera setup mode. It includes: normal/day/night.
White Balance	It is to set camera white balance. It includes: auto/manual/ATW/outdoor/indoor/outdoor auto/sodium light auto/sodium light.
Exposure	It is to set camera exposure mode. It includes: auto/manual/aperture has the priority/shutter has the priority.
NR	It is to set camera denoise mode. It includes 2D/3D noise reduction.
Day/Night	It is to set camera day/night switch mode. It includes three modes: auto/B&W/Color.

Focus	It is to set camera focus mode. It includes: auto/manual/semi auto.
Zoom	It is to set digital zoom and zoom rate.
Sharpness	It is to set camera lens sharpness, and sharpness control level.
Picture	It is to set camera video. It includes: hue/brightness/saturation/chroma control/gamma/picture flip/picture freeze.
Restart	It is to reboot camera.
Default	It is to restore factory default setup.

### Important

**Please make sure your purchased camera supports all the functions listed here.**

#### 2.1.1.1 White Balance

White balance interface is shown as below. See Figure 2-2.

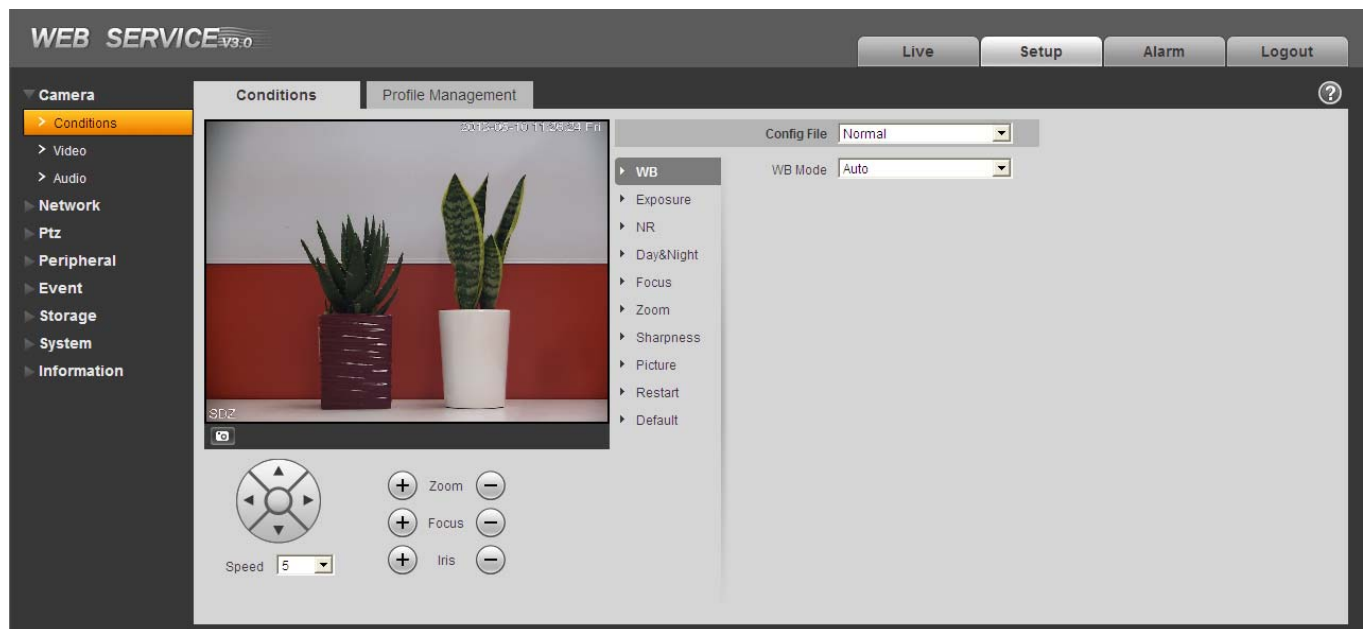


Figure 2-2

Please refer to the following sheet for detailed information.

Parameter	Function
WB mode	<ul style="list-style-type: none"> <li>It is to set camera white balance. It includes: auto/manual/ATW/outdoor/indoor/outdoor auto/sodium light auto/sodium light.</li> <li>For manual mode, you can input red gain and blue gain value.</li> </ul>

### 2.1.1.2 Exposure

Exposure interface is shown as below. See Figure 2-3.

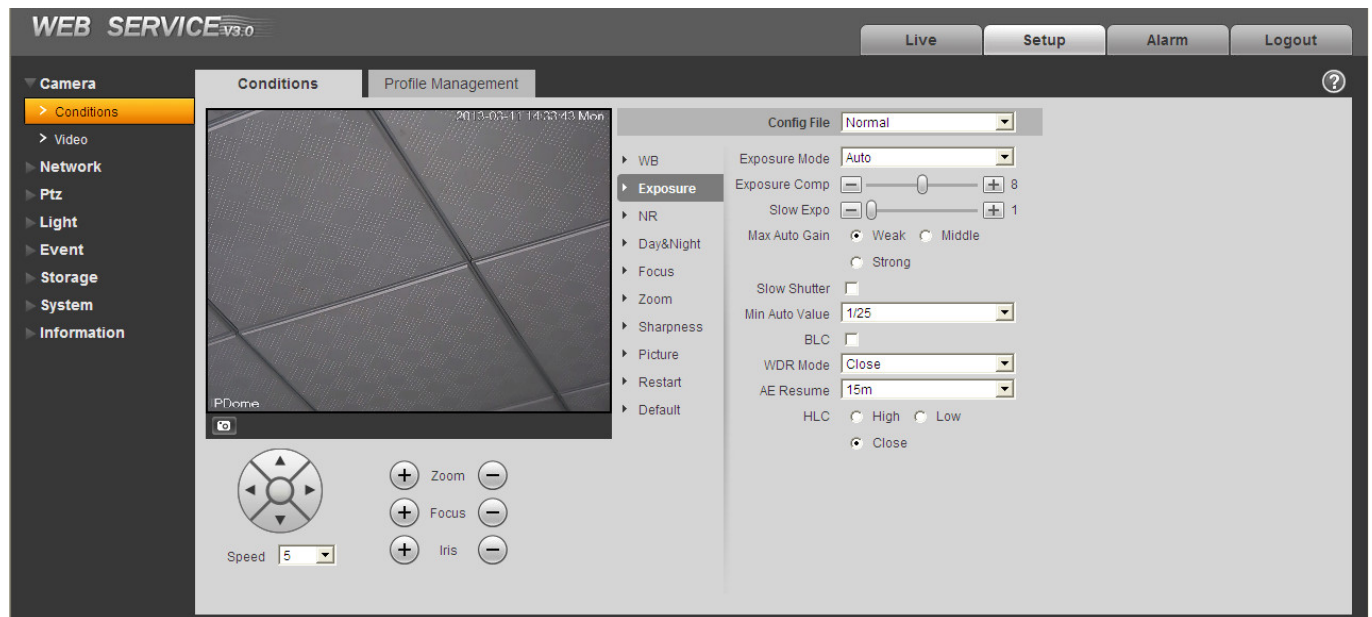


Figure 2-3

Please refer to the following sheet for detailed information.

Parameter	Function
Exposure mode	<ul style="list-style-type: none"><li>● It is to set camera exposure mode. It includes: auto/manual/aperture has the priority/shutter has the priority. The default setup is auto.</li><li>● For the auto exposure mode, the gain, shutter and iris are in auto mode.</li><li>● For manual exposure mode, the gain, shutter and aperture is in manual mode.</li><li>● When the aperture has the higher priority, the aperture is in the manual mode and the gain and shutter is in auto mode.</li><li>● When the shutter has the priority, the shutter is in manual mode, gain and aperture is in auto mode.</li></ul>
Exposure compensation	It can adjust video whole brightness via setting exposure object brightness so that it can suit for different environments.
Gain level	It is to set video brightness under the low illumination environments.
Shutter	It is to set camera exposure time.
Iris	It is to set camera iris.



Slow exposure	If the light may change greatly, you can use slow exposure to get image so that the camera can get stable video.
Max Auto gain	It is to set camera max gain.
Slow shutter	In lower illumination environment, you can lower the cameras auto exposure time to capture the image and enhance the definition. For the moving object , the trail may appear. Please note it is valid in auto mode.
Auto Slow Shutter Min value	It is to set camera min shutter value.
BLC	For the environments of strong contrast effect, such as under the backlight environment, system can auto adjust image contrast to get clear object.
WDR Mode	For the environments of strong contrast effect, it can auto adjust image contrast so that you can see the dark and bright section at the same time.
AE resume	Manually adjust Iris + or Iris -, system can auto resume previous exposure mode.
HLC	When there is strong light source in the environment, system can auto adjust video brightness to remove the over exposure effect.

### 2.1.1.3 NR (Noise Reduction)

The noise reduction interface is shown as in Figure 2-4.

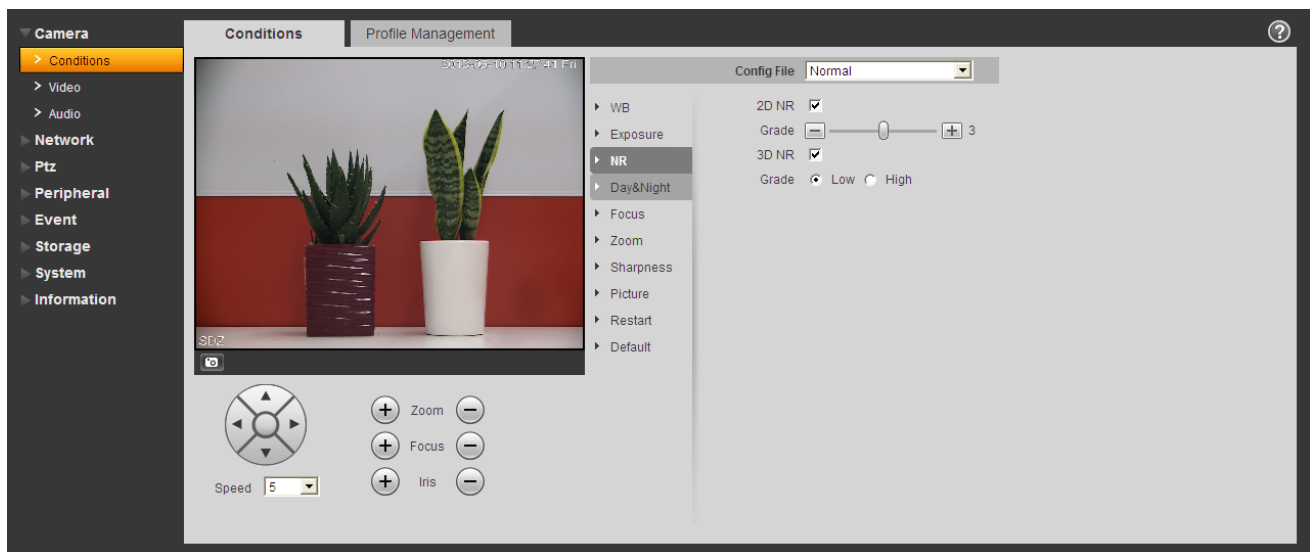


Figure 2-4

Please refer to the following sheet for detailed information.

Parameter	Function
2D NR	It is to control noise. The higher the level is; the small the noise is. Comparing with the previous one, the picture may become a little bit blurry.
3D NR	It is to control noise. The higher the level is; the small the noise is. Comparing with the previous one, the picture may have trail.

#### 2.1.1.4 Day/Night

##### Important

**Please make sure your purchased product camera supports this function.**

The day/night mode is shown as in Figure 2-5.

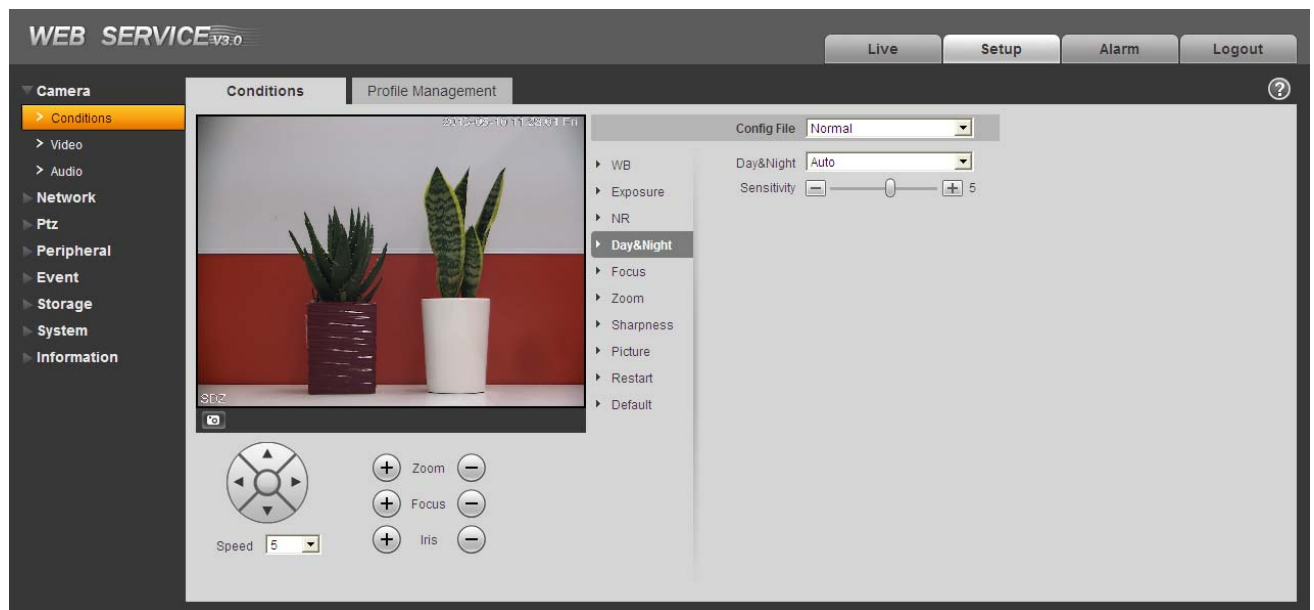


Figure 2-5

Please refer to the following sheet for detailed information.

Parameter	Function
Day/night	It is to set camera day/night mode. The mode includes: B&W/color/auto.
Sensitivity	It is to camera day/night switch sensitivity.

#### 2.1.1.5 Focus

The focus interface is shown as in Figure 2-6.

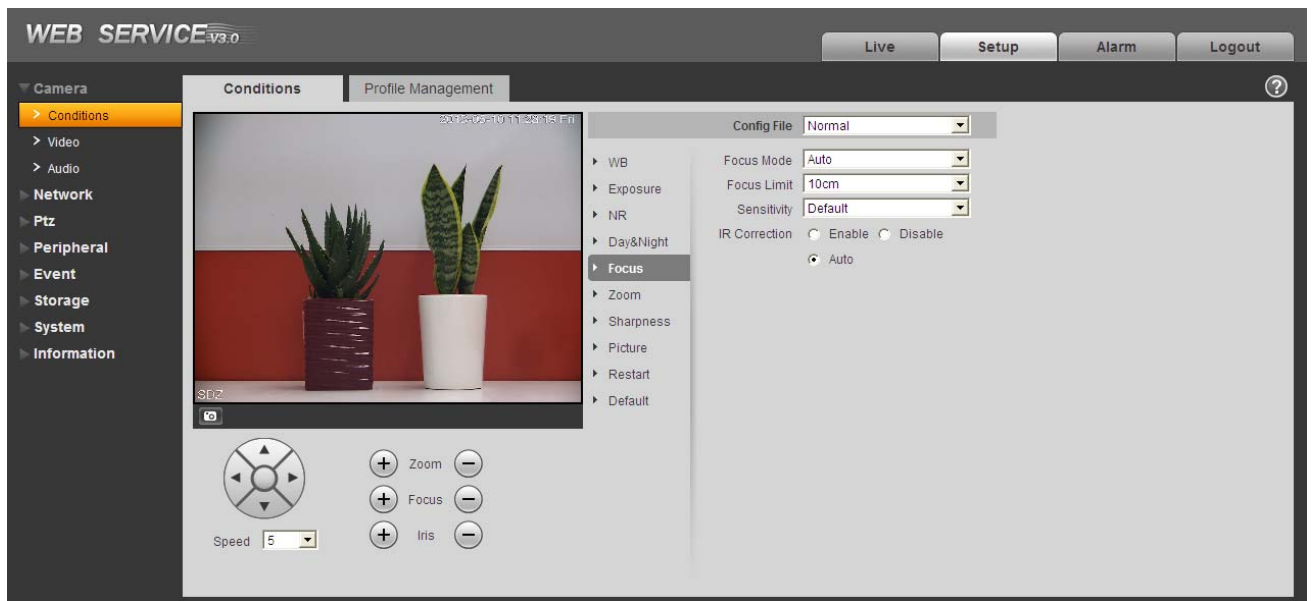


Figure 2-6

Please refer to the following sheet for detailed information.

Parameter	Function
Focus mode	It is to set camera focus mode. It includes: auto/manual/semi auto.
Focus limit	It is to camera focus distance in case the focus distance is too small and the focus goes to the enclosure. At the same time, you can change focus distance to adjust focus speed.
Sensitivity	It is to set camera focus sensitivity. The higher the value is, the easier it is to activate focus. The lower the value is, the difficult it is to activate focus.
IR Correction	It is to set IR light focus correction function to enhance focus effect and remove the IR light effect on the focus.

#### 2.1.1.6 Zoom

Zoom interface is shown as in Figure 2-7.

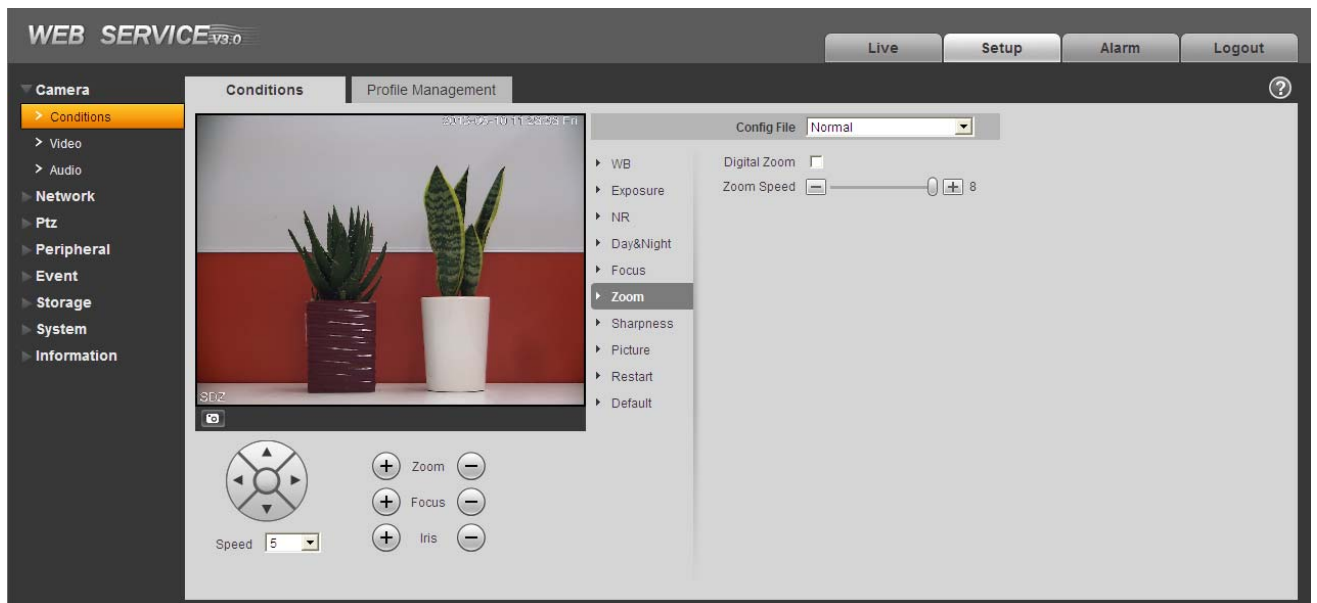


Figure 2-7

Please refer to the following sheet for detailed information.

Parameter	Function
Digital zoom	It is for you to enable/disable digital zoom function.
Zoom speed	It is to set camera zoom speed. The bigger the value is, the faster the speed is.

#### 2.1.1.7 Sharpness

Sharpness interface is shown as in Figure 2-8.

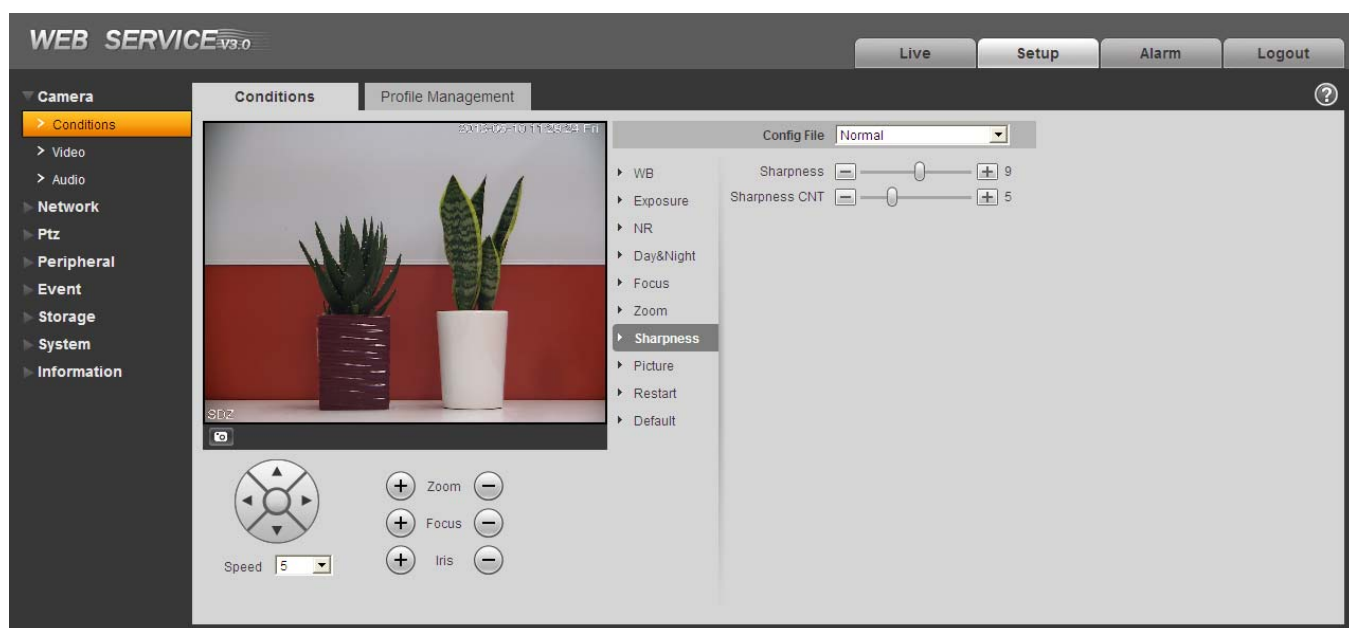


Figure 2-8

Please refer to the following sheet for detailed information.

Parameter	Function
Sharpness	It is to set camera sharpness. The higher the sharpness is, the clear the image is. The object edge becomes clear too.
Sharpness control level	It is to set camera control level. The higher the value is, the strong the control level is.

#### 2.1.1.8 Picture

Picture interface is shown as in Figure 2-9.

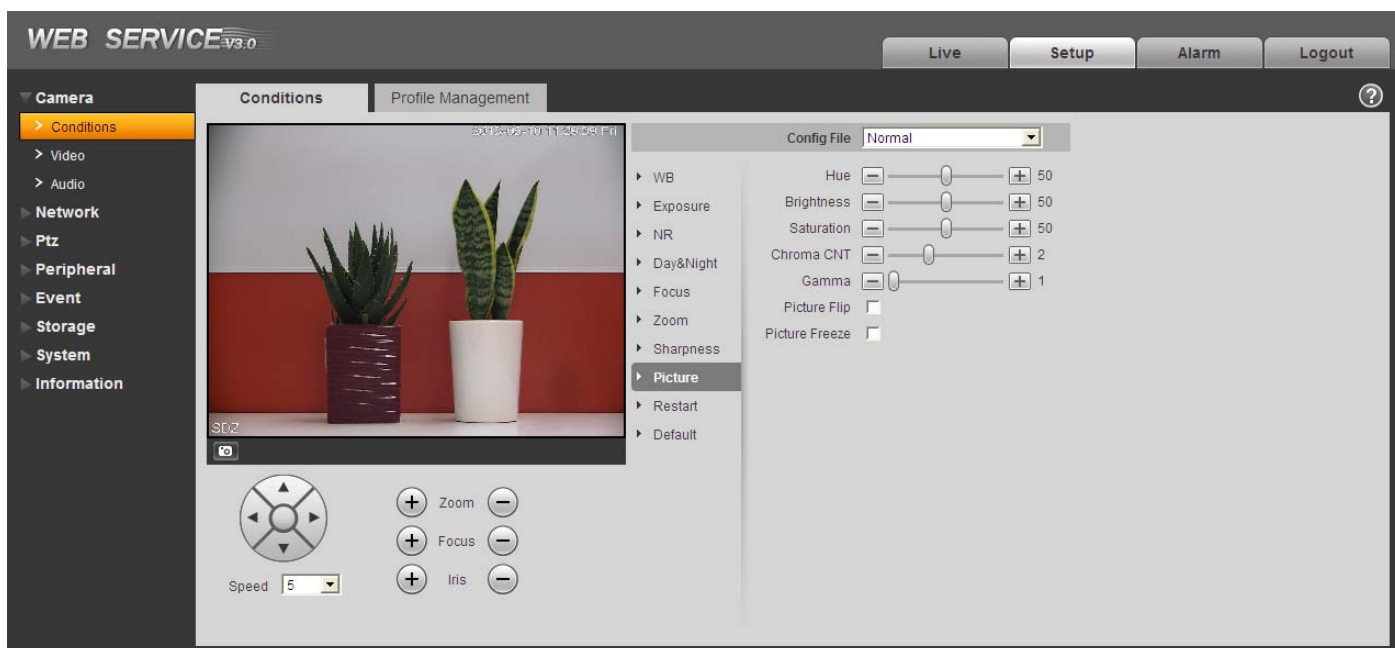


Figure 2-9

Please refer to the following sheet for detailed information.

Parameter	Function
Hue	It is to set picture hue.
Saturation	It is to set color purity. The higher the purity is, the more color the video is. The lower the purity is, the dark the video is.
Chroma control	It is to set video color control level. The higher the value is, the higher the control level is .
Gamma	It is to set image gamma value.
Brightness	It is to set video brightness. The higher is value is, the bright the video is.
Picture Flip	It is to set video display mode. It is to turn camera.
Picture freeze	When you are calling a preset, system goes to the specified preset directly without showing the video during the PTZ movement.

#### 2.1.1.9 Restart

Restart interface is shown as in Figure 2-10.

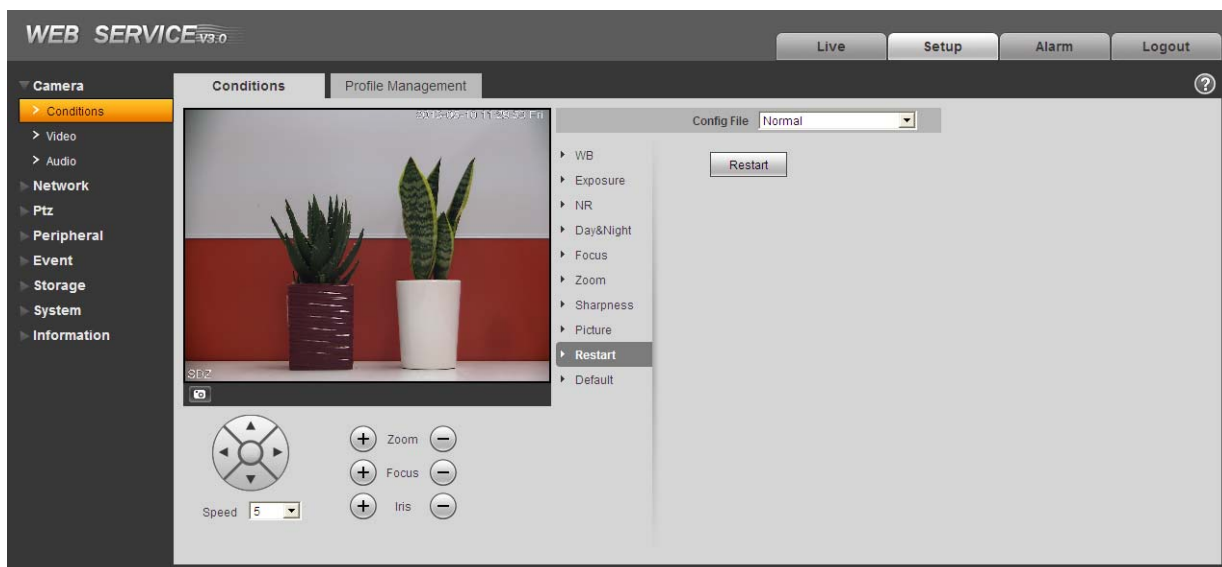


Figure 2-10

Please refer to the following sheet for detailed information.

Parameter	Function
Restart	It is to reboot camera.

#### 2.1.1.10 Default

Default interface is shown as in Figure 2-11.

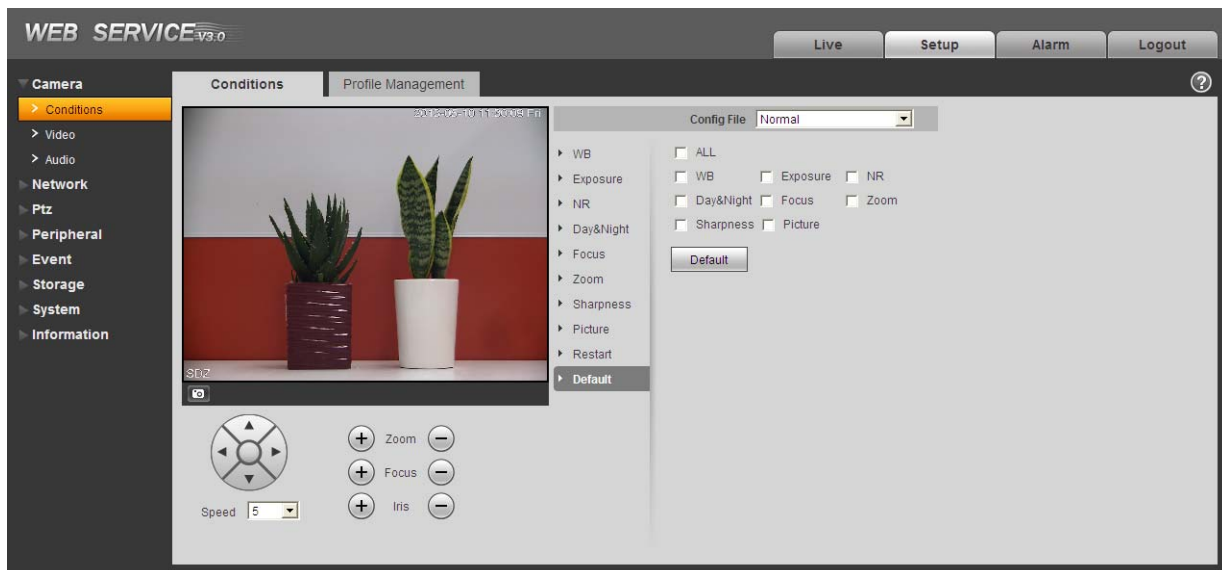


Figure 2-11

Please refer to the following sheet for detailed information.

Parameter	Function
Default	It is to restore camera parameter to factory default setup.

### 2.1.1.11 Profile Management

Profile management interface is shown as in Figure 2-12.

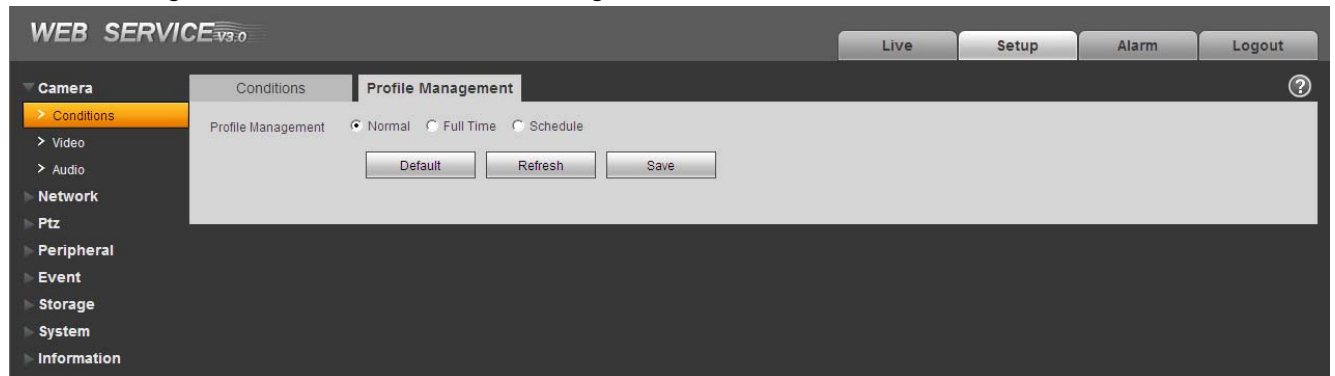


Figure 2-12

Please refer to the following sheet for detailed information

Parameter	Function
Profile Management	There are three modes: normal/full-time/schedule. The default setup is normal.
Normal	It is to adopt the general parameter on the profile file.
Full-time	It is to adopt day or night general parameter on the profile file all the time.
Schedule	It is to adopt the day or night parameter on the profile file by time you set here.

## 2.1.2 Video

### 2.1.2.1 Video bit stream

The video bit stream interface is shown as below. See Figure 2-13.



The screenshot shows the 'WEB SERVICE v3.0' interface with a sidebar menu on the left containing 'Camera', 'Conditions', 'Video' (selected), 'Audio', 'Network', 'Ptz', 'Peripheral', 'Event', 'Storage', 'System', and 'Information'. The main content area has tabs for 'Video', 'Snapshot', 'Overlay', and 'Path'. Under the 'Video' tab, there are two sections: 'Main Stream' and 'Sub Stream'. The 'Main Stream' section includes settings for Code-Stream Type (General), Encode Mode (H.264), Resolution (1080P (1920\*1080)), Frame rate(FPS) (25), Bit Rate Type (CBR), Reference Bit Rate (3584-8192Kb/S), Bit Rate (8192), I Frame Interval (50), and a checked 'Watermark Settings' box with 'DigitalCCTV' as the character. The 'Sub Stream' section includes an 'Enable' checkbox (checked), Code-Stream Type (General), Encode Mode (H.264), Resolution (CIF (352\*288)), Frame rate(FPS) (15), Bit Rate Type (CBR), Reference Bit Rate (112-640Kb/S), Bit Rate (384), and I Frame Interval (30). At the bottom of the settings area are 'Default', 'Refresh', and 'Save' buttons.

Figure 2-13

Please refer to the following sheet for detailed information.

Parameter		Function
Main stream	Bit stream type	It includes general stream, motion stream and alarm stream. You can select different encode frame rates for different recorded events. The frame rates of the motion detect and alarm is customized.
	Encode mode	There are four options: H.264, H.264B, H.264H, and MJPEG encode mode. <ul style="list-style-type: none"> <li>● H.264 : Main Profile encode mode.</li> <li>● H.264B :Baseline Profile encode mode.</li> <li>● H.264H: High Profile encode mode.</li> <li>● MJPEG: In this encode mode, the video needs general large bit stream to guarantee the video definition. You can use the max bit stream value in the recommend bit to get the better video output effect.</li> </ul>
	Resolution	There are multiple resolutions. You can select from the dropdown list. For each resolution, the recommended bit stream value is different.
	Frame Rate (FPS)	PAL: 1~25f/s, NTSC: 1~30f/s.. The frame rate may vary due to different resolutions.

Parameter		Function
	Bit Rate Type	There are two options: VBR and CBR. Please note, you can set video quality in VBR mode. In MJPEG mode, the bit stream control mode can only be CBR.
	Recommended Bit	Recommended bit rate value according to the resolution and frame rate you have set.
	Bit Rate	<ul style="list-style-type: none"> <li>• In CBR, the bit rate here is a fixed value.</li> <li>• It is the max value in VBR mode.</li> </ul>
	I Frame	<p>Here you can set the P frame amount between two I frames. The value ranges from 1 to 150. Default value is 50.</p> <p>Recommended value is frame rate *2.</p> <p><b>Important</b></p> <p><b>I frame interval setup is null if it is the MJPEG encode mode.</b></p>
	Watermark	<p>This function allows you to verify the video is tampered or not.</p> <p>The max length is 128-digit. The character can only include number, character, underline and hyphen.</p>
Sub stream	Enable	<p>Please check the box here to enable extra stream function.</p> <p>This function is enabled by default.</p>
	Bit stream type	General bit stream.
	Encode mode	<p>There are four options: H.264, H.264B, H.264H, and MJPEG encode mode.</p> <ul style="list-style-type: none"> <li>● H.264 : Main Profile encode mode.</li> <li>● H.264B :Baseline Profile encode mode. H.264B is mainly for Blackberry cell phone to realize the monitor. You need to enable the sub stream function in your system and set the resolution as CIF. Then you can monitor via the Blackberry cell phone.</li> <li>● H.264H: High Profile encode mode.</li> <li>● MJPEG: In this encode mode, the video needs general large bit stream to guarantee the video definition. You can use the max bit stream value in the recommend bit to get the better video output effect.</li> </ul>

Parameter		Function
	Resolution	There are multiple resolutions. You can select from the dropdown list. For each resolution, the recommended bit stream value is different.
	Frame Rate (FPS)	PAL: 1~25f/s, NTSC: 1~30f/s.. The frame rate may vary due to different resolutions.
	Bit Rate Type	There are two options: VBR and CBR. Please note, you can set video quality in VBR mode.
	Recommended Bit	Recommended bit rate value according to the resolution and frame rate you have set.
	Bit Rate	<ul style="list-style-type: none"> <li>• In CBR, the bit rate here is a max value. In dynamic video, system needs to lower frame rate or video quality to guarantee the value.</li> <li>• It is null in VBR mode.</li> <li>• Please refer to recommended bit rate for the detailed information.</li> </ul>
	I Frame	<p>Here you can set the P frame amount between two I frames. The value ranges from 1 to 150. Default value is 50.</p> <p>Recommended value is frame rate *2.</p> <p><b>Important</b> <b>I frame interval setup is null if it is the MJPEG encode mode.</b></p>

### 2.1.2.2 Snapshot

The snapshot interface is shown as in Figure 2-14.

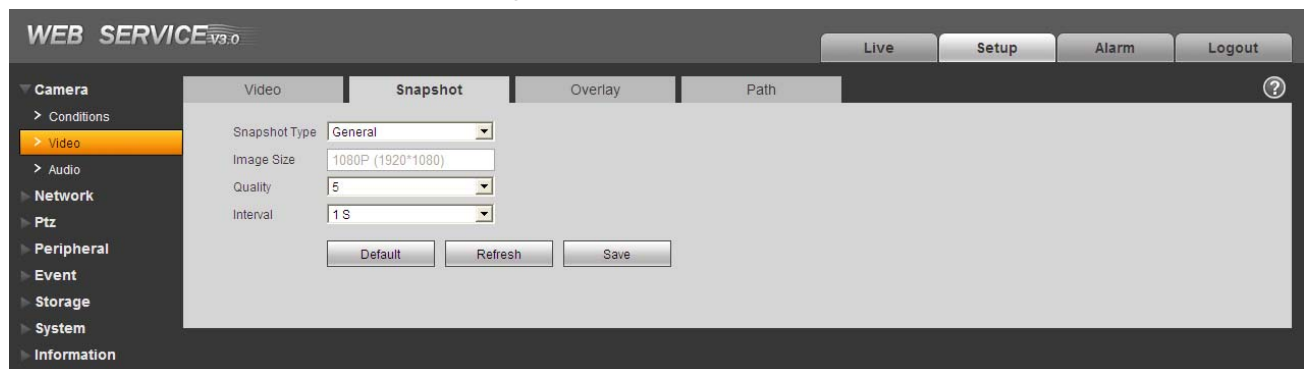


Figure 2-14

Please refer to the following sheet for detailed information.

Parameter	Function
Snapshot type	There are two modes: general (schedule) and Event (activation). General (schedule) snapshot is to snap in the specified period. Event (Activation) snapshot is to snap when the motion detect, camera masking, local alarm event occurrence. If you want to use this function, please make sure: <ul style="list-style-type: none"> <li>• The event occurred during the specified period.</li> <li>• Motion detect, video masking, local alarm and corresponding snap function are all enable.</li> </ul>
Image size	It has relationship with the resolution of the main stream.
Quality	It is to set the image quality. There are six levels.
Interval	It is to set snapshot frequency. The value ranges from 1s to 7s.

### 2.1.2.3 Video Overlay

The video overlay interface is shown as in Figure 2-15.

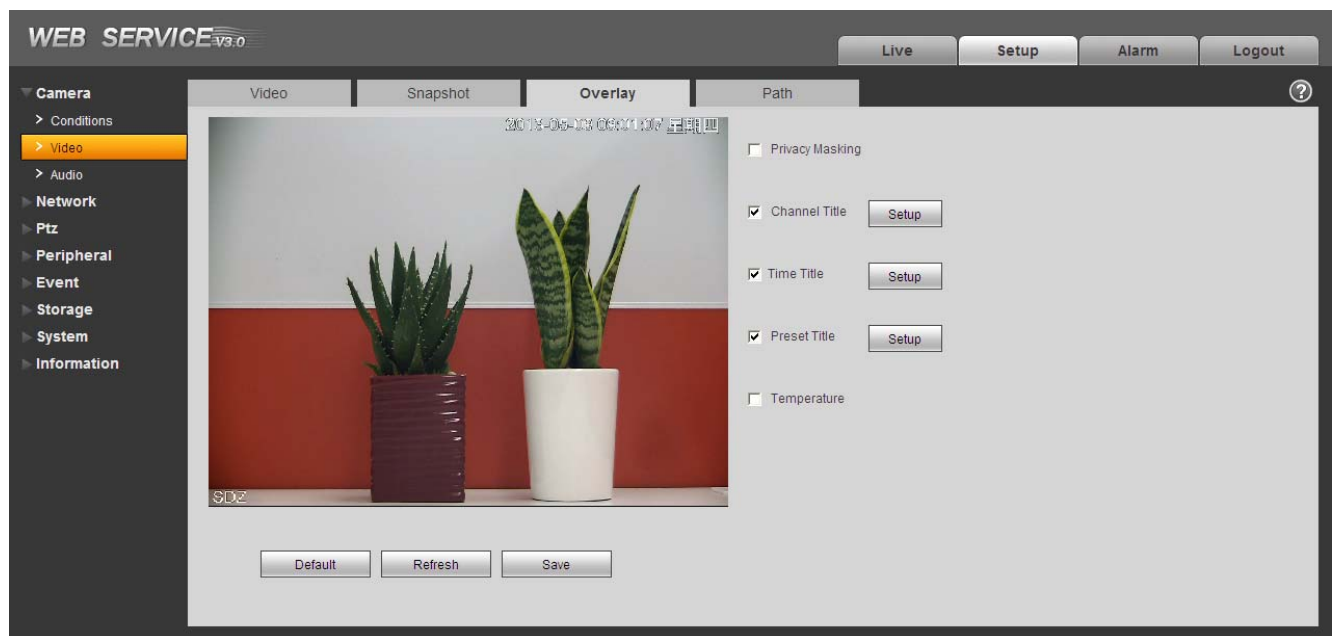


Figure 2-15


Please refer to the following sheet for detailed information.

Parameter	Function
Privacy mask	<ul style="list-style-type: none"> <li>• Here you can privacy mask the specified video in the monitor video.</li> <li>• System max supports 4 privacy mask zones.</li> </ul>

Time Title	<ul style="list-style-type: none"> <li>You can enable this function so that system overlays time information in video window.</li> <li>There is no time title if you do not enable this function here.</li> <li>You can use the mouse to drag the time tile position.</li> </ul>
Channel Title	<ul style="list-style-type: none"> <li>You can enable this function so that system overlays channel information in video window.</li> <li>There is no channel title if you do not enable this function here.</li> <li>You can use the mouse to drag the channel tile position.</li> </ul>
Refresh	After you successfully set privacy mask zone, channel title, time title, you can click Refresh button to video the effect.

#### 2.1.2.4 Path

The storage path interface is shown as in Figure 2-16.

Here you can set snap image saved path ( in the preview interface) and the record storage path ( in the preview interface). The snap picture default setup is C:\PictureDownload and record file default setup is C:\RecordDownload. Please click the Save button to save current setup.

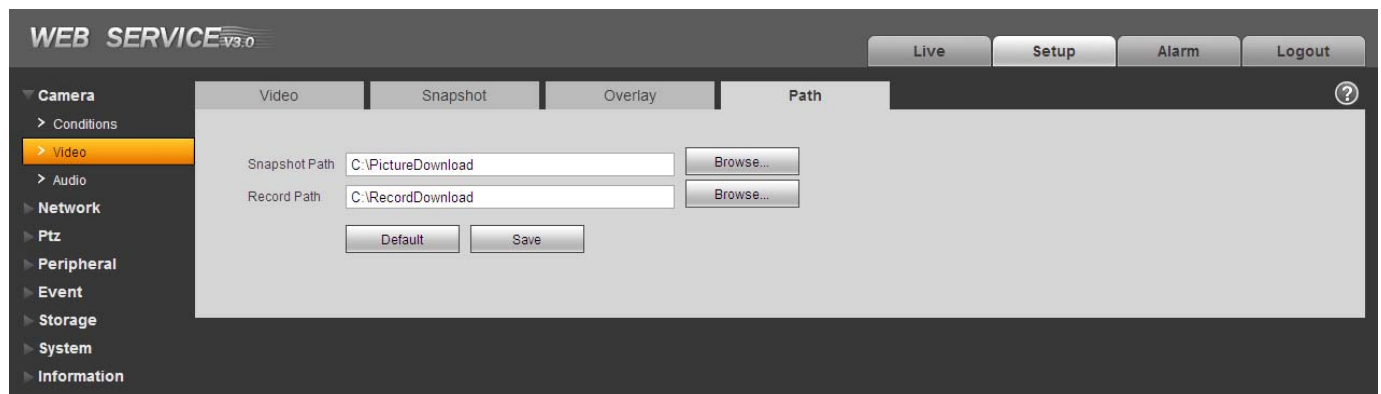


Figure 2-16

#### 2.1.3 Audio

The audio interface is shown as below. See Figure 2-17.

##### **Important**

**Please make sure you have enabled the video function, otherwise you can not enable the audio function.**

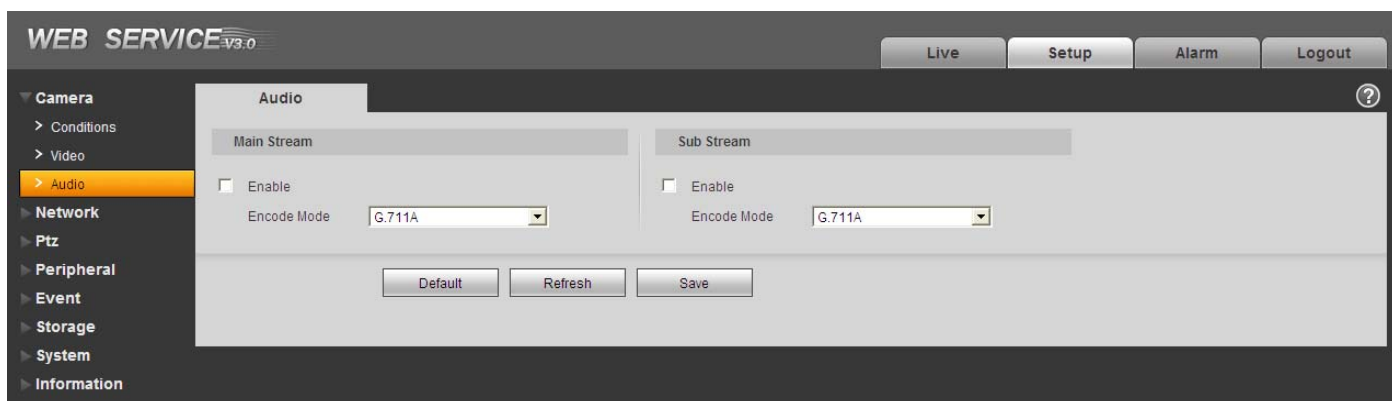


Figure 2-17

Please refer to the following sheet for detailed information.

Parameter	Function
Audio enable	<ul style="list-style-type: none"> <li>● Main stream: Recorded file only contains video by default. You need to check the audio box here to enable audio function so that the main stream the network transmitted is audio/video composite stream.</li> <li>● Sub (Extra) stream: Recorded file only contains video by default. You need to check the audio box here to enable audio function so that the extra stream the network transmitted is audio/video composite stream.</li> </ul>
Encode mode	<p>The encode mode of the main stream and extra stream include PCM, G.711A and G.711Mu.</p> <p>The setup here is for audio encode mode and the bidirectional talk encode both.</p>

## 2.2 Network

### 2.2.1 TCP/IP

The TCP/IP interface is shown as in Figure 2-18.

Figure 2-18

Please refer to the following sheet for detailed information.

Parameter	Function
Host Name	It is to set current host device name.
Ethernet Card	Please select the Ethernet port if the device has several network cards.
Mode	<p>There are two modes: static mode and the DHCP mode.</p> <ul style="list-style-type: none"> <li>● The IP/subnet mask/gateway are null when you select the DHCP mode to auto search the IP.</li> <li>● If you select the static mode, you need to set the IP/subnet mask/gateway manually.</li> <li>● Besides, IP/subnet mask/gateway and DHCP are read-only when the PPPoE dial is OK.</li> </ul>
Mac Address	It is to display host Mac address. It is read-only.
IP Version	<p>It is to select IP version. IPV4 or IPV6.</p> <p>You can access the IP address of these two versions.</p> <ul style="list-style-type: none"> <li>● <b>Please note system needs to check the validity of all IPv6 addresses. The IP address and the default gateway shall be in the same IP section. That is to say, the specified length of the subnet prefix shall have the same string.</b></li> <li>● <b>When PPPoE function is enabled, the IP/subnet mask/default gateway is read-only. You can not set or restore default setup.</b></li> </ul>

IP Address	Please use the keyboard to input the corresponding number to modify the IP address and then set the corresponding subnet mask and the default gateway.
Default Gateway	It is the similar gateway of the IPv4. It shall not be left in blank.
Preferred DNS	DNS IP address. It is the similar DNS of the IPv4. It shall not be left in blank.
Alternate DNS	Alternate DNS IP address. It is the similar DNS of the IPv4. It shall not be left in blank.
Enable ARP/Ping set device IP address service.	<p>You can use ARP/Ping command to modify or set the device IP address if you know the device MAC address.</p> <p>Before the operation, please make sure the high-speed positioning system and the PC in the same LAN. This function is on by default.</p> <p>You can refer to the steps listed below.</p> <p><b>Step 1:</b> Get an IP address. Set the high-speed positioning system and the PC in the same LAN.</p> <p><b>Step 2:</b> Get the physical address from the label of the high-speed positioning system.</p> <p><b>Step 3:</b> Go to the Run interface and then input the following commands.</p> <pre>arp -s &lt;IP Address&gt; &lt;MAC&gt; ping -l 480 -t &lt;IP Address&gt;</pre> <p>Such as: arp -s 192.168.0.125 11-40-8c-18-10-11 ping -l 480 -t 192.168.0.125</p> <p><b>Step 4:</b> Reboot the device.</p> <p><b>Step 5:</b> You can see the setup is OK if you can see there are output information such as "Reply from 192.168.0.125 ..." from the command output lines. Now you can close the command line.</p> <p><b>Step 6:</b> Open the browse and then input http://&lt;IP address&gt;. Click the Enter button, you can access now.</p>

### 2.2.2 Connection

The connection interface is shown as in Figure 2-19.



Figure 2-19

Please refer to the following sheet for detailed information.

Parameter	Function
Max connection	It is the max Web connection for the same device. The value ranges from 1 to 20. The default setup is 10.
TCP port	The value ranges from 1025 to 65535. The default value is 37777. You can input the actual port number if necessary.
UDP port	The value ranges from 1025 to 65535. The default value is 37778. You can input the actual port number if necessary.
HTTP port	The value ranges from 1025 to 65535. The default value is 80. You can input the actual port number if necessary.

RTSP port	<ul style="list-style-type: none"> <li>● Usually, the default value is 554. You do not need to input again if you are using the default value. When you are using QuickTime (Apple browser) or VLC play real-time video, you can use the following format to play. The Blackberry also supports this function.</li> <li>● Real-time monitor bit stream Url format. Please specify the channel number, bit stream type in the Url if you are requesting real-time monitor bit stream Rtsp stream media service. You still need to provide user name or password if it has verification information.</li> <li>● When you are using Blackberry phone to access, the bit stream mode shall be H.264B, resolution is CIF and the audio shall be disabled.</li> <li>● The Url format is shown as below: rtsp://username:password@ip:port/cam/realmonitor?channel=1&amp;subtype=0 You need to input the following items manually. Username/password/IP/port/subtype. The IP is device IP and the port default value is 554. You can leave it in blank if it is the default value. The channel number begins with 1. subtype: bit stream type, main stream is 0 (subtype=0) and extra stream is 1 (subtype=1) . You do not need to input the user name and password if you do not need the verification. Such as: Main stream: rtsp://ip:port/cam/realmonitor?channel=1&amp;subtype=0</li> </ul>
HTTPS Enable	It is to enable HTTPs communication service control. If you enable this function, you can use https://ip:port to login the device. In data encryption protection mode, you can use https://ip to login if you are using the default port.
HTTPS Port	The HTTPs communication port value ranges from 1025 to 65535.

### Important

The value 0 to 1024 (excluding the default value of HTTP/RTSP/HTTPs), 1900, 3800, 5000, 5050, 9999, 37776, 37780-37880, 39999 and etc are the special ports value and they are not open for user to set.

### 2.2.3 PPPoE

The PPPoE interface is shown as in Figure 2-20.

Input the PPPoE user name and password you get from the IPS (internet service provider) and enable PPPoE function. Please save current setup and then reboot the device to get the setup activated.

Device connects to the internet via PPPoE after reboot. You can get the IP address in the WAN from the IP address column.

PPPoE is set to connect to the internet. You can get an account from your IPS (Internet service provider), you can set here to dial to the interface. You can see the registered IP address in the interface if your setup is right.

**Please note, you need to go to the IP address item to view the device current device information. You can access the client-end via this address.**



Figure 2-20

## 2.2.4 DDNS

The DDNS interface is shown as in Figure 2-21.

The DDNS is to set to connect the various servers so that you can access the system via the server. Please go to the corresponding service website to apply a domain name and then access the system via the domain. It works even your IP address has changes.

Figure 2-21

Please refer to the following sheet for detailed information.

Parameter	Function
Server Type	You can select DDNS protocol from the dropdown list and then enable DDNS function.
Server IP	DDNS server IP address
Server Port	DDNS server port.
Domain Name	Your self-defined domain name.
User	The user name you input to log in the server.
Password	The password you input to log in the server.
Update period	<ul style="list-style-type: none"> <li>• Device IP and service connection refresh period.</li> <li>• The default setup is 10 minutes.</li> </ul>

### 2.2.5 IP filter

The IP filter interface is shown as in Figure 2-22.

You can enable IP filter function so that some specified IP user can access the high-speed positioning system. You can add IP address or IP address section.

If you do not check the box here, it means there is on access limit.



Figure 2-22

## 2.2.6 SMTP (e-mail)

The SMTP interface is shown as in Figure 2-23.

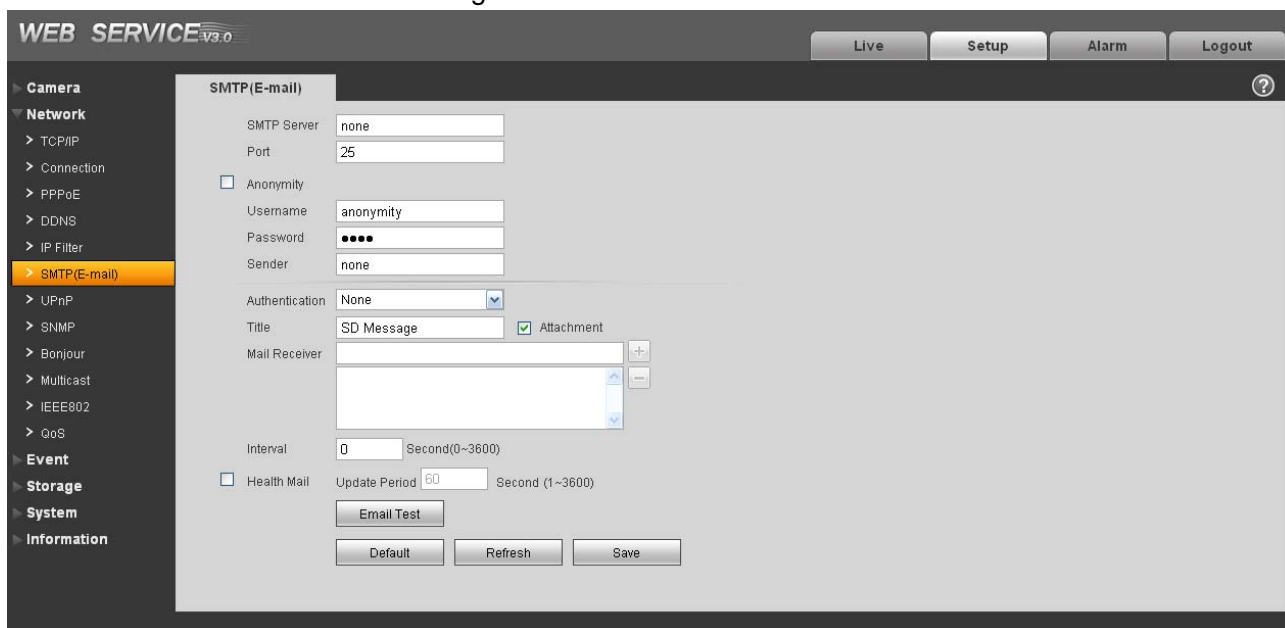


Figure 2-23

Please refer to the following sheet for detailed information.

Parameter	Function
SMTP Server	Input server address and then enable this function.
Port	Default value is 25. You can modify it if necessary.
Anonymity	For the server supports the anonymity function. You can auto login anonymously. You do not need to input the user name, password and the sender information.
User Name	The user name of the sender email account.
Password	The password of sender email account.
Sender	Sender email address.
Authentication (Encryption mode)	You can select SSL or none.
Title (Subject)	Input email subject here.
Attachment	System can send out the email of the snapshot picture once you check the box here.
Mail receiver	Input receiver email address here. Max three addresses.
Interval	The send interval ranges from 0 to 3600 seconds. 0 means there is no interval. Please note system will not send out the email immediately when the alarm occurs. When the alarm, motion detection or the abnormality event activates the email, system sends out the email according to the interval you specified here. This function is very useful when there are too many emails activated by the abnormality events, which may result in heavy load for the email server.
Health mail enable	Please check the box here to enable this function.
Update period (interval)	This function allows the system to send out the test email to check the connection is OK or not. Please check the box to enable this function and then set the corresponding interval. System can send out the email regularly as you set here.
Email test	The system will automatically sent out an email once to test the connection is OK or not .Before the email test, please save the email setup information.

### 2.2.7 UPnP

It allows you to establish the mapping relationship between the LAN and the public network. Here you can also add, modify or remove UPnP item. See Figure 2-24.

In the Windows OS, From Start->Control Panel->Add or remove programs. Click the “Add/Remove Windows Components” and then select the “Network Services” from the Windows Components Wizard. Click the Details button and then check the “Internet Gateway Device Discovery and Control client” and “UPnP User Interface”. Please click OK to begin installation.

Enable UPnP from the Web. If your UPnP is enabled in the Windows OS, the high-speed positioning system can auto detect it via the “My Network Places”

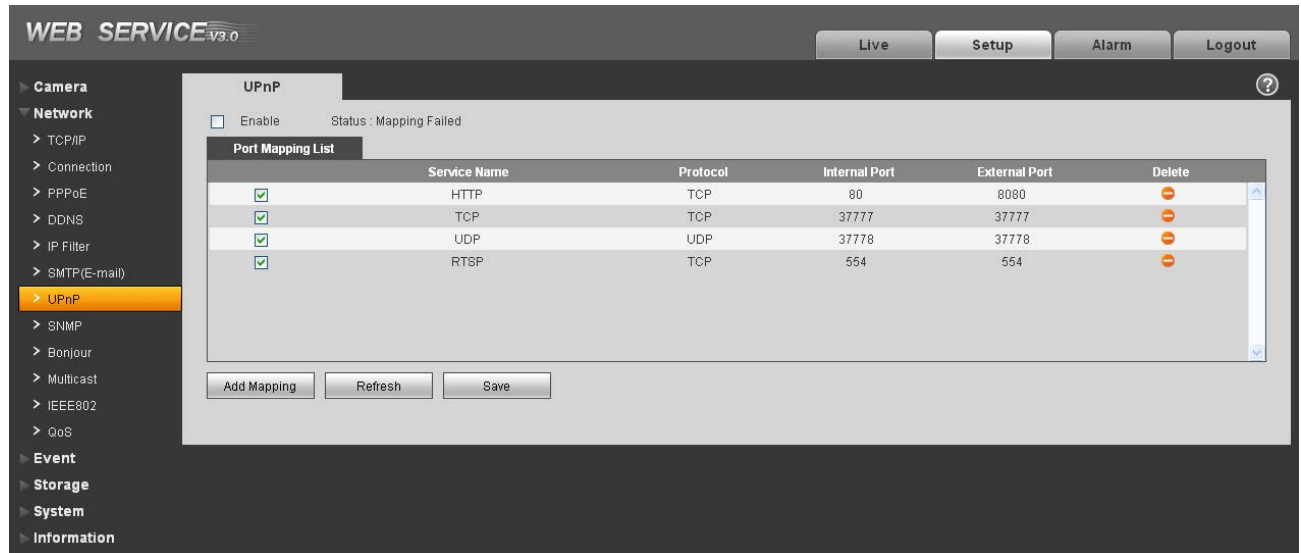


Figure 2-24

## 2.2.8 SNMP

The SNMP interface is shown as in Figure 2-25.

The SNMP allows the communication between the network management work station software and the proxy of the managed device. Please install the software such as MG MibBrowser 8.0c software or establish the SNMP service before you use this function. You need to reboot the device to activate the new setup.

**WEB SERVICE v3.0**

Live Setup Alarm Logout

**Camera**

**Network**

- > TCP/IP
- > Connection
- > PPPoE
- > DDNS
- > IP Filter
- > SMTP(E-mail)
- > UPnP
- > SNMP**
- > Bonjour
- > Multicast
- > IEEE802
- > QoS

**Event**

**Storage**

**System**

**Information**

**SNMP**

SNMP Port: 161 (1~65535)

Read Community: public

Write Community: private

Trap Address:

Trap Port: 162 (1~65535)

SNMP Version: ☐ SNMP v1 ☐ SNMP v2 ☐ SNMP v3

Default Refresh Save

Figure 2-25

Please refer to the following sheet for detailed information.

Parameter	Function
SNMP Port	The listening port of the proxy program of the device. It is a UDP port not a TCP port. The value ranges from 1 to 65535. The default value is 161
Read Community	It is a string. It is a command between the manage process and the proxy process. It defined the authentication, access control and the management relationship between one proxy and one group of the managers. Please make sure the device and the proxy are the same. The read community will read all the objects the SNMP supported in the specified name. The default setup is public.
Write Community	It is a string. It is a command between the manage process and the proxy process. It defined the authentication, access control and the management relationship between one proxy and one group of the managers. Please make sure the device and the proxy are the same. The read community will read/write/access all the objects the SNMP supported in the specified name. The default setup is write.
Trap address	The destination address of the Trap information from the proxy program of the device.



Parameter	Function
Trap port	The destination port of the Trap information from the proxy program of the device. It is for the gateway device and the client-end PC in the LAN to exchange the information. It is a non-protocol connection port. It has no effect on the network applications. It is a UDP port not TCP port. The value ranges from 1 to 165535. The default value is 162.
SNMP version	<ul style="list-style-type: none"> <li>● Check SNMP v1, system only processes the information of V1.</li> <li>● Check SNMP v2, system only processes the information of V2.</li> <li>● Check SNMP v3, you can set account and password. You need to set the corresponding account and password for security verification when the server wants to access the device. At the same time, the V1 and V2 option is null.</li> </ul>

### 2.2.9 Bonjour

The Bonjour interface is shown as below. See Figure 2-26.

Bonjour is based on the multicast DNS service from the Apple. The Bonjour device can automatically broadcast its service information and listen to the service information from other device.

You can use the browse of the Bonjour service in the same LAN to search the high-speed positioning system and then access if you do not know the high-speed positioning system information such as IP address.

You can view the server name when the high-speed positioning system is detected by the Bonjour.

Please note the safari browse support this function. Click the “Display All Bookmarks: and open the Bonjour, system can auto detect the high-speed positioning system of the Bonjour function in the LAN.



Figure 2-26

## 2.2.10 Multicast

The multicast interface is shown as in Figure 2-27.

Multicast is a transmission mode of data packet. When there is multiple-host to receive the same data packet, multiple-cast is the best option to reduce the broad width and the CPU load. The source host can just send out one data to transit. This function also depends on the relationship of the group member and group of the outer.

Here you can set multicast address and port. You also need to go to Live interface to set the protocol as Multicast.

The screenshot shows the 'WEB SERVICE v3.0' interface. At the top, there are tabs for 'Live', 'Setup', 'Alarm', and 'Logout'. On the left, a sidebar menu lists various network settings: Camera, Network (expanded), TCP/IP, Connection, PPPoE, DDNS, IP Filter, SMTP(E-mail), UPnP, SNMP, Bonjour, Multicast (highlighted), IEEE802, QoS, Event, Storage, System, and Information. The main content area is titled 'Multicast' and contains two input fields: 'Multicast Address' with the value '239 . 255 . 42 . 42' and a range '(224.0.0.0~239.255.255.255)', and 'Port' with the value '36666' and a range '(1025~65534)'. Below these fields are three buttons: 'Default', 'Refresh', and 'Save'.

Figure 2-27

## 2.2.11 IEEE802

IEEE802.1X works standing for local and metropolitan area networks and port based network access control protocol. It supports manual operation of the client to choose means of authenticating by which to control it to access to the Local Area Networks or not. It supports the ability to authenticate, to calculate fee, to ensure security and to maintain requirements. See Figure 2-28.

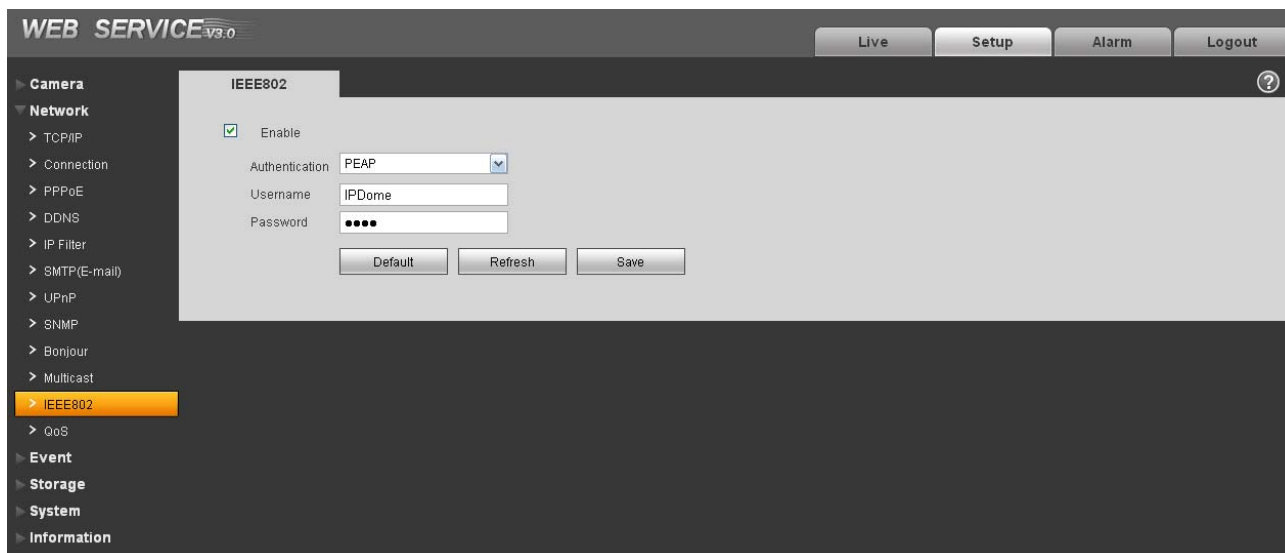


Figure 2-28

Please refer to the following sheet for detailed information.

Parameter	Function
Authentication	PEAP (protected EAP protocol).
Username	It needs the username to login, which is authenticated by the server.
Password	Please input password here.

### 2.2.12 Qos

The QoS interface is shown as below. See Figure 2-29.

Qos (Quality of Service) is network security mechanism. It is a technology to fix the network delay and jam problem and etc. For the network service, the quality of service includes the transmission bandwidth, delay, the packet loss and etc. We can guarantee the transmission bandwidth, lower the delay, and reduce the loss of the data packet and anti-dither to enhance the quality.

We can set the DSCP (Differentiated Services Code Point) of the IP to distinguish the data packet so that the router or the hub can provide different services for various data packets. It can select the different queues according to the priority of the packets and select the bandwidth of the each queue. It can also discard at the different ratio when the broad bandwidth is jam.



Figure 2-29

Please refer to the following sheet for detailed information.

Parameter	Function
Real-time monitor	The data packet of the network video monitor.
Command	The non-monitor packet such as device setup and search.

## 2.3 PTZ

### 2.3.1 Protocol

#### 2.3.1.1 Network PTZ Setup

Network PTZ setup interface is shown as in Figure 2-30.

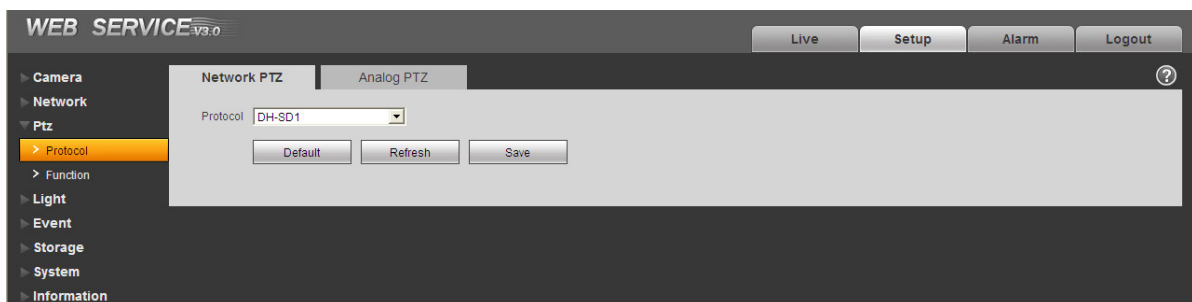


Figure 2-30

Please refer to the following sheet for detailed information.

Parameter	Function
Protocol	You can select from the dropdown list such as PELCOP, PELCOD.

### 2.3.1.2 Analog PTZ

The analog PTZ is shown as in Figure 2-31.

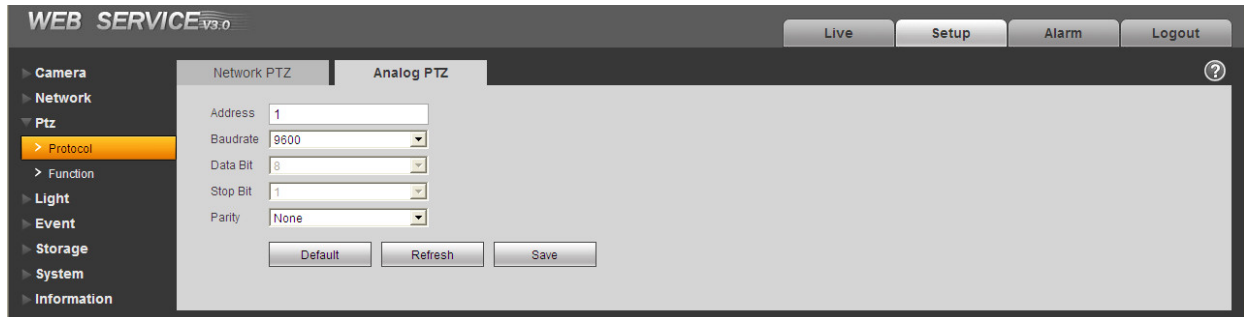


Figure 2-31

Please refer to the following sheet for detailed information.

Parameter	Function
Address	It is to set the corresponding speed dome address. The default setup is 1.
Baud rate	It is to set the baud rate of the camera. The default setup is 9600.
Data bit	The default setup is 8.
Stop bit	The default setup is 1.
Parity	You can set protocol parity mode. The default setup is none.

### 2.3.2 Function

In this part, you can operate the PTZ of the camera and control PTZ movement.

Parameter	Function
Preset	Set camera preset.
Tour	Set camera tour. Max 8 tours.
Scan	Set camera scan.
Pattern	Set camera pattern.
Pan	Set camera pan operation.
PTZ speed	Set PTZ movement speed.

Idle motion	Set camera idle operation.
Power up	Set camera operation when system boots up.
PTZ limit	Set camera PTZ limit.
PTZ restart	Restart camera PTZ.
Default	Restore camera PTZ default setup.

### 2.3.2.1 Preset

Preset interface is shown as in Figure 2-32.

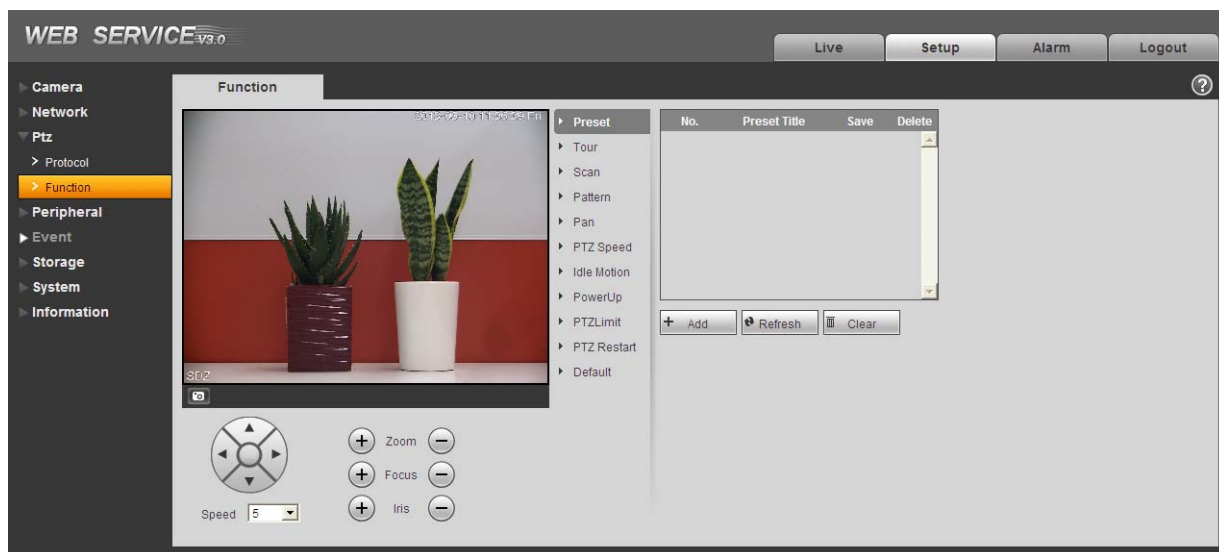


Figure 2-32

Please refer to the following sheet for detailed information.

Parameter	Function
Preset No.	Set preset No. It becomes valid after you set.
Preset title	Set preset name. You can input self-defined preset name here.
Save	Save current preset setup.
Delete	Delete corresponding preset.
Add	Click it to add a new preset.
Refresh	It is to refresh interface status.

Clear	Clear all presets setup.
-------	--------------------------

### 2.3.2.2 Tour

Tour interface is shown as below. See Figure 2-33.

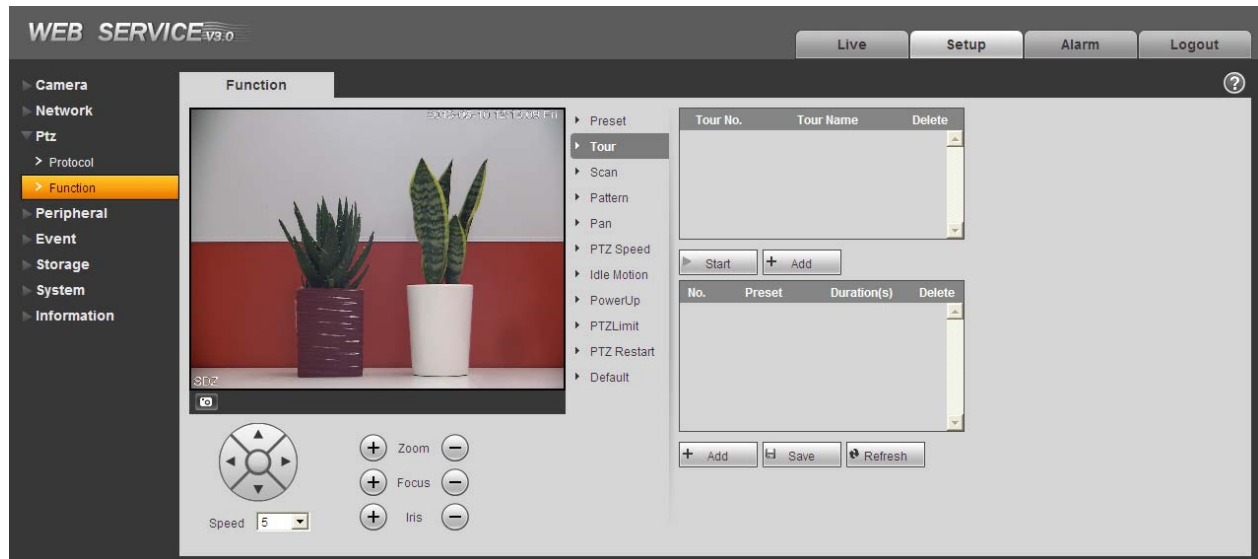


Figure 2-33

Please refer to the following sheet for detailed information.

Parameter	Function
Tour No.	System auto allocates.
Tour title	Set tour name. You can input self-defined tour name here.
Start	Begin tour. <b>Please note this function is null if you have not set a tour.</b>
Add	Click it to add a new tour.
Preset	Click Add button, you can add a new tour. The default preset value is 1. Double click tour No, you can see a dropdown list for you to select. <b>Please set presets before you use tour function.</b>
Duration (Interval)	It is to set the staying time of the tour.
Save	Click it to save current setup.

Refresh	Refresh current interface.
---------	----------------------------

### 2.3.2.3 Scan

Scan interface is shown as below. See Figure 2-34.

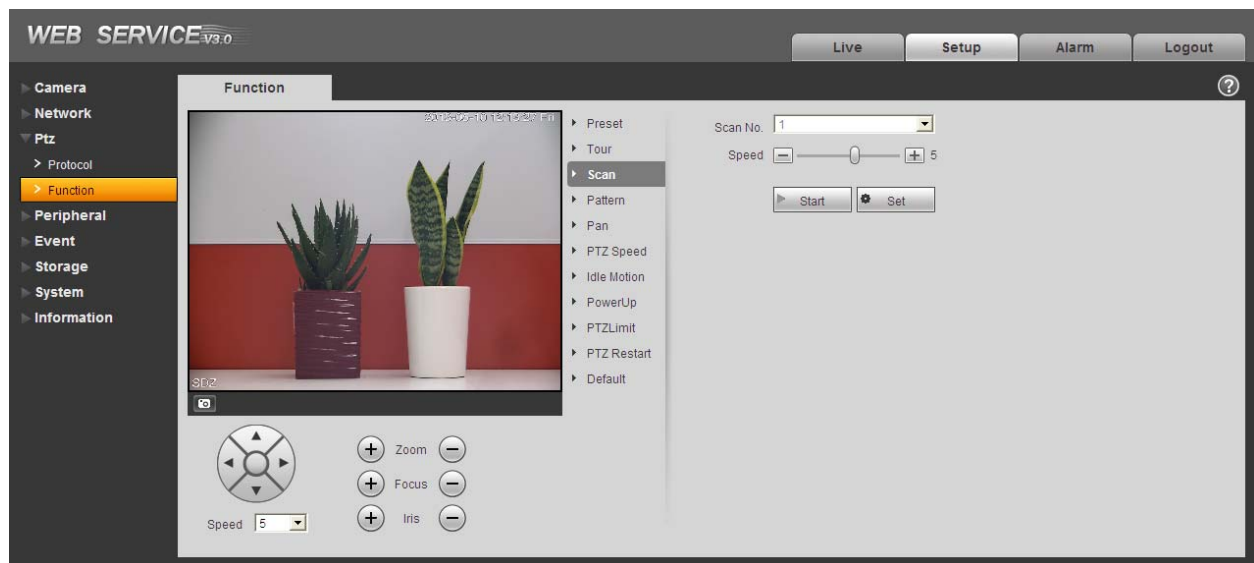


Figure 2-34

Please refer to the following sheet for detailed information.

Parameter	Function
Scan No.	System auto allocates.
Speed	Set scan speed here. <b>You can not set speed when camera is running scan.</b>
Start	Begin scan. <b>Please note this function is null if you have not set a scan.</b>
Set	Click set button, you can set left limit and right limit.
Left limit	Set camera left limit.
Right limit	Set camera right limit.

### 2.3.2.4 Pattern

Pattern interface is shown as below. See Figure 2-35.



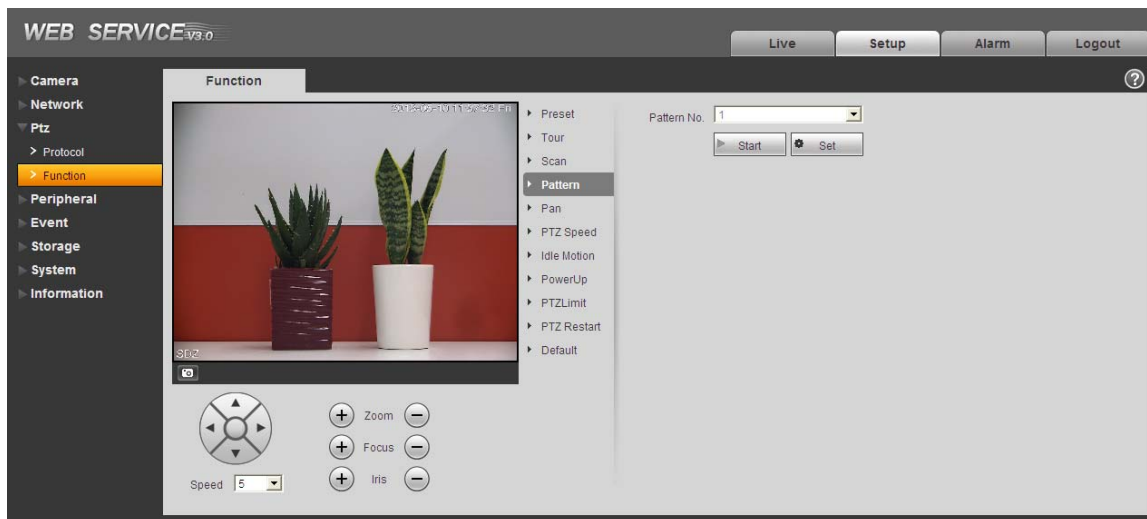


Figure 2-35

Please refer to the following sheet for detailed information.

Parameter	Function
Pattern No.	System auto allocates.
Start	Begin pattern. <b>Please note this function is null if you have not set a pattern.</b>
Set	Click it you can see start/stop record buttons.
Start record	Click it to begin recording pattern setup.
Stop record	Click it to stop recording pattern setup.

#### 2.3.2.5 Pan

Pan interface is shown as below. See Figure 2-36.

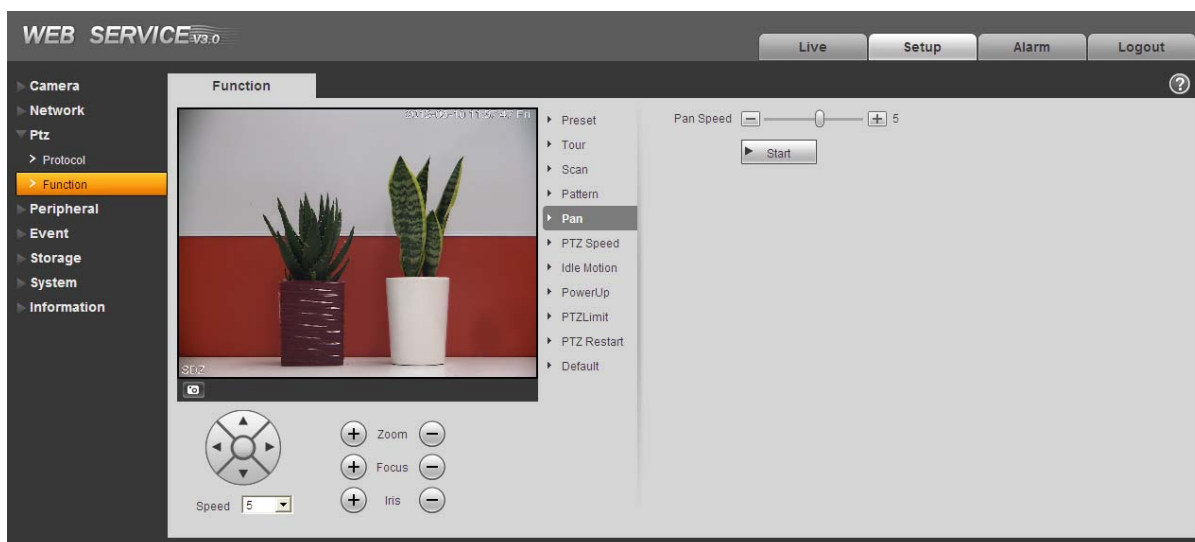


Figure 2-36

Please refer to the following sheet for detailed information.

Parameter	Function
Rotation speed	It is to set camera rotation speed.
Start	Check it to start rotation movement.

### 2.3.2.6 PTZ speed

PTZ speed interface is shown as below. See Figure 2-37.

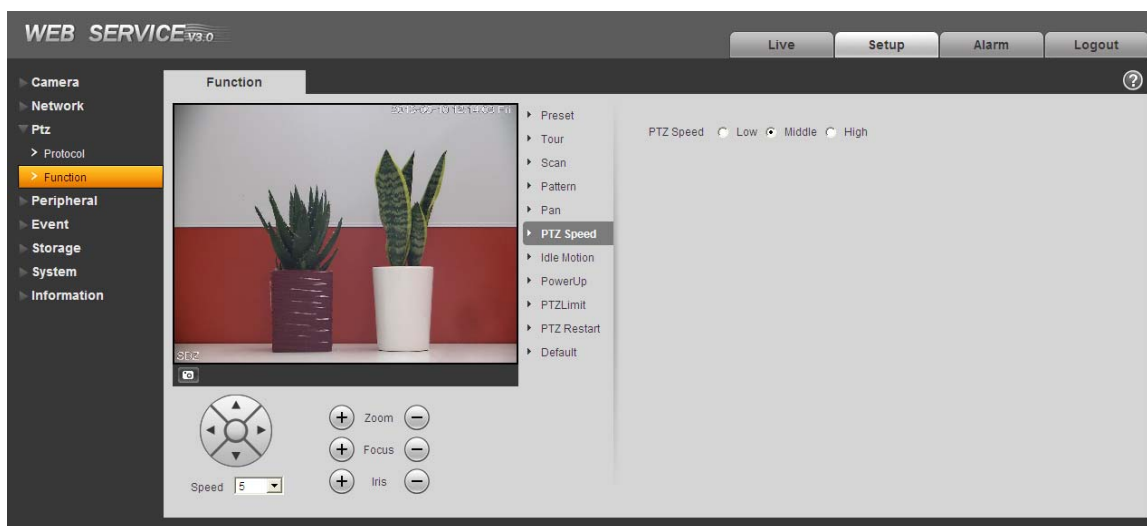


Figure 2-37

Please refer to the following sheet for detailed information.

Parameter	Function
PTZ speed	Here you can set camera PTZ speed.

### 2.3.2.7 Idle Motion

Idle motion interface is shown as below. See Figure 2-38.

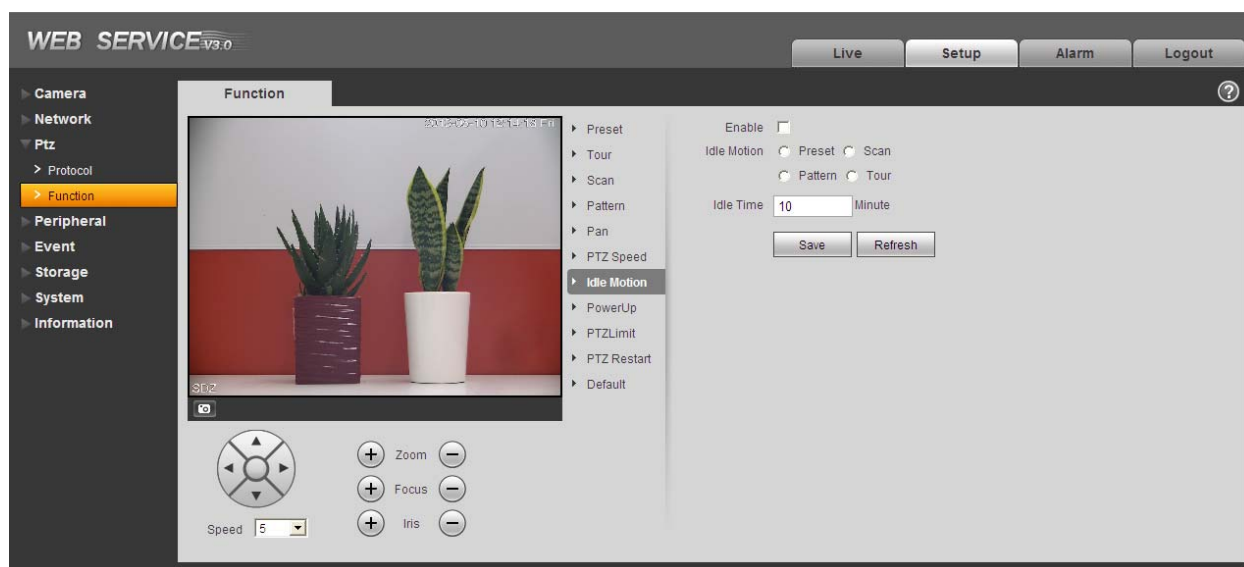


Figure 2-38

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Check the box here to enable idle motion function.
Idle Motion	Here you can set preset, scan, pattern, tour. <b>Please note you need to set the corresponding operation first if you want to use this function.</b>
Idle time	Set idle time.

### 2.3.2.8 Power up

Power up interface is shown as below. See Figure 2-39.

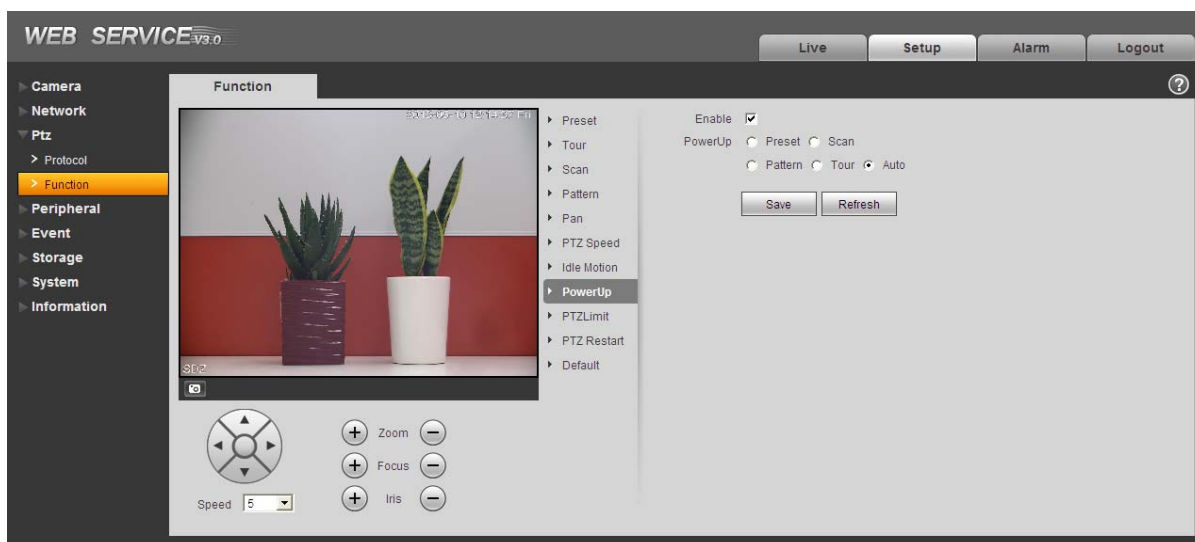


Figure 2-39

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Check the box here to enable power up function.
Power up	Here you can set preset, scan, pattern, tour and auto. <b>Please note you need to set the corresponding function first if you want to use it.</b>

#### 2.3.2.9 PTZ Limit

PTZ limit interface is shown as below. See Figure 2-40.

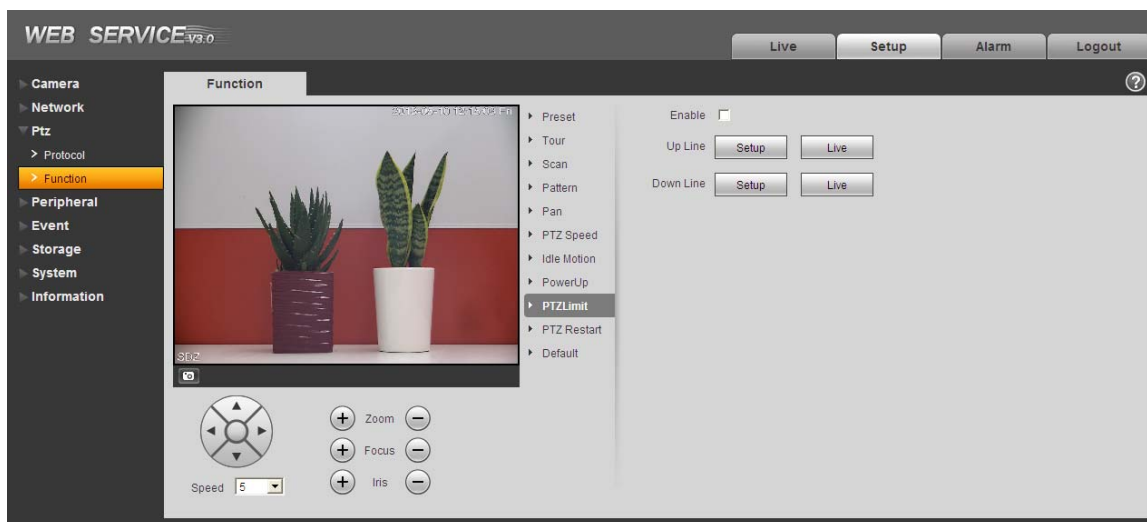


Figure 2-40

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Check the box here to enable PTZ limit function.
Up/down line	It is for you to set up/down line. Support preview function.

### 2.3.2.10 PTZ Restart

PTZ restart interface is shown as below. See Figure 2-41.

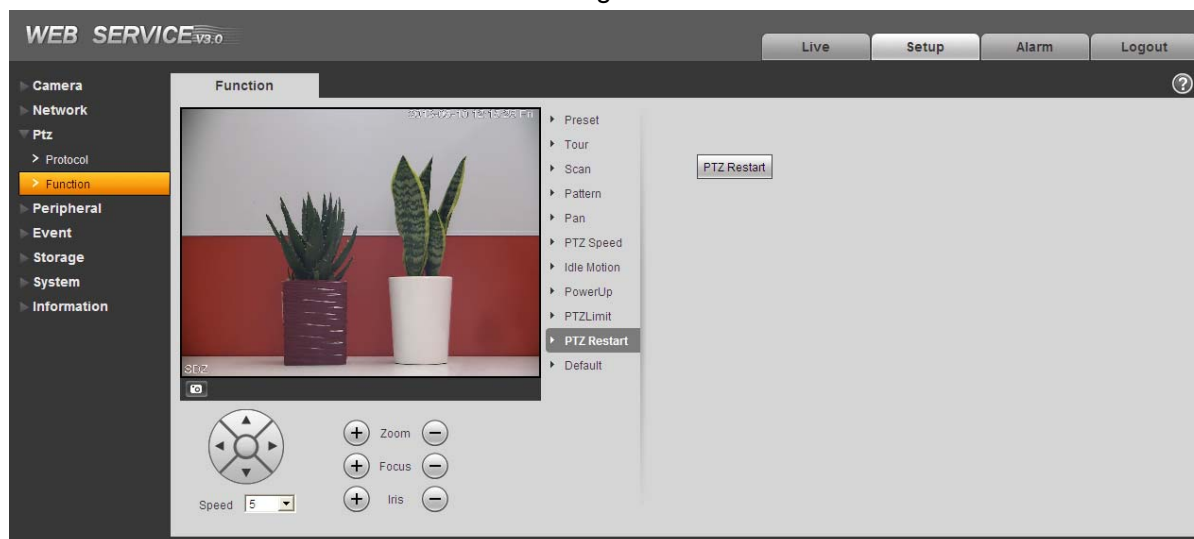


Figure 2-41

Please refer to the following sheet for detailed information.

Parameter	Function
PTZ restart	It is to reboot PTZ.

### 2.3.2.11 Default

Default interface is shown as below. See Figure 2-42.

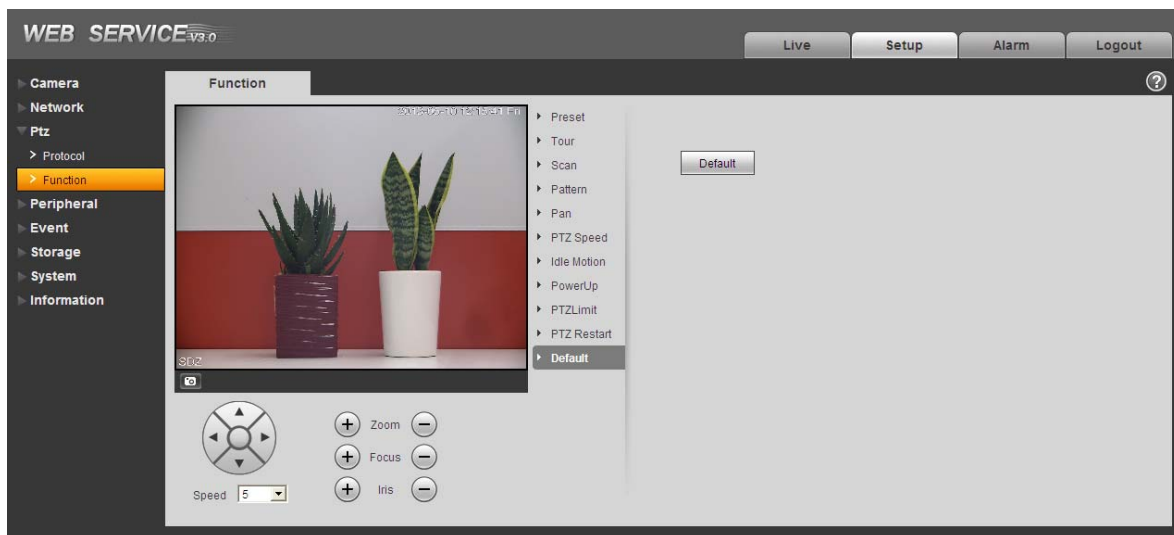


Figure 2-42

Please refer to the following sheet for detailed information.

Parameter	Function
Default	Restore PTZ factory default setup.

## 2.4 Peripheral

### 2.4.1 IR Light

The IR light interface is shown as in Figure 2-43.

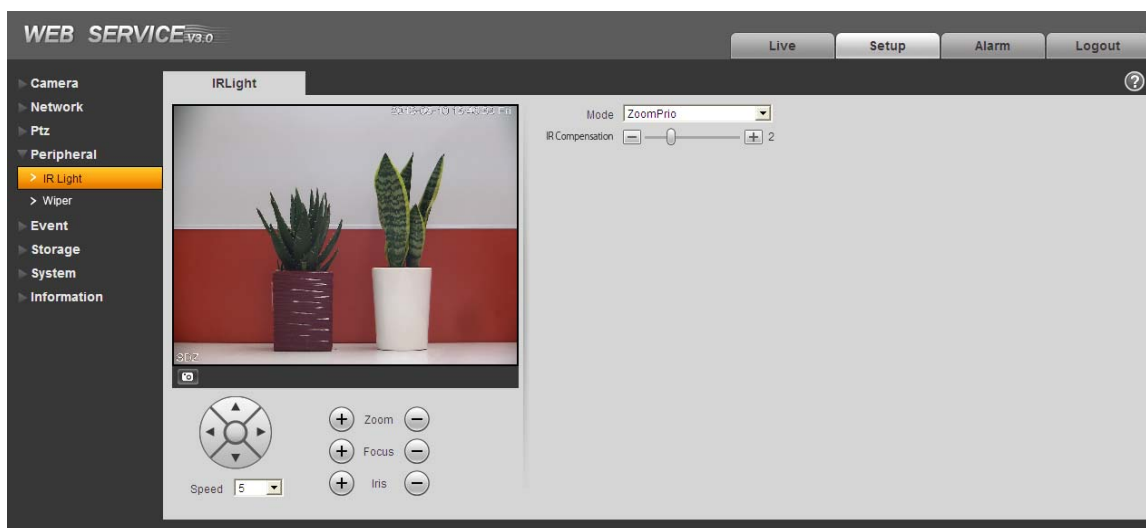


Figure 2-43

Please refer to the following sheet for detailed information.

Parameter	Function
Mode	There are two modes: zoom priority/manual priority.
IR compensation	It is the IR light whole brightness compensation.

## 2.4.2 Wiper

The wiper interface is shown as in Figure 2-44.



Figure 2-44

Please refer to the following sheet for detailed information.

Parameter	Function
Mode	There are two modes: manual/schedule (default).
Time interval	You can set the interval ranging from the wiper stop to start.
Period	Check the box here to enable this function. You can set the wiper enable period. Please note it is for schedule mode only.

## 2.5 Event

### 2.5.1 Video detect

#### 2.5.1.1 Motion Detect

The motion detect interface is shown as in Figure 2-45.

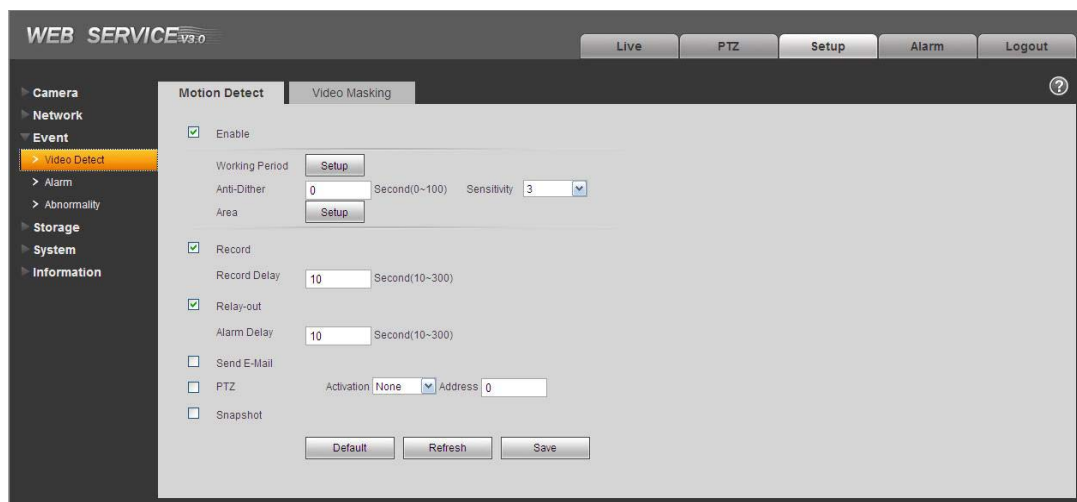


Figure 2-45

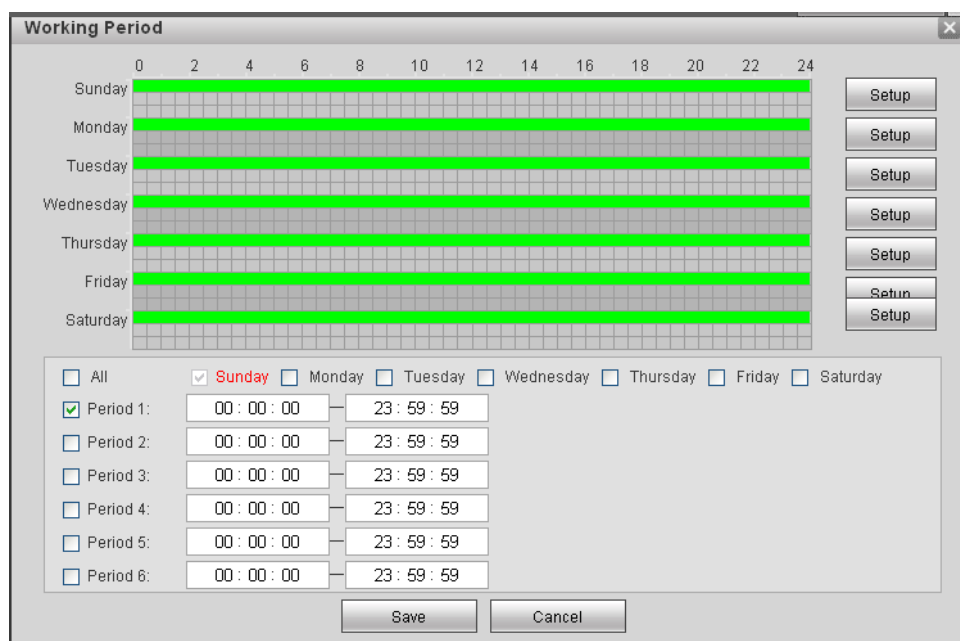


Figure 2-46



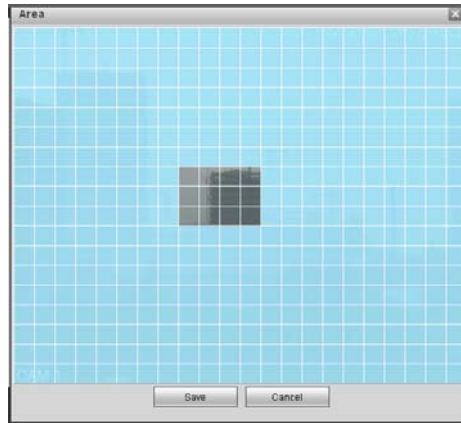


Figure 2-47

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	You need to check the box to enable motion detection function.
Sensitivity	There are six levels. The sixth level has the highest sensitivity.
Region	<ul style="list-style-type: none"> <li>• There are six levels. The sixth level has the highest sensitivity.</li> <li>• Region: If you select motion detection type, you can click this button to set motion detection zone. The light blue zones are the valid motion detect area. All area are the valid motion detect zone by default. You can use mouse to set invalid area.</li> <li>• Do remember clicking OK button to save your motion detection zone setup.</li> </ul>
Working Period	<ul style="list-style-type: none"> <li>• Motion detection function becomes activated in the specified periods. See Figure 2-46.</li> <li>• There are six periods in one day. Please draw a circle to enable corresponding period.</li> <li>• Select date. If you do not select, current setup applies to today only. You can select all week column to apply to the whole week.</li> <li>• Click OK button, system goes back to motion detection interface; please click save button to exit.</li> </ul>
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0s to 100s.

Parameter	Function
Relay out	Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when alarm occurs. <b>Please note the relay output number here is for reference only. The alarm output number may vary due to different series products.</b>
Alarm Delay	System can delay the alarm output for specified time after motion detect alarm ended. The value ranges from 10s to 300s.
Record channel	System auto activates motion detection channel to record once motion detect alarm occurs (working with motion detection function). Please note you need to go to Storage-> Schedule to set motion detect record period and go to Storage->Record control to set current channel as auto record.
Record Delay	System can delay the record for specified time after motion detect alarm ended. The value ranges from 10s to 300s.
Send Email	If you enabled this function, System can send out email to alert you when alarm occurs and ends.
PTZ	<ul style="list-style-type: none"> <li>Here you can set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm.</li> <li>The event type includes: preset, tour and pattern and etc.</li> </ul>
Snapshot	It is snapshot activation function.

### 2.5.1.2 Video Masking

The video masking interface is shown as in Figure 2-48.

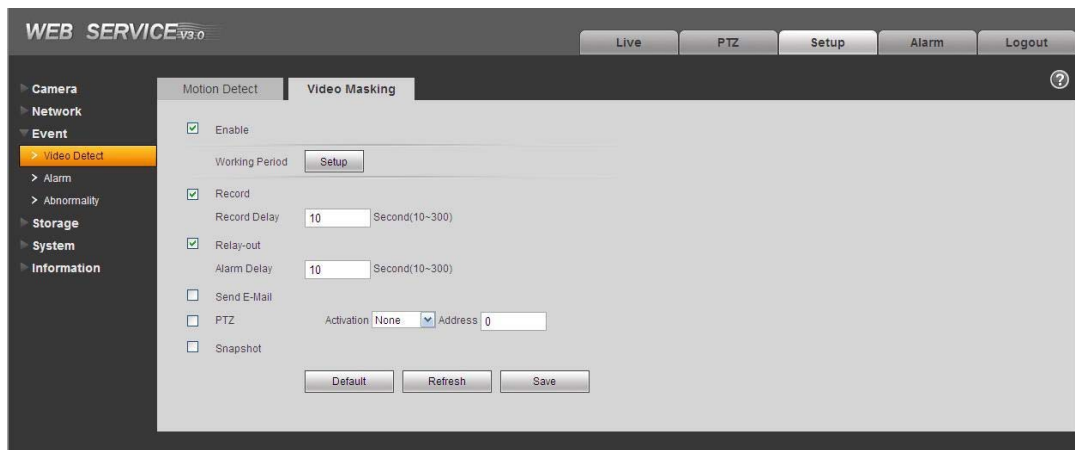


Figure 2-48

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	You need to check the box to enable video masking function.
Sensitivity	There are six levels. The sixth level has the highest sensitivity.
Working Period	<ul style="list-style-type: none"> <li>• Video masking function becomes activated in the specified periods.</li> <li>• There are six periods in one day. Please draw a circle to enable corresponding period.</li> <li>• Select date. If you do not select, current setup applies to today only. You can select all week column to apply to the whole week.</li> <li>• Click OK button, system goes back to motion detection interface; please click save button to exit.</li> </ul>
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0s to 100s.
Relay out	<p>Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when video masking alarm occurs.</p> <p><b>Please note the relay output number here is for reference only. The alarm output number may vary due to different series products.</b></p>
Alarm Delay	System can delay the alarm output for specified time after video masking alarm ended. The value ranges from 10s to 300s.
Record channel	System auto activates motion detection channel to record once video masking alarm occurs (working with motion detection function). Please note you need to go to Storage-> Schedule to set motion detect record period and go to Storage->Record control to set current channel as auto record.
Record Delay	System can delay the record for specified time after video masking alarm ended. The value ranges from 10s to 300s.
Email	If you enabled this function, System can send out email to alert you when alarm occurs.
PTZ	<ul style="list-style-type: none"> <li>• Here you can set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm.</li> <li>• The event type includes: preset, tour and pattern and etc.</li> </ul>
Snapshot	It is snapshot activation function.

## 2.5.2 Alarm

### 2.5.2.1 Alarm activation

The alarm activation interface is shown as in Figure 2-49.

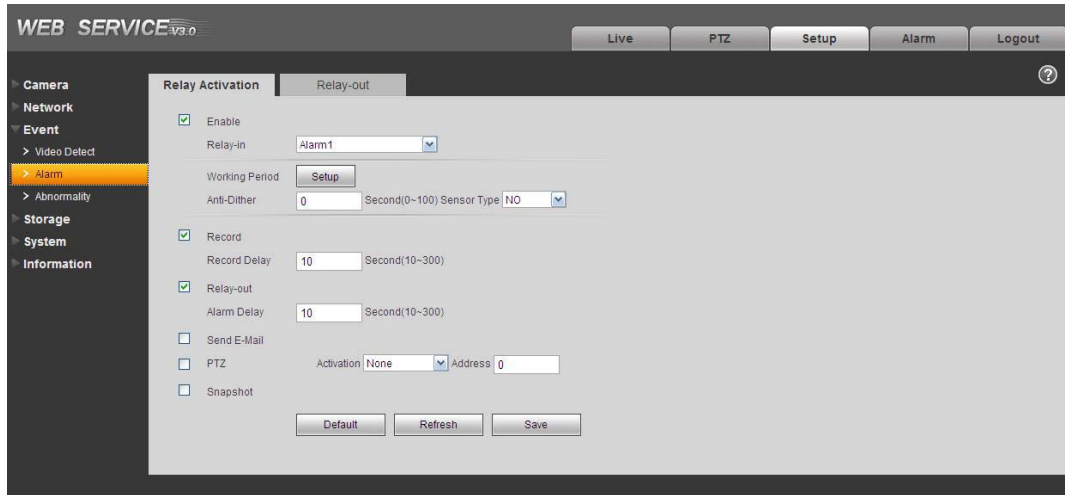


Figure 2-49

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	You need to check the box to enable this function.
Working Period	<ul style="list-style-type: none"> <li>This function becomes activated in the specified periods.</li> <li>There are six periods in one day. Please draw a circle to enable corresponding period.</li> <li>Select date. If you do not select, current setup applies to today only. You can select all week column to apply to the whole week.</li> <li>Click OK button, system goes back to motion detection interface; please click save button to exit.</li> </ul>
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0s to 100s.
Sensor type	There are two options: NO/NC. From NO to NC, system enables alarm. From NC to NO, system disables alarm.
Relay out	<ul style="list-style-type: none"> <li>Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when alarm occurs.</li> <li><b>Please note the relay output number here is for reference only. The alarm output number may vary due to different series products.</b></li> </ul>
Alarm Delay	System can delay the alarm output for specified time after alarm ended. The value ranges from 10s to 300s.

Parameter	Function
Record Channel	System auto activates motion detection channel to record once alarm occurs (working with motion detection function). Please note you need to go to Storage-> Schedule to set current channel as general record.
Record Delay	System can delay the record for specified time after alarm ended. The value ranges from 10s to 300s.
Send Email	If you enabled this function, System can send out email to alert you when alarm occurs and ends.
PTZ	<ul style="list-style-type: none"> <li>Here you can set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm.</li> <li>The event type includes: preset, tour and pattern.</li> </ul>
Snapshot	You need to input capture channel number so that system can backup motion detection snapshot file.

### 2.5.2.2 Relay output

The relay output interface is shown as in Figure 2-50.

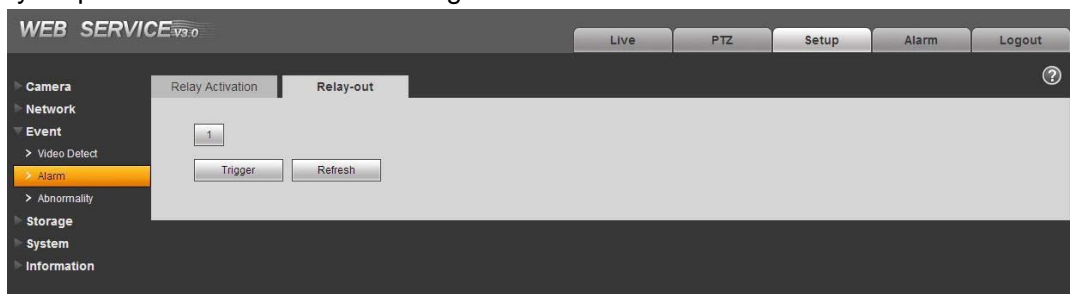


Figure 2-50

Please refer to the following sheet for detailed information.

Parameter	Function
Alarm output	<p>There are two output channels. Please click the corresponding button. If you want to enable the alarm activation output function, please press the corresponding button and then trigger.</p> <p><b>Please note the interface here is for reference only. The alarm output number may vary due to different series products.</b></p>
Trigger	When the alarm output channel is open, the output port can immediately output an alarm once it occurred.
Refresh	Refresh alarm output status.

### 2.5.3 Abnormity

It includes five statuses: No SD card, capacity warning, SD card error, and disconnection and IP conflict. There are two interfaces for you reference. See Figure 2-51 through Figure 2-55.

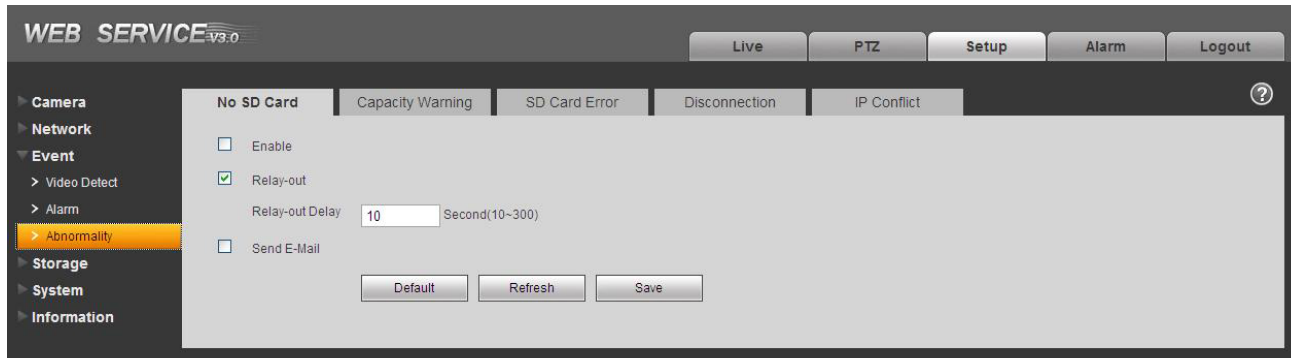


Figure 2-51

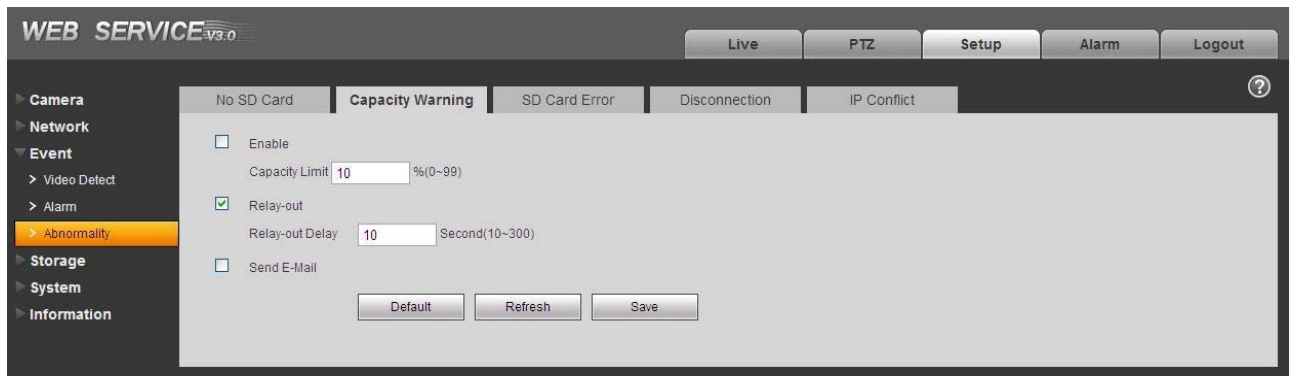


Figure 2-52



Figure 2-53

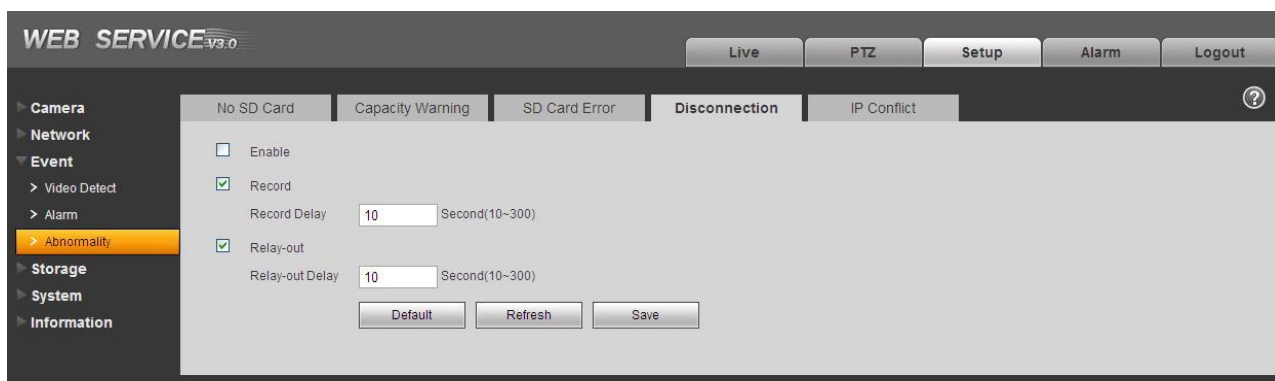


Figure 2-54

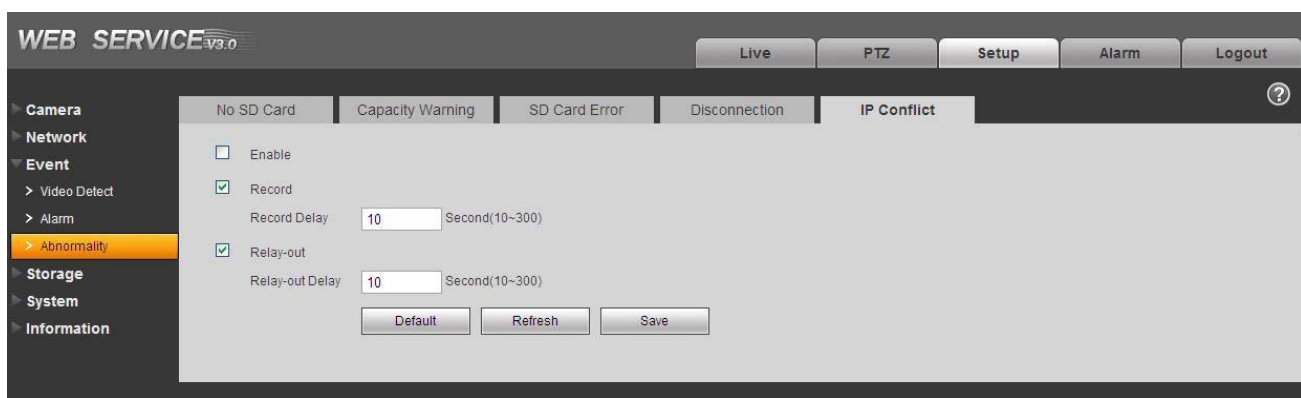


Figure 2-55

Please refer to the following sheet for detailed information.

Parameter	Function
Event Type	<ul style="list-style-type: none"> <li>The abnormal events include: no disk, no space, disk error, net error, offline, IP conflict.</li> <li>You need to draw a circle to enable this function.</li> </ul>
Record	<p>System auto activates channel to record once an alarm occurs (For offline type only. See Figure 2-55. ).</p> <p>You need to check the box to enable this function.</p>
Record Delay	<p>System can delay the record for specified time after alarm ended. The value ranges from 10s to 300s.</p>
Relay Out	<p>The corresponding alarm output channel when alarm occurs. You need to check the box to enable this function.</p>

Parameter	Function
Relay out Delay	The alarm output can delay for the specified time after alarm stops. The value ranges from 10s to 300s.
Send email	If you enable this function, system can send out email to alarm the specified user.

## 2.6 Storage

### 2.6.1 Record schedule and snapshot schedule

In these two interfaces, you can add or remove the schedule record/snapshot setup. See Figure 2-56. There are three record modes: general (auto), motion detect and alarm. There are six periods in one day. Please make sure you have enabled the corresponding record mode in the Setup->Storage->Conditions.

You can view the current time period setup from the color bar.

- Green color stands for the general record/snapshot.
- Yellow color stands for the motion detect record/snapshot.
- Red color stands for the alarm record/snapshot.

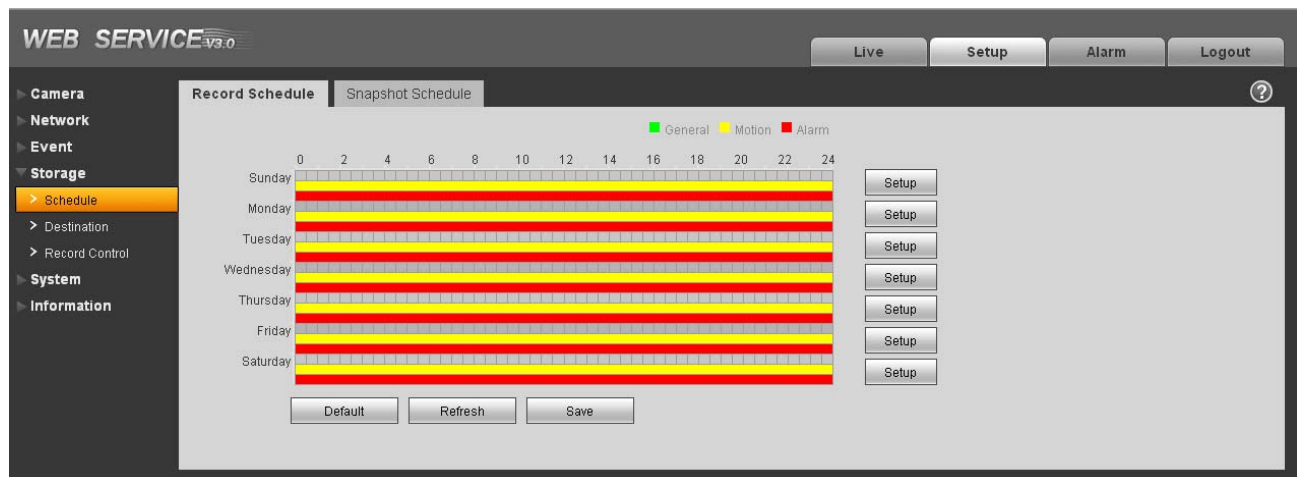


Figure 2-56

### 2.6.2 Destination

The destination interface is shown as in Figure 2-57.

It is to set the storage mode of the high-speed positioning system record file or snapshot pictures. There are two options: local storage/FTP. You can only select one mode. System can save according to the event types. It is corresponding to the three modes (general/motion/alarm) in the Schedule interface. Please check the box to enable the save functions.



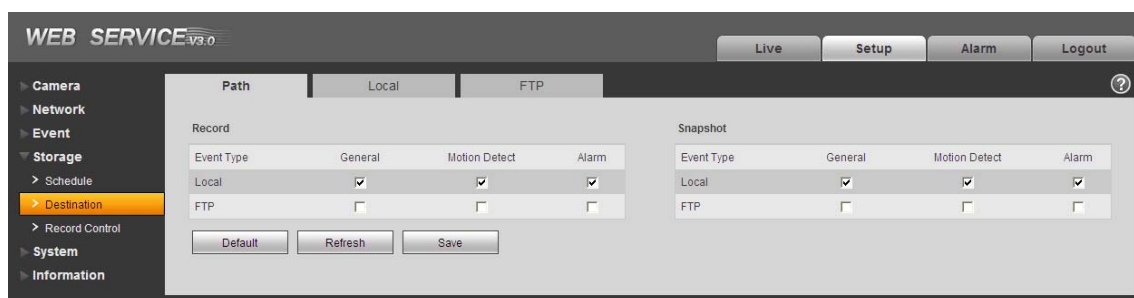


Figure 2-57

Please refer to the following sheet for detailed information.

Parameter	Function
Event Type	It includes: general, motion detect and alarm.
Local	It is to save in the SD card.
FTP	It is to save in the FTP server.

The local interface is shown as in Figure 2-58. Here you can view local SD card information. You can also operate the read-only, write-only, hot swap and format operation.

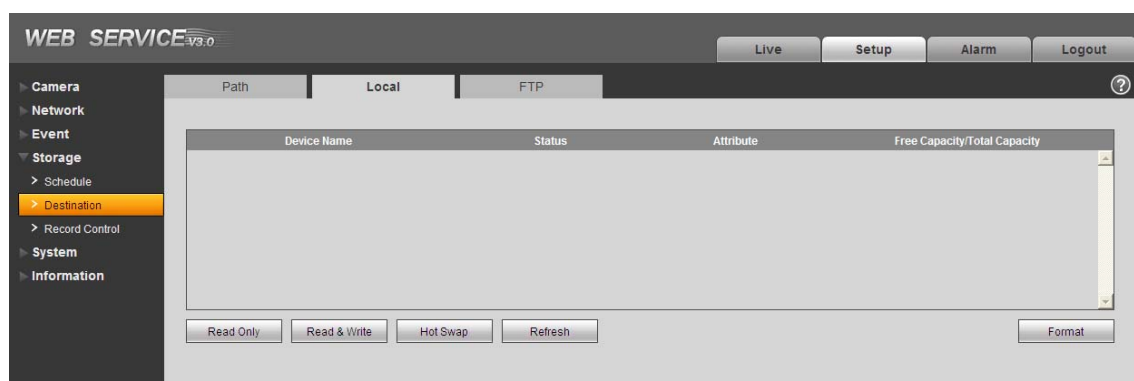


Figure 2-58

The FTP interface is shown as in Figure 2-59. You need to check the box to enable the FTP function. When network disconnect occurred or there is malfunction. Emergency storage can save the record/snapshot picture to the local SD card.

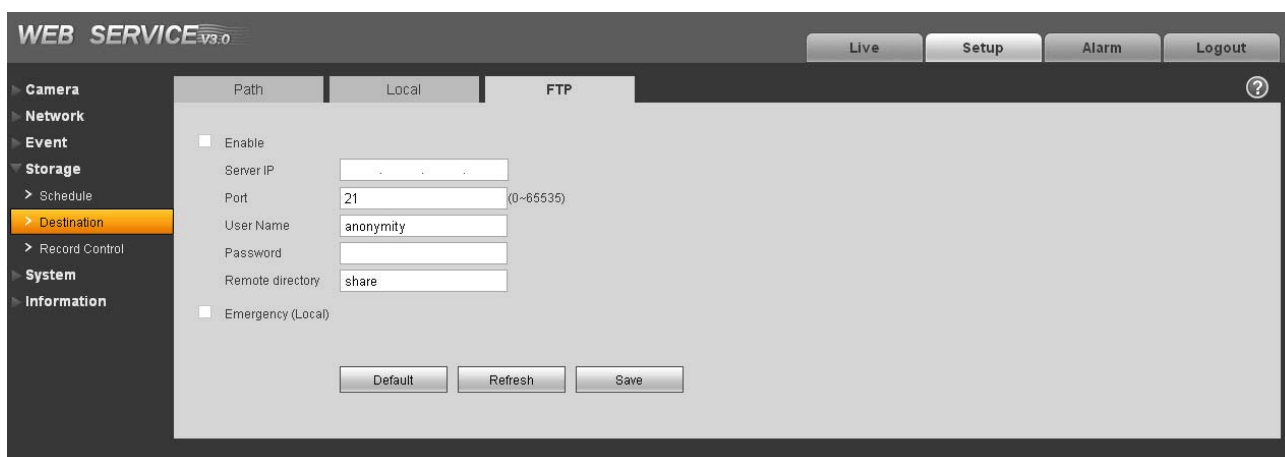


Figure 2-59

### 2.6.3 Record control

The record control interface is shown as in Figure 2-60.

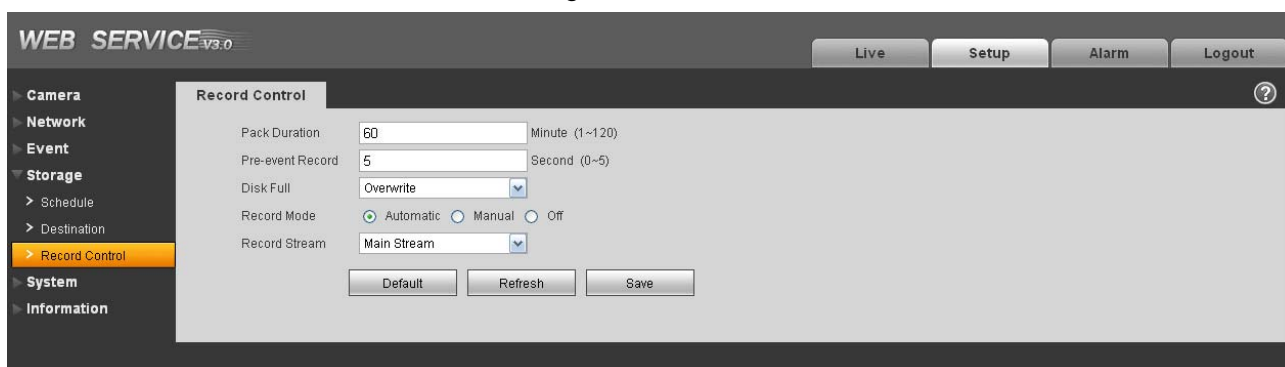


Figure 2-60

Please refer to the following sheet for detailed information.

Parameter	Function
Pack Duration	Here you can select file size. Default setup is 60 minutes.
Pre-record	<p>Please input pre-record value here.</p> <p>For example, you can input 4 here so that system can read the previous four seconds video before the alarm occurrence from the buffer and record the 4 seconds video in the file.</p> <p>Please note, if there is no record when alarm record or motion detect record occurred, system can record the N seconds' video before the event occurrence in the file.</p>

Disk Full	There are two options: stop recording or overwrite the previous files when HDD is full. <ul style="list-style-type: none"> <li>● Stop: Current working HDD is overwriting or current HDD is full, it will stop record.</li> <li>● Overwrite: Current working HDD is full; it will overwrite the previous file.</li> </ul>
Record Mode	There are three modes: Auto/manual/close.
Record Bit Stream	You can select main stream or extra stream.

## 2.7 System

### 2.7.1 General

The general interface includes the general setup and the date/time setup.

#### 2.7.1.1 General

The general interface is shown as in Figure 2-61.

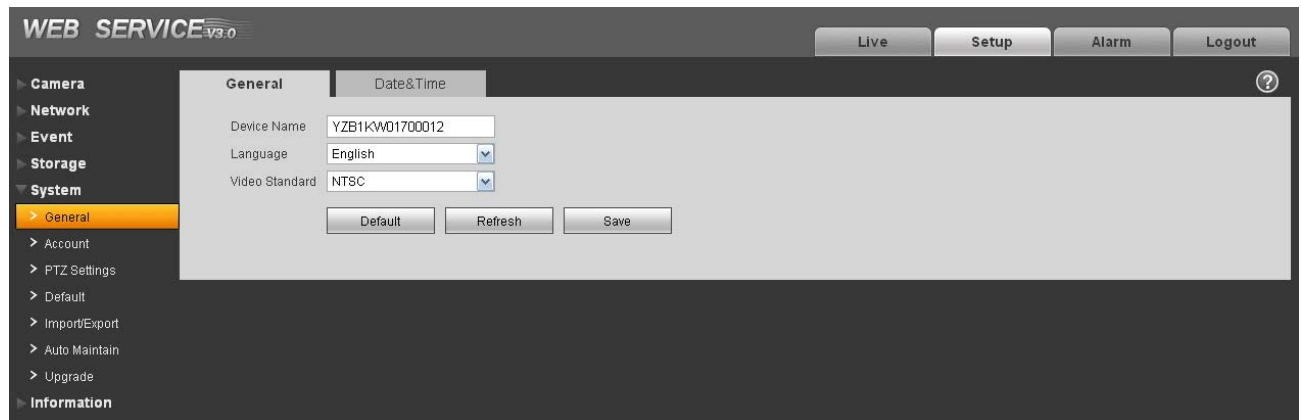


Figure 2-61

Please refer to the following sheet for detailed information.

Parameter	Function
Device Name	It is to set device name.
Video Standard	This is to display video standard.
Language	You can select the language from the dropdown list. <b>Please note the device needs to reboot to get the modification activated.</b>

### 2.7.1.2 Date and time

The date and time interface is shown as in Figure 2-62

WEB SERVICE v3.0

Live Setup Alarm Logout

Camera  
Network  
Event  
Storage  
System  
General  
Account  
PTZ Settings  
Default  
Import/Export  
Auto Maintain  
Upgrade  
Information

General Date & Time

Date Format Year-Month-Day  
Time Format 24-Hour-based System  
Time Zone GMT+08:00  
Current Time 2012-06-13 16:39:11 Sync PC  
☐ DST Enable  
DST Type ☐ Date ☒ Week  
Start Time Jan 1st Sunday 00:00:00  
End Time Jan 2nd Monday 00:00:00  
☐ Synchronize with NTP  
NTP Server clock.isc.org  
Port 123  
Update Period 60 Minute(0~30)  
Default Refresh Save

Figure 2-62

Please refer to the following sheet for detailed information.

Parameter	Function
Date format	Here you can select date format from the dropdown list.
Time Format	There are two options: 24-H and 12-H.
Time zone	The time zone of the device.
System time	It is to set system time. It becomes valid after you set.
Sync PC	You can click this button to save the system time as your PC current time.
DST	Here you can set day night save time begin time and end time. You can set according to the date format or according to the week format.
NTP	You can check the box to enable NTP function.
NTP server	You can set the time server address.
Port	It is to set the time server port.
Update period	It is to set the sync periods between the device and the time server. The update function is null if the value is 0.

## 2.7.2 Account

### Note:

- For the character in the following user name or the user group name, system max supports 6-digits. The space in the front or at the end of the string is null. The valid string includes: character, number, and underline.
- The max user amount is 20 and the max group amount is 8. You can add or delete user group.
- The factory default setup includes two levels: user and admin. .User management adopts group/user modes. The user name and the group name shall be unique. One user shall be included in only one group.

### 2.7.2.1 User name

In this interface you can add/remove user and modify user name. See Figure 2-63.

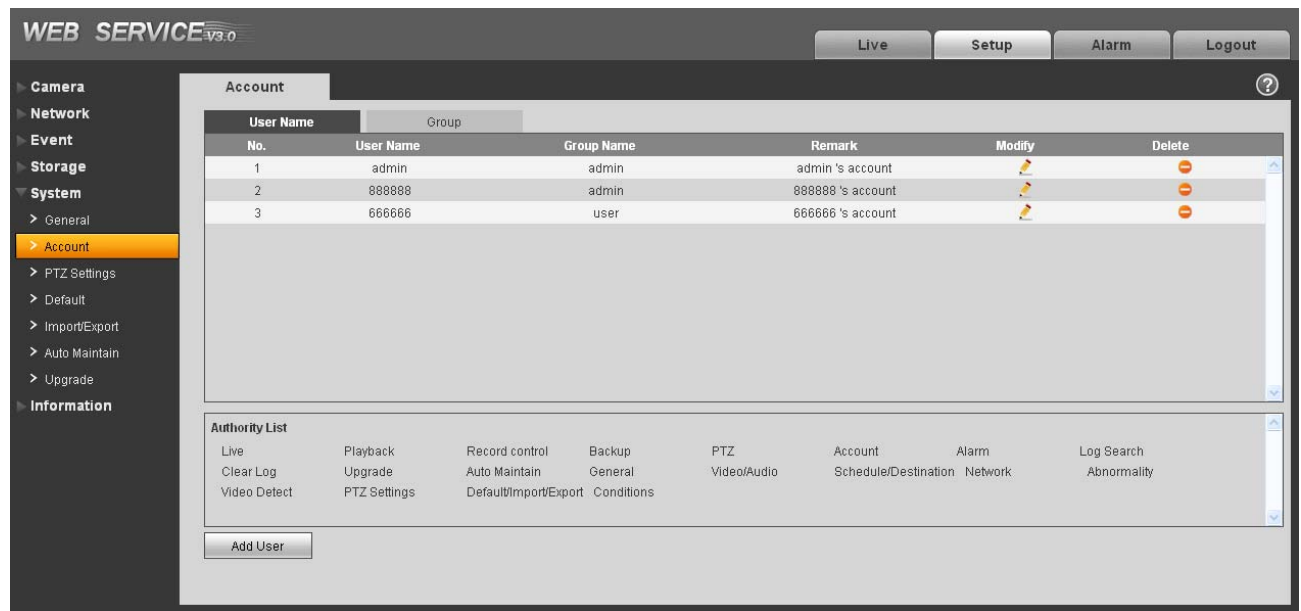



Figure 2-63

**Add user:** It is to add a name to group and set the user rights. See Figure 2-64.

Here you can input the user name and password and then select one group for current user.

Please note the user rights shall not exceed the group right setup.

For convenient setup, please make sure the general user has the lower rights setup than the admin.

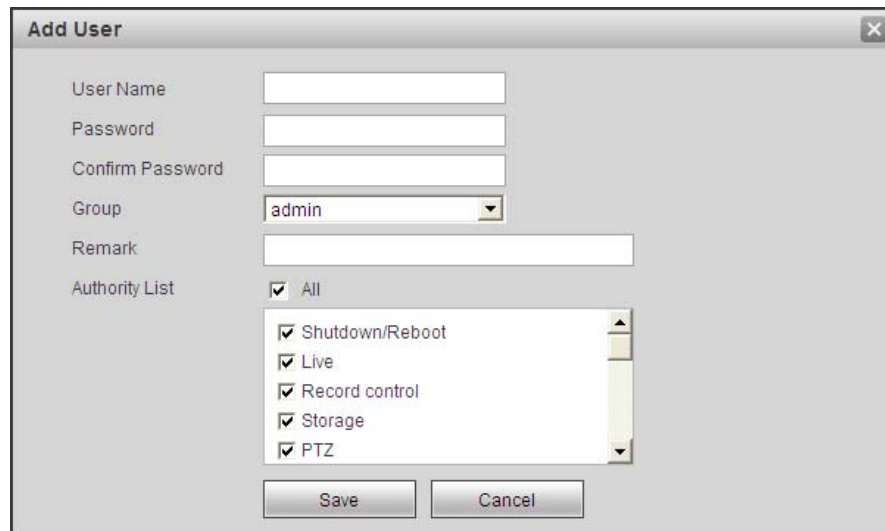

The 'Add User' dialog box contains the following fields and options:

- User Name: Text input field
- Password: Text input field
- Confirm Password: Text input field
- Group: Dropdown menu with 'admin' selected
- Remark: Text input field
- Authority List:
  - ☒ All
  - ☒ Shutdown/Reboot
  - ☒ Live
  - ☒ Record control
  - ☒ Storage
  - ☒ PTZ
- Buttons: Save, Cancel

Figure 2-64


### Modify user

It is to modify the user property, belonging group, password and rights. See Figure 2-65.

#### Modify password

It is to modify the user password. You need to input the old password and then input the new password twice to confirm the new setup. Please click the OK button to save.

For the user of the account rights, he can modify the password of other users.

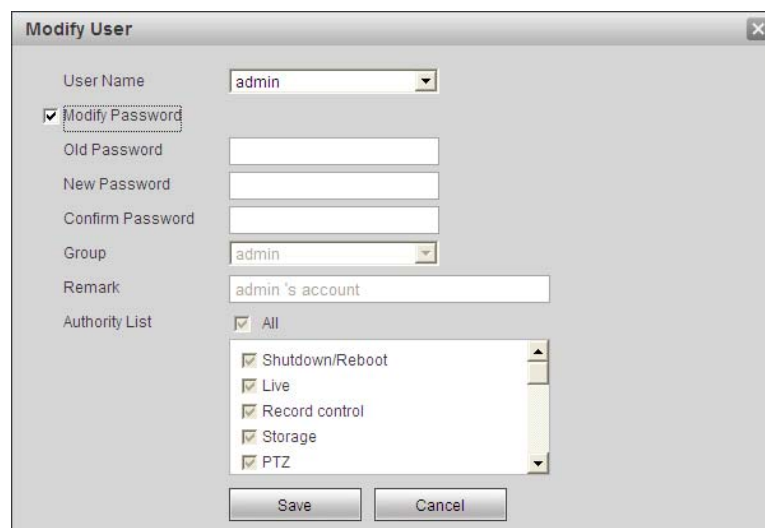

The 'Modify User' dialog box contains the following fields and options:

- User Name: Dropdown menu with 'admin' selected
- ☒ Modify Password: Checked checkbox
- Old Password: Text input field
- New Password: Text input field
- Confirm Password: Text input field
- Group: Dropdown menu with 'admin' selected
- Remark: Text input field with 'admin's account' entered
- Authority List:
  - ☒ All
  - ☒ Shutdown/Reboot
  - ☒ Live
  - ☒ Record control
  - ☒ Storage
  - ☒ PTZ
- Buttons: Save, Cancel

Figure 2-65

### 2.7.2.2 Group

The group management interface can add/remove group, modify group password and etc.

The interface is shown as in Figure 2-66.



Figure 2-66

**Add group:** It is to add group and set its corresponding rights. See Figure 2-67.

Please input the group name and then check the box to select the corresponding rights. It includes: live playback, record control, backup, PTZ control, user management and etc.

Figure 2-67

### Modify group

Click the modify group button, you can see an interface is shown as in Figure 2-68.

Here you can modify group information such as remarks and rights.

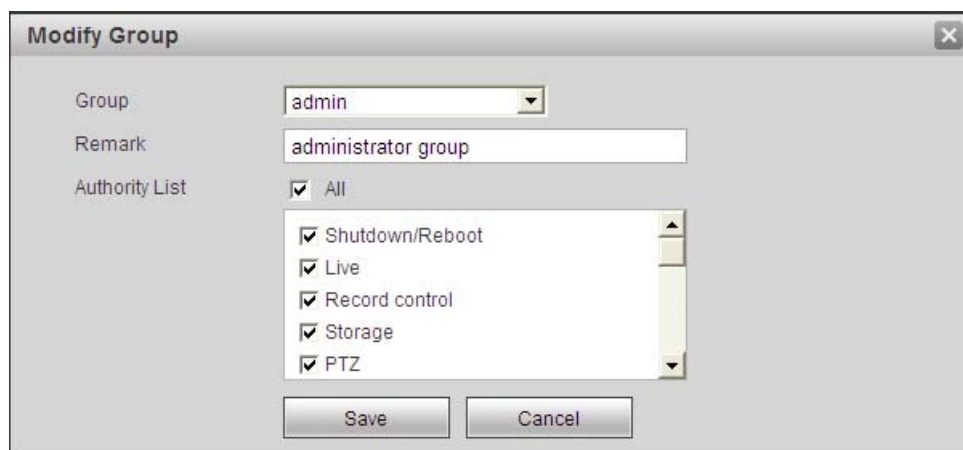


Figure 2-68

## 2.7.3 PTZ

The PTZ interface includes two interfaces.

### 2.7.3.1 Network PTZ

The network PTZ interface is shown as in Figure 2-69.

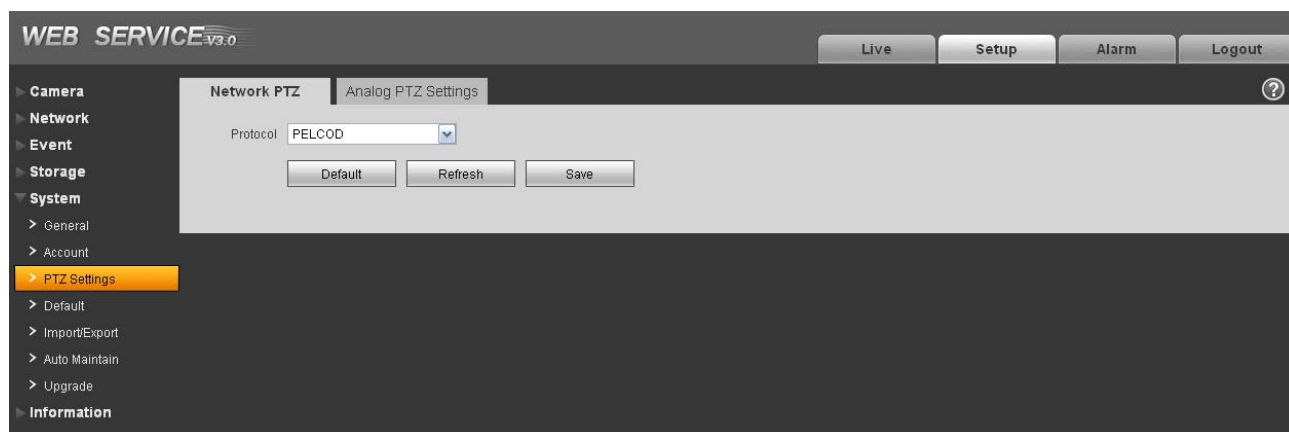


Figure 2-69

Please refer to the following sheet for detailed information.

Parameter	Function
Protocol	Select the corresponding dome protocol.

### 2.7.3.2 Analog PTZ Setting

The analog PTZ setting interface is shown as in Figure 2-70.



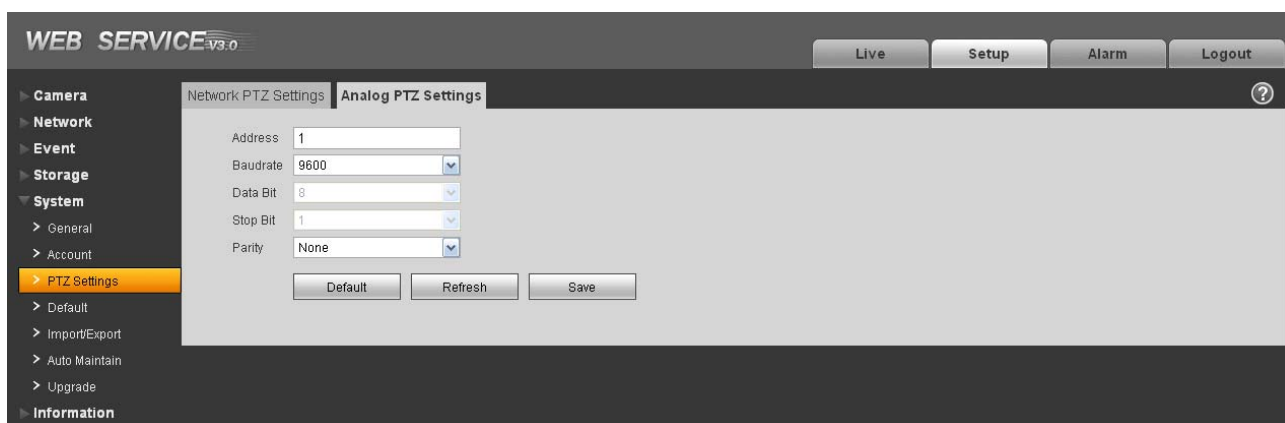


Figure 2-70

Please refer to the following sheet for detailed information.

Parameter	Function
Address	Set the software address you can control the device via the RS485 BUS. Default value is 1.
Baud Rate	Set the baud rate you can control the device via the RS485 BUS. Default setup is 9600.
Data Bit	Display data bit value.
Stop bit	Display stop bit value.
Parity	Set the parity you can control the device via the RS485 BUS.

## 2.7.4 Default

The default setup interface is shown as in Figure 2-71.

Please note system can not restore some information such as network IP address.



Figure 2-71

## 2.7.5 Import/Export

The interface is shown as in Figure 2-72.

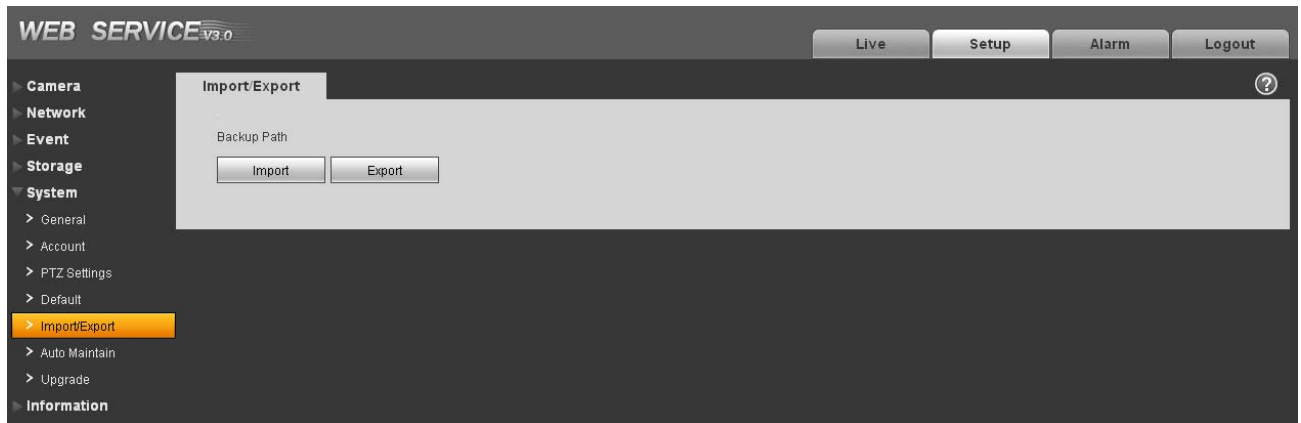


Figure 2-72

Please refer to the following sheet for detailed information.

Parameter	Function
Import	It is to import the local setup files to the system.
Export	It is to export the corresponding system setup to your local PC.

## 2.7.6 Auto maintenance

The auto maintenance interface is shown as in Figure 2-73.

Here you can select auto reboot and auto delete old files interval from the dropdown list.

If you want to use the auto delete old files function, you need to set the file period.

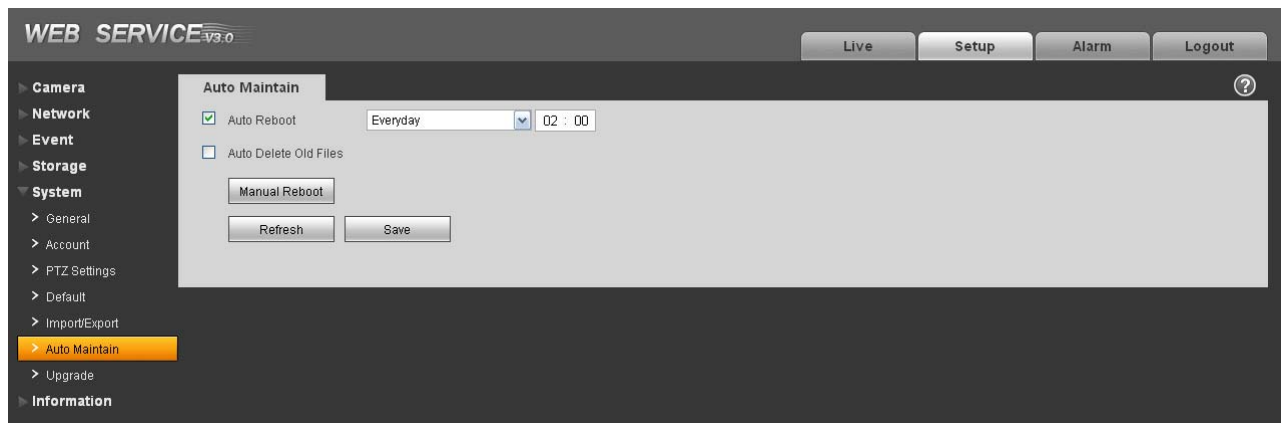


Figure 2-73

### 2.7.7 Firmware update

The firmware interface is shown as in Figure 2-74.

Please select the upgrade file and then click the update button to begin firmware update.

#### **Important**

**Do not turn off the device power, disconnect the device, reboot or shutdown the device during the update period.**

**Please reboot the device if you update the improper program, otherwise some function module of the device may become null!**



Figure 2-74

## 2.8 Information

### 2.8.1 Version

The version interface is shown as in Figure 2-75.

Here you can view system software version, WEB version, release date and etc. Please note the following information is for reference only.



Figure 2-75

### 2.8.2 Log

Here you can view system log. See Figure 2-76.

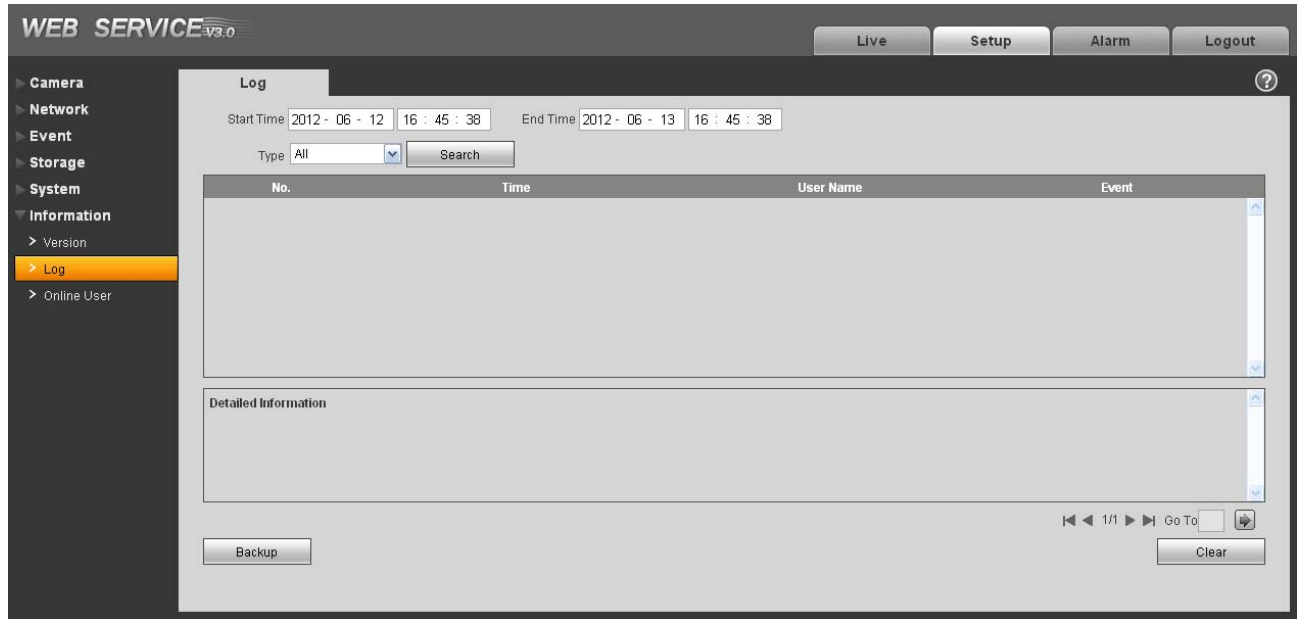


Figure 2-76

Please refer to the following sheet for log parameter information.

Parameter	Function
Type	Log types include: system operation, configuration operation, data operation, alarm event, record operation, and user management, log clear.
Start time	Set the start time of the requested log.
End time	Set the end time of the requested log.
Search	You can select log type from the drop down list and then click search button to view the list. You can click the stop button to terminate current search operation.
Detailed information	You can select one item to view the detailed information.
Clear	You can click this button to delete all displayed log files.
Backup	You can click this button to backup log files to current PC.

### 2.8.3 Online User

The online user interface is shown as in Figure 2-77.

Here you can view online user name, group name, IP address and login time.

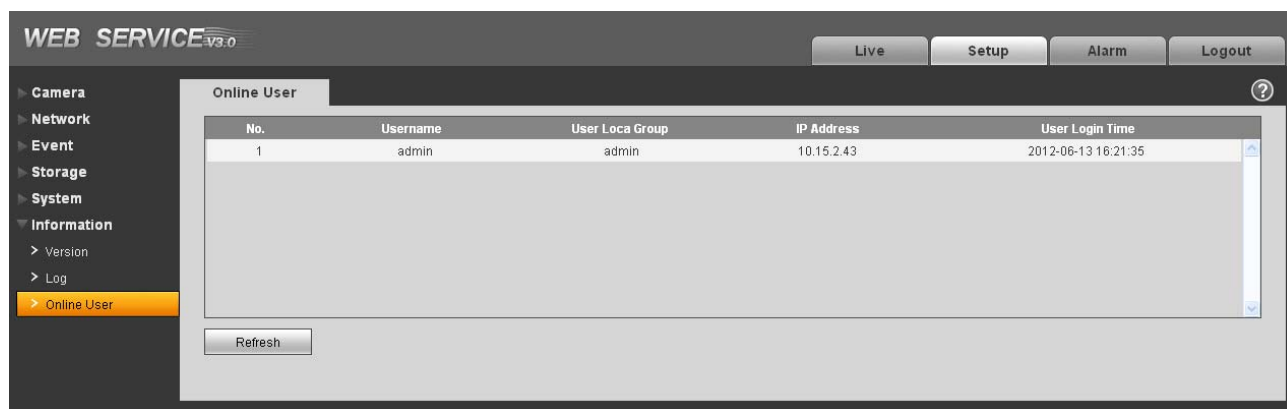


Figure 2-77

### 3 Alarm

Click alarm function, you can see an interface is shown as in Figure 3-1.

Here you can set device alarm type and alarm sound setup. When the specified alarm occurred (you have subscribed), system can record the corresponding alarm information on the right pane of the alarm list.



Figure 3-1

Please refer to the following sheet for detailed information.

Type	Parameter	Function
Alarm type	Motion detect	System alarms when motion detection alarm occurs,
	Disk full	System alarms when disk is full.
	HDD malfunction	System generates an alarm when HDD is malfunction.
	Camera masking	System alarms when system is viciously masking.
	External alarm	Alarm input device sends out alarm.
Operation	Prompt	System automatically pops up alarm dialogue box.
Alarm audio	Audio	When alarm occurs, system auto generates alarm audio. The audio supports customized setup.
	Path	Here you can specify alarm sound file.

## 4 Log out

Click log out button, system goes back to log in interface. See Figure 4-1.

You need to input user name and password to login again.

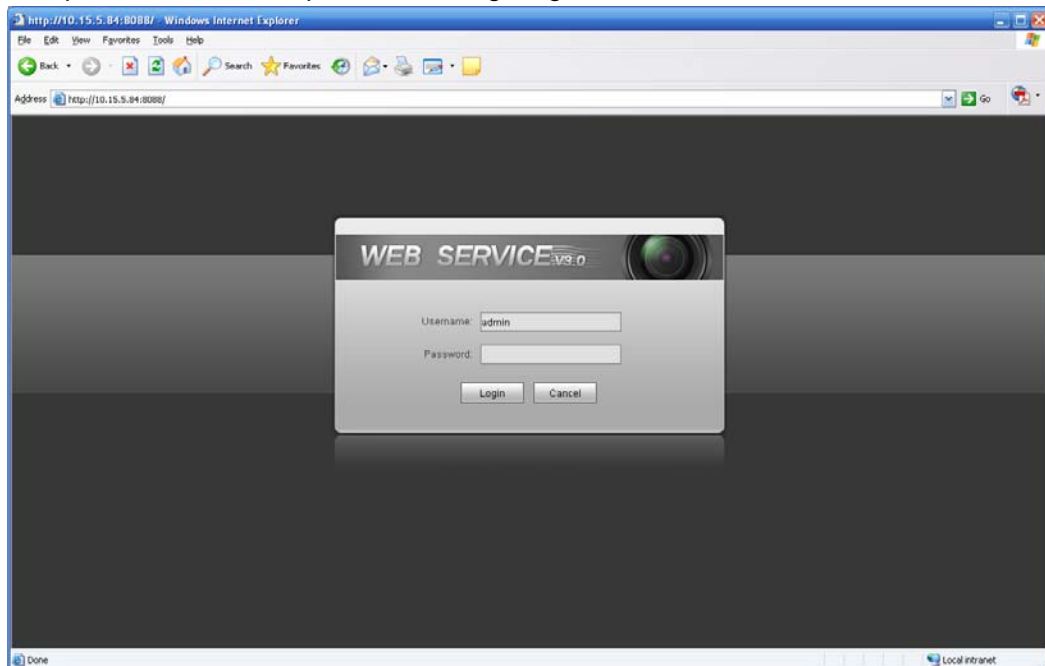


Figure 4-1

### Note:

- This manual is for reference only. Slight difference may be found in user interface.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.