

How to config the VDP with SIP system

The VTH's default password of project setting is **888888**.

- 1、 Please reset the configuration of VTO and VTH when you upgrade the Sip software.

VTH—check Settings>Project Settings>888888>Default

VTO—Refer to the PDF file “Reset the configuration”

- 2、 Add VTH on the VTO's web interface

Login in the VTO's web interface, for example: VTO's IP address is 10.36.23.203, The user name and password both are **admin**.

Check System Config>Indoor Station Manager>Add. You only need to fill in the VTH Short No.(the length of the No. need to be 5, such as 11111). Pay attention to the “Registration Password”, default is **intelbras**. it need be used on the VTH's screen, and can be changed as you want, such as you can change it into 11111. See Figure 1.

The screenshot displays the 'Indoor Station Manager' interface. On the left is a sidebar menu with options like 'System Config', 'Local Config', 'Indoor Station Manager', 'Network Config', 'video_config', 'Change Password', 'Publish Information', 'Ipcinfo', 'User Management', 'Info Search', 'Status Statistics', and 'Logout'. The main area shows a table titled 'Digital Indoor Station' with columns: FamilyName, FirstName, nick_name, Room No., IP Address, opendoor_pwd, Register Type, Card No., Info, Modify, and Delete. An 'Add' dialog box is open in the center, containing input fields for FamilyName, FirstName, nick_name, VTH Short No., Registration Password, Register Type (set to 'public'), and IP Address. The 'VTH Short No.' and 'Registration Password' fields are highlighted with a red rectangle. The dialog has 'OK' and 'Cancel' buttons at the bottom.

Figure 1

- 3、 Add VTO on the VTH's screen

(1)Check Setting>project Setting>Product Info, input Room No., for example 11111. **Choose DHCP into ON**. See Figure 2.



Figure 2

(2) Check Network, input VTO's IP address, the password is same with the VTO's web interface when you add VTH. Default is **intelbras**. Check ok to save it. See Figure 3.



Figure 3

4、 after the above configuation, you can make a call to the VTH. Make test as blew, such as Transfer call function.

(1) choose forward when you are at home and fill in the room No. as you want. See figure 4

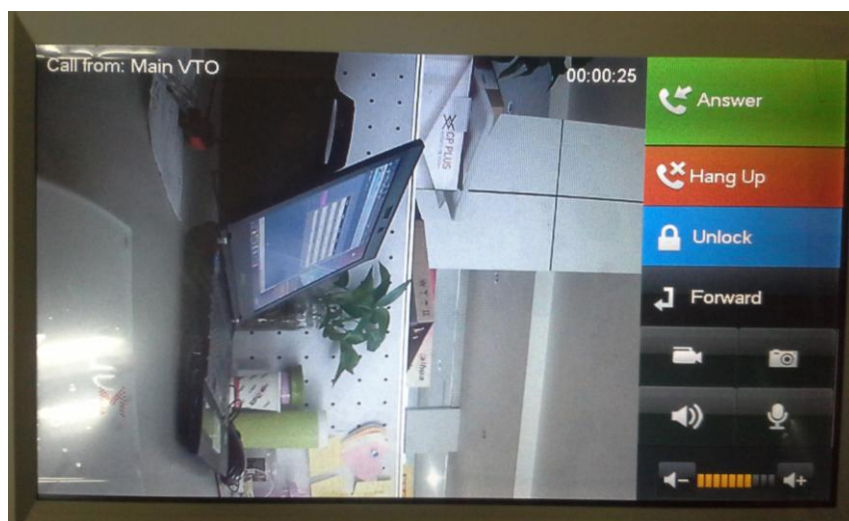


Figure 4

(2) Check Setting>Forward, there are three types, if you choose Always. For example, always forward to 22222—when you make a call to room 11111, this call will be always forward to room 22222. See Figure 5、6.



Figure 5

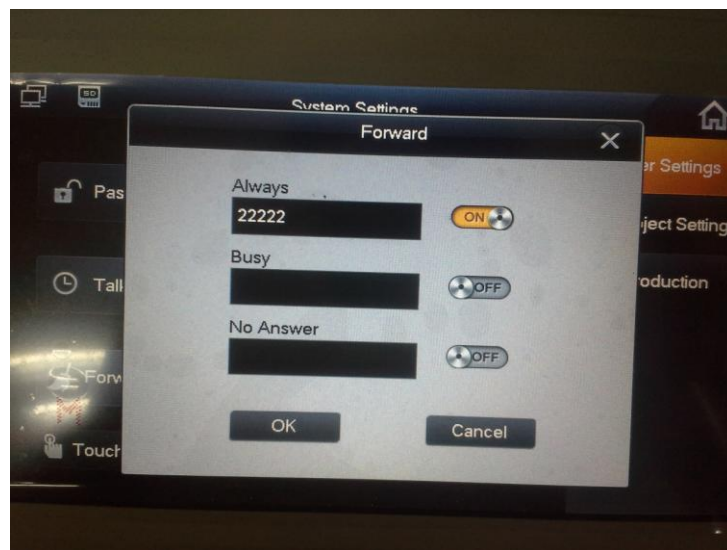


Figure 6