

Directory

- 1、 VTO1220BW web setting 1
- 2、 VTH screen setting 2

There is standard third party SIP server, VTO\VTH are both set as client.

environment:

For example:

VTO1220BW----10.5.7.106; Building No. 03, Unit No. 01, VTO No. 8001; its complete number is 03018001

VTH1560B-----10.5.7.66; Room No. 9901

Steps:

1、 VTO1220BW web setting

LAN config> Building No.----03; Unit No. ---1, VTO No. ---8001

IP VDP Door Station Web Server V1.0

System Config

- > Local Config
- > LAN Config
- > Network Config
- > Video Set
- > User Manager
- ▶ Info Search
- ▶ Logout

LAN Config

Building No. 03

Building Unit No. 1

VTO No. 8001

Support Building ☐ Turn on ☒ Turn off

Support Unit ☐ Turn on ☒ Turn off

Warning: The device needs reboot after modifying the config above.

Default Refresh OK

Network Config>do not check 'SIP Server Enable', and input the SIP server IP, for example: 10.15.7.107; keep port as 5060; SIP Realm as VDP. Check 'OK' to save it.

IP VDP Door Station Web Server V1.0

- System Config
 - Local Config
 - LAN Config
 - Network Config**
 - Video Set
 - User Manager
- Info Search
- Logout

Network Config FTP Config **SIP Server Config** Port Config

IP Address: 10.15.7.107

Port: 5060 (1~65535)

Username: 03018001

Password:

SIP Realm: VDP

☐ SIP Server Enable

Warning: The device needs reboot after modifying the SIP server enable.

Default Refresh OK

2、VTH screen setting

Settings> Project setting> the default password is 888888

System Settings

Password Verification

Pwd:

1	2	3	#
4	5	6	0
7	8	9	←

OK Cancel

Password
 Talk
 Forward
 Touch Ring

User Settings
Project Settings
 Introduction

Product info> input room number as 9901, point 'OK' to save it

Project Settings

Room No. 9901 Master

1	2	3	#
4	5	6	0
7	8	9	←

Local IP

Subnet Mask

Gateway

MAC

Version: Eng_P_V1.100.0000.0.R.20140429

OK DHCP ON

Product Info
 SIP Server
 Network
 IPC Info
 Default
 Back

SIP Server> input SIP server IP, point 'OK' to save it

Project Settings

VTO IP Address: 10 . 15 . 5 . 107

Network Port: 5060

User Name: 101

Password: ●●●●●●●●

Realm: VDP

Enable Status: ON

OK

Product Info

SIP Server

Network

IPC Info

Default

Back

Network>Input VTO's IP address, , point 'OK' to save it

Main_VTO Name: Main VTO

Device Type: Unit Door Station

VTO Middle No.: 0

VTO IP Address: 10. 15. 7. 106

Network Port: 13801

Enable Status: ON

OK

3、 On the SIP server, please add VTO/VTH's ID , for example VTO is 03018001, VTH is 9901.