

WS25GT-S 5250

Серия DVR-и	Комбинация от бутони
Neotech	
J2000 series	STOP->PLAY->STOP->SEARCH->PTZ->PIP->1->2->ENTER
430A+	[ZOOM]->[SEQ]->[ZOOM]->[FRZ]->[P/T]->[ENTER]->[1]->[2]->[ESC]
1630A+	[8]->[3]->[9]->[10]->[5]->[4]->[5]->[ENTER]
J2K lite DVR	STOP->PLAY/SEARCH->STOP->PLAY/SEARCH(pls press longer time, about 3 seconds)->P/T->FRZ(pls press longer time, about 3 seconds) ->1->2->ENTER
Pinetron	
J1000	Power + Play (from J image 1.18)
M1000	REW+ Display
M5000	HOLD + LOCK(from MCU:1.0.5)
M6000	UP + DOWN (10sec) (service menu - UP + RIGHT)
S2000	Press and hold [Down] & [+] button
X3000	UP + 2 (service menu - UP + 1)
Webgate	
LH800L, LH1600C, EH1600L, MH1600H, MD1600E, MD800E	FUNC, 1, 2, 1, 3, 1, 4, 1, 5 EXIT
	<p>1. When you set up OSD Menu in Local, In case of lost password. Please just click on 16ch key in the window that password will be input. (when booting, when viewing menu and when unlocking etc.) You must follow the formula as follows</p> <p>You can see that password is set as "user=0000" and "admin=9999" if you input correct code. formula:</p> <p>Convert the last five digits of Mac address to decimal numbers and then make five numbers with the last digit of each number.</p> <p>Example)</p> <p>MAC:00-30-a1-00-58-40</p> <p>If you convert the last five digits of Mac address to decimal numbers : 48-161-00-18-136 Then your code is "81084" But, if Code is '0'(Zero), input 10 ch key.</p> <p>2. When you lost password, In case of using eDVR Manager to access DVR in Remote System->Miscellaneous->Reset values (System will be initialized)</p> <p>At that time all of DVR's Configuration will be initialized.</p> <p>and then, you must input Password "admin"</p>
MD3200M, MD1600L	
TVT	

W525GT-S 5250

Серия DVR-и	Комбинация от бутони
Neotech	
J2000 series	STOP->PLAY->STOP->SEARCH->PTZ->PIP->1->2->ENTER
430A+	[ZOOM]->[SEQ]->[ZOOM]->[FRZ]->[P/T]->[ENTER]->[1]->[2]->[ESC]
1630A+	[8]->[3]->[9]->[10]->[5]->[4]->[5]->[ENTER]
J2K lite DVR	STOP->PLAY/SEARCH->STOP->PLAY/SEARCH(pls press longer time, about 3 seconds)->P/T->FRZ(pls press longer time, about 3 seconds) ->1->2->ENTER
Pinetron	
J1000	Power + Play (from J image 1.18)
M1000	REW+ Display
M5000	HOLD + LOCK(from MCU:1.0.5)
M6000	UP + DOWN (10sec) (service menu - UP + RIGHT)
S2000	Press and hold [Down] & [+] button
X3000	UP + 2 (service menu - UP + 1)
Webgate	
LH800L, LH1600C, EH1600L, MH1600H, MD1600E, MD800E	FUNC, 1, 2, 1, 3, 1, 4, 1, 5 EXIT
MD3200M, MD1600L	<p>1. When you set up OSD Menu in Local, In case of lost password. Please just click on 16ch key in the window that password will be input. (when booting, when viewing menu and when unlocking etc.) You must follow the formula as follows</p> <p>You can see that password is set as "user=0000" and "admin=9999" if you input correct code.</p> <p>formula:</p> <p>Convert the last five digits of Mac address to decimal numbers and then make five numbers with the last digit of each number.</p> <p>Example)</p> <p>MAC:00-30-a1-00-58-40</p> <p>If you convert the last five digits of Mac address to decimal numbers : 48-161-00-18-136 Then your code is "81084" But, if Code is '0'(Zero), input 10 ch key.</p> <p>2. When you lost password, In case of using eDVR Manager to access DVR in Remote System->Miscellaneous->Reset values (System will be initialized)</p> <p>At that time all of DVR's Configuration will be initialized.</p> <p>and then, you must input Password "admin"</p>
TVT	

TD2304L	1. First press INFO button on the remote controller, then press +, -, UP, DOWN, ENTER button on the front panel quickly. A back door window will show up. 2. Choose RESET ADMIN PASSWORD to load the default password 123456
TD2308/TD2316/TD24/TD25/TD23M	1. log off the current user 2. click log in , on the log in window input password: wsadwjs 3. the password already changed to default: 123456