Quick Reference Guide & System Records

Premier 24

Issue 2

CE



1. Factory Defaults

Menu	Default		
	User Codes		
Setup Users	User 00 (Engineer)	1234	
00000 00000	User 01 (Master)	5678	
	Users 02 - 16	Not Defined	
	1. Zone Setup		
Zones Types	. 1	Entrv/Exit 1	
20100 . , poo	2	Guard Access	
	3-8	Guard	
	7ones 9 - 24	Not Used	
Zone Text	All Zones	Not Defined	
Zone Chime	All Zones	Silent	
Zone Wiring	1 _ 24	Double Pole/FOI	
Zone winng	2 Arming Options	Double I Gio/LOL	
~ '		coo Ossando	
limers		030 Seconas	
	Entry Delay 1	045 Seconds	
	Entry Delay 2	045 Seconds	
		000 Seconas	
	Bell Delay	000 Minutes	
	Bell Duration	015 Minutes	
	Coms Delay	000 Seconds	
	Part Bell Dly	000 Seconds	
Arming Modes	Full Arm	Entry/Exit	
	Part Arm 1	Instant	
	Part Arm 2	Instant	
	Part Arm 3	Instant	
Options 1	1: Auto Part Arm	Disabled	
	2: Part Arm Silent	Disabled	
	3: Remote Arm	Enabled	
	4: Time Arm CT1	Disabled	
	5: Alarm Eng Reset	Disabled	
	6: Confirmation Reset	Enabled	
	7: Tamper Eng Reset	Disabled **	
	8: Anti-code Reset	Enabled	
Options 2	1: Arm With No ATS	Enabled **	
	2: Arm With AC Fail	Enabled	
	3: Part Arm Coms	Disabled	
	4: Unarm Fire Coms	Disabled	
	5: Unarm Tamper Coms	Disabled **	
	6: Log Part Omits	Disabled	
	7: Confirm In Entry	Disabled	
	8: Conf. After Entry	Enabled	
Options 3	1: Faults Eng Reset	Disabled **	
optione e	2' No ATS Eng Reset	Disabled **	
	3: AC Fail Eng Reset	Disabled	
	4. Anti-Masking When	Disabled	
	Armed	Disabled	
	5: Remote FOB After Entry	Disabled	

Menu	Option Default					
	3. Global Options					
System Timers	01: Exit Settle Time	008 Seconds				
,	02: Double Knock Dly	007 Seconds				
	03: Activity Delay	024 Hours				
	04: Abort Delay	180 Seconds				
	05: Courtesy Time	030 Seconds				
	06: Pulse Period 1	010 Seconds				
	07: ATS Fault Delay	000 Minutes				
	08: AC Off Delay	005 Minutes				
	09: Batt Test Period	024 Hours				
	10: Batt Test Time	010 Seconds				
	11: Soak lest lime	014 Days				
	12: Service Interval	000 Weeks				
	13. Test Gall Every					
	15: Confirmation Dly	060 Minutes				
System Config	00: Bell on Arm Fail	No Bell				
eyetem eening	01: Bell is an SCB	SAB				
	02: Manual BST/GMT	Auto				
	03: Leave Omits	Remove				
	04: Enforce Com Delay	Override				
	05: NVM is Locked	Unlocked				
	06: Engineer Only	User + Engineer				
	07: Omit Tampers NO	YES **				
	08: 40 Column Printer	80				
	09: View Act. Fault	Hide				
	10: View Zone Faults	Hide				
	11: No Code Tamp	Enable				
	12: Code Tamp Alarms	Locks				
	13: Zone Short = Active	Tamper				
	14: R/R=Silence/RST	Reset Only				
	15: Test Call = CT3	Timed				
	16: Batt Test = Disarm	Timed				
	17: Bell = 2nd Alarm	1st Alarm				
	18: SNDR = 2nd Alarm	1st Alarm				
	19: Abort = User Reset	Eng.				
	20: 8XE = Tampers 1-8	Zones 9-16				
	21: 1st Zone = Confirm	2 th				
	22: Access = Comm	No Coni. Enabled				
	23. ENSUIST Disabled					
	25: Disable BE PA's	z Enable				
	26: Armed Mask = Alarm	Fault				
	27: RF PA = Silent	Audible				
	28: Periodic Test Calls	Dynamic				
System Options	1: Advisory Volume	5				
	2: Chime Volume	3				
	3: No. of Re-Arms	03				
	4: Anti-code Resets	03				
	5: Quick Count	4				
	6: Modem Level	0				
Monitor Hardware	1: ATS Path Fault	Enabled				
	2: Power Failure	Enabled				
	3: Aux Fuse Blown	Enabled				
	4: Bell Tamper	Enabled				
	5: Aux Tamper	Enabled				
	6: Panel Lid Tamper					
	7: Battery Faults	Enabled				

Menu	Option	Default	
3. Gl	obal Options - Continu	ed	
Control Timers	1 - 4	Not Defined	
System Text	Reset Message	Call Engineer to	
	Anti oodo Mossago	Reset System	
	Anti-code Message	to Reset System	
	Service Message	Call Alarm Co.	
	Location Text	For Service	
		Has Been Setup	
	Banner Message	Not Defined	
	Part Armed Banner	* PART ARMED *	
	Printer Header	Not Defined	
	Part Arm 1	Evening Arm	
	Part Arm 3	Bedtime Arm 2	
Creaker Taraa		Enabled	
Speaker Tones	A Koypad Satur	LINDIEG	
Zone Manning	All Keynad zones	Not Manned	
Options	1: PA Enabled	Disabled	
· [= · · · · · · ·	2: Fire Enable	Disabled	
	3: Medical Enabled	Disabled	
	4: Tamper Disabled	Enabled	
	5: PA Audible	Silent	
	6: PA Delayed	Instant	
	7: Quick Arm Keys	Off	
	8: Info.LED> Output	Armed	
Volume	All Keypads	5	
Sounder Options	All Tones	Enabled	
	5. Expander Setup		
Auxiliary Input	All Expanders	Not Used	
Volume	All Expanders	5 Enabled	
Sounder Options	6 Output Setup	Enabled	
Panel Outputs		Fire	
r anor outputo	2	PA	
	3	Alarm	
	4	Armed	
	5	Zones Locked	
	6	Out Fault Procent	
	7	Confirmed Alarm	
	8	Abort	
	9	Tamper	
	10	AC Mains Fail	
	11	ATS Remote Test	
	12	Not Used	
	13	NOT USED	
	15	Armed	
	16	Detector Test	
Com Channels	1 - 10	As Panel Outputs	
	11 - 16	Not Used	
Keypads 1-4 Outputs	1	LED Control	
Expanders 1-2	1	LED Control	
Outputs	0	Armod	
	3	Detector Test	
	4 - 8	Not Used	
PGM Outputs	1	Zones Locked	
· ·		Out	
	2	Not Used	
	3	Not Used	
	4	Control Timer 4	
	5-ð	NOT USED	

Menu	Default		
	7. UDL/Digi Options		
Reset Digi	N/A	N/A	
Test Com?	N/A	N/A	
Set Call Waiting	Number	Not Defined	
Program Digi	ARC 1	Not Defined	
	ARC 2	Not Defined	
Digi Options	Digi is Enabled	Disabled	
	Pulse Dialling	Tone	
	Pulse After 3	Always Tone	
	Blind Dialling	Wait Dial Tone	
	Reserved	N/A	
	Dial All Numbers	Dial Any	
UDL Options	Call Back Number 1	Not Defined	
	Call Back Number 2	Not Defined	
	UDL Password	Not Defined	
	DL Attended	Unattended	
	Auto Call-Back	Manual	
	Call Defeat Off	On	
	DL Arm Limited	At Anytime	
	Download When Armed	Fully Armed	
	Disable On Line Keypad	Enabled	
	Rings Required	005	
	UDL Dial Attempts	003	
Radio/SMS Setup	Pad ARC 1 Pri. No.	Not Defined	
	Pad ARC 1 Sec. No.	Not Defined	
	Pad ARC 1 Prefix	Not Defined	
	Pad ARC 2 Pri. No.	Not Defined	
	Pad ARC 2 Sec. No.	Not Defined	
	Pad ARC 2 Prefix	Not Defined	
	SMS No1	07860980480	
	SMS No2	07785499993	
Com Port Setup	Onboard Digi	Com300	
	Com 1	No Module Fitted	
	Com 2	No Module Fitted	
	8. User Codes		
Setup Users	User 00 (Engineer)	1234	
	User 01 (Master)	5678 ***	
	User 02 - 16	Not Defined ***	

- * Global option 24 alters the Programming of the control panel as defined below.
- ** These options are enabled/disabled when Config. Option 24 is programmed as 'Grade 2/3'.
- *** All users except the engineer are defaulted to lock out during entry.

0_

2. Quick Reference Guide

Log Off Engineer

(Ves) Press (Ves) to log out of the Engineer Programming menu

1	Zone Setup							
Yes	Zone Types	Use (zone t) - ()) to enter zo type, ()) to accept	one num	nber, 💿 to edit	, 🛈 -	⑨	
		0_	Not Used		(8 tuv)	PA Sile	ent	
		1	Entry/Exit 1	Exit 1 9		Fire		
		(2abc)	Entry/Exit 2		۲	24Hr Gas		
		3 _{def}	Guard		۲	Auxilia	ıry	
		(4 _{ghi})	Guard Access			Tampe	er	
		5 _M	24Hr Audible		۲	Exit Te	erminator	
		6 mmo	Trouble			Key S	witch	
		(7 _{pqrs})	PA Audible					
Yes	Zone Attributes 1	Press	№ to edit, ① - (8 _w to s	elect an attribut	e , (Yes)	to accept	
		1	$\mathbf{O} = Omittable$		(5 _{jkl})	3 = Pa	art 3 Omit	
		(2abc	F = Force Omit		(6 _{mno})	1 = C	hime 1	
		3 _{def}	1 = Part 1 Omit		(7 _{pqrs})	2 = C	hime 2	
		(4 _{ghi})	2 = Part 2 Omit		8 _{tuv}	G = Guard/Entry 2		
Yes	Zone Attributes 2	Press No to edit, 1 - (8) to select an attribute, (Yes) to accept					to accept	
	(not applicable to	1	D = Double Knock		5 _µ	R = Reset		
	types)	(2abc	S = Shunt Group		(6mmo)	I = In	verted	
		3 _{def}	T = Soak Test		(7 _{pqrs})	$\mathbf{Q} = \mathbf{Q}$	luick Resp.	
		(4 _{ghi})	F = Activity		(8 tav)	! = Shock		
Yes	Key Attributes 2	Press	№ to edit, ① - (5 _⊮ to s	elect an attribut	e , (Yes) '	to accept	
	(only applicable for	1	I = Instant Arming		(5 _{jal}	S = Si	ilent Arming	
	keyswitch zone types)	(2abc	s = Shunt Key		6 mmo	I = In	verted	
		3 _{def}	F = Full Disable		(7 _{pqrs})	$\mathbf{Q} = \mathbf{Q}$	Quick Resp.	
		(4 _{ghi})	$\mathbf{D} = \text{Disarm Only}$		(8 tav)	$\mathbf{L} = \mathbf{L}\mathbf{a}$	atching	
Yes	Zone Text	Press numbe	№ to edit, 0 0 er of times), (ves) to a	9) to s ccept	elect characters	(press	the required key the appropriate	
		1	. , ? ! 1 @ " -	5 _{jkl}	JKL5	9wxyz	W X Y Z 9	
		(2abc	ABC2	6 mmo	M N O 6	0_	0_	
		3 _{def}	DEF3	(7 _{pqrs})	PQRS7	۲	Move Cursor	
		(4 _{ghi})	GHI4	(8 tuv	T U V 8			
Yes	Wiring Type	Press	No to alter wiring	type, 🕑	es) to accept			
		0_	Normally Closed		(5 _{jal}	1K/1K/3	ЗК	
		1	Normally Open		6 mmo	4K7/6	K8/12K	
		(2abc	Double EOL		7 _{pqrs}	2K2/4K	77/6K8	
		3 _{def}	iD		8 _{tuv}	4K7/4	K7	
		(4 _{ghi})	Triple EOL					

(2abc)		Arming Options								
0_	Timers	Use $$ or $$ ves to select a timer, $$ - $$ ves to enter a value, $$ ves to accept								
		• Exit Delay	3 der 2 nd Entry Delay	6 Coms Delay						
		① Entry Delay 1	(4,m) Bell Delay	(7) Part Bell Delay						
		(2.) Entry Delay 2	⑤ Bell Duration							
1	Arming Modes	Use (to select full arm or	r part arm 1-3, ① - ⑤ to sele	ct arming an mode, 🐚 to accept						
		1 Entry/Exit	3 ■ Timed Exit	(5 _{si}) Deferred						
		💿 Exit Term.	(4) Instant							
(2abc)	Options	Use (to select option 1,	Use $$ to select option 1, 2 or 3, press $$ to edit, $$ - $$ to select option, $$ to select option, $$							
	Options 1	① Auto Part Arm	Time Arming CT1	Tamper Eng Reset						
		2 Part Arm Silent	(5 _⊮) Alarm Eng Reset	Anti-code Reset						
		3 Remote Arm/Disarm	6 Confirmation Reset							
	Options 2	① Arm With L/Fault	(4) Unarm Fire Coms	Confirm in Entry						
		(2) Arm With AC Fail	⑤ Unarm Tamper Coms	Conf. After Entry						
		③ Part Arm Coms	6 Log Part Omits							
	Options 3	① Faults Eng Reset	3. AC Fail Eng Reset	(5 _⊮) FOB After Entry						
		2. No ATS Eng Reset	(4) Mask When Armed							

3 _{def}	Global Options						
0_	System Timers	Use 🗢 to select a timer, 🔍 - 🖭 to enter a value, 📧 to accept					
	I	Exit Settle Time					
ļ	1	Double Knock Dly 6 Line Fault Delay Service Interval					
	I	 ② Activity Delay ③ AC Off Delay ④ Test Call Every 					
	I	(3.) Abort Delay (8.) Batt Test Period (1) Quick Response					
	I	Courtesy Time Satt Test Time Confirmation Dly					
1	System Config.	Use 🗢 to select an option, 💿 to change the option, 🐨 to accept					
	ł	00: (No Bell/Bell on) Arm Fail 15: Test Call = (Timed/Timed)					
	ł	01: Bell is an (SAB/SCB) 16: Batt Test = (Timed/Disarm)					
	I	02: (Manual/Auto) BST/GMT 17: Bell = (1 st Alarm/2 nd Alarm)					
	I	03: (Leave/ Remove) Omits 18: SNDR = (1 st Alarm/2 nd Alarm)					
	I	04: Away (Override /Enforce) Delay 19: Abort = (Eng. Reset /User Reset)					
	1	05: NVM is (Unlocked /Locked) 20: 8XE = (Zones 9-16 /Tampers 1-8)					
, I	ł	06: Engineer (Only /+ User) 21: (2 nd Zone /1 st Zone) = Confirm					
	I	07: Omit Tampers (NO/YES) 22: Access (No Conf./= Confirm)					
	I	08: (80/40) Column Printer 23: EN50131 (Disabled/Enabled)					
	I	09: Activity Fault (View/ Hide) 24: Panel Grade 2/Grade 3					
	ł	10: (Hide/View) Exit Errors 25: RF PA (Disabled/Enabled)					
	I	11: (No/Enable) Code Tampers 26: Armed Mask = (Fault/Alarm)					
	I	12: Code Tamp (Alarms/Locks) 27: RF PA = (Audible/Silent)					
	1	13: Zone Short=(Active/Tamper) 28: Dynamic/Periodic Tests					
	L	14: R/R=(Reset Only /Silence/RST)					
(2abc)	System Options	Use 🗢 to select an Option, 🔍 - 🦦 to enter a value, 🐨 to accept					
	1	Advisory Volume Advisory Volume Advisory Volume Advisory Volume					
	1	Chime Volume Quick Count					
	1	(2) Number Of Re-Arms (5) Modem Level					
	1						

Quick Reference Guide

3 _{def}	Global Options							
3 _{def}	Monitor Hardware	Press 🔞 to edit, 🗢 to select an option, 🔞 to change the option, া to accept						
		ATS Path Fault	5 _{j4}	Auxiliary Tamper				
		(2.) Mains Power Off	6 mno	Panel Lid Tamper				
		(3.) Auxiliary Fuse Blown (7.) Battery Fault						
		🕢 Bell Tamper						
(4 _{ghi})	Control Timers	Use $\textcircled{\baselinetwidth}$ to select an timer, $\textcircled{\baselinetwidth}$ - $\textcircled{\baselinetwidth}$ to enter the 1 st On time, $\textcircled{\baselinetwidth}$ to accept Use $\textcircled{\baselinetwidth}$ - $\textcircled{\baselinetwidth}$ to select the 1 st On time days of operation, $\textcircled{\baselinetwidth}$ to accept Use $\textcircled{\baselinetwidth}$ - $\textcircled{\baselinetwidth}$ to enter the 1 st Off time, $\textcircled{\baselinetwidth}$ to accept Use $\textcircled{\baselinetwidth}$ - $\textcircled{\baselinetwidth}$ to enter the 1 st Off time days of operation. $\textcircled{\baselinetwidth}$ to accept						
(5 _{jal}	System Text	Use (to select a message,) - (b) to select characters (press the required key the appropriate number of times), (to accept						
(8 tuv	Speaker Tones	Use 🗢 to select a tone type, 🔊 t	o turn the tone	on/off, (Yes) to accept				

(4 _{ghi})	Keypad Setup							
Yes	Zone Mapping	Press	$^{\textcircled{NO}}$ to edit, $\textcircled{1}$ - $\textcircled{8_{w}}$ to enter	er zone number	r, 🐨 to accept, Repeat for 2 nd zone			
Yes	Options	Press	🔊 to edit, 🗢 to select an	option, 🔊 to	change the option, (Yes) to accept			
		1	$\mathbf{P} = \mathbf{P}\mathbf{A}$ Enabled	(5 _{pi})	A = PA is Audible			
		(2abc	$\mathbf{F} = Fire Enabled$	6 mno	D = PA is Delayed			
		(3 _{def}	M = Medical Enabled	(7 _{pqrs})	Q = Quick Arm On			
		(4 _{ghi})	T = Tamper Enabled	8 _{tuv}	O = Info.LED>Output			
Yes	Volume	Press	No to edit, 🕕 - 🛞 to enter	a value, 🛯 to	accept			
Yes	Sounder Options	Press	🔊 to edit, 🗢 to select an	option, 🔊 to	change the option, (Yes) to accept			
		1	F = Fire Tones Enabled	(5 _{pi})	E = Entry Tones Enabled			
		(2abc	A = Alarm Tones Enabled	6 mno	X = Exit Tones Enabled			
		(3 _{def}	F = Fault Tones Enabled	(7 _{pqrs})	C = Chime Tones Enabled			
		(4 _{ghi})	S = Service Tones Enabled					

5 _{jel}	Expander Setup						
Yes	Auxiliary Input	Press	Press 🔊 to edit, 🔍- 🕼 to select an input type, 🐨 to accept				
		0_	Not Used	(3 _{def}	Silence Sounders		
			Auxiliary Tamper	(4 _{ghi})	PSU Fault		
		2 abs	Bell Tamper	(5 _{jkl})	Shunt Key		
Yes	Volume	Press	No to edit, O - 8 to enter a	a value, 🐚 to	accept		
Yes	Sounder Options	Press	🔊 to edit, 🗢 to select an o	option, 🔊 to	change the option, (Yes) to accept		
			$\mathbf{F} = Fire Tones Enabled$	(5 _{jal})	E = Entry Tones Enabled		
		2 abs	$\mathbf{A} = A$ larm Tones Enabled	6 mno	X = Exit Tones Enabled		
		3 _{def}	F = Fault Tones Enabled	(7 _{pqrs})	C = Chime Tones Enabled		
		(4 _{ghi})	S = Service Tones Enabled				

6 mmo		System Outputs				
0_	Panel Outputs	Use $(1) - 7$ to select an output. (No) to edit. $(1) - (7_{\text{ev}})$ to enter an output group.				
1	Com? Channels	● · ● to enter output type, (***) to accept				
(4 _{ghi})	Keypad Outputs	Use $(1) - (2m)$ to select keypad/expander, $(2m)$ to select network, (\textcircled{s}) to select an output (10) - (2m) to enter output type				
5 _M	Expander Outputs	(is to accept				
6 m8	PGM Outputs	Use $\textcircled{0}$ to select output, $\textcircled{1}$ - $\textcircled{8}_{w}$ to select a switch, \textcircled{N}_{0} to edit, $\textcircled{1}$ - $\textcircled{7}_{ss}$ to enter an output group, $\textcircled{0}$ - $\textcircled{9}_{ss}$ to enter output type, \textcircled{N}_{ss} to accept				

Key	Output Group	Outputs Types						
0_	Not Used:	Press (Yes) to accept						
1	System:	Use 🕕 - 🦫 to enter an output type or use 🜩 to search, া to accept						
		00: ATS P	ath Fault	15:	Digi Failed	29:	Com Port 2 Fault	
		01: Mains	Power Off	16:	Digi Successful	30:	Code Accepted	
		02: Aux Fu	use Fault	17:	Digi Active	31:	Prox TAG Accepted	
		03: Auxilia	ry Tamper	18:	UDL Lockout	32:	Radio Jamming	
		04: Bell Tamper 18		18:	UDL Lockout	33:	Detector Test	
		05: Panel Lid Tamper		19:	UDL Call Active	34:	ATS Remote Test	
		06: Engineer Working		20:	UDL Enabled	35:	No ATS Available	
		07: Confir	m Devices	21:	Custom Output	36:	CIE Fault	
		08: Servic	08: Service Required 22:		Activity Fault	37:	PSU Fuse Blown	
		09: Shunt	Active	23:	No Battery	38:	PSU Battery Flt	
		10: Batter	10: Battery Fault 2		Control Timer 1	39:	iD Loop Shorted	
		11: Batter	/ Test On	25:	Control Timer 2	40:	Radio Plus Tamper	
		12: Courte	esy Light	26:	Control Timer 3	41:	GSM No Signal	
		13: PC Ou	tput 1	27:	Control Timer 4			
		14: PC Ou	tput 2	28:	Com Port 1 Fault			

Key	Output Group			Outputs Types			
(2abc)	Alarm:	Use 🔍 - 🥮 to enter an ou	ıtput typ	e or use 🗢 to search, 🐄 to accept			
		00: Alarm	19:	Exit Mode	38:	DK First Knock	
		01: Guard Alarm	20:	Entry/Exit Mode	39:	Zone On Test	
		02: Guard Access Alarm	21:	Armed	40:	Test Fail	
		03: Entry Alarm	22:	Full Arm	41:	Internal Alarm	
		04: Confirmed Alarm	23:	Part Armed	42:	Time Arming	
		05: 24Hr Audible	24:	Force Armable	43:	Part Armed 1	
		06: Forced Entry	25:	Force Armed	44:	Part Armed 2	
		07: 24Hr Gas		Arm Fail	45:	Part Armed 3	
		08: PA Audible	27:	Bell SAB	46:	Zones Locked Out	
		09: PA Silent	28:	Strobe	47:	Armed/Alarm	
		10: Duress	29:	Detector Latch	48:	Full Entry Mode	
		11: Fire Alarm	30:	Detector Reset	49:	Intruder Alarm	
		12: Medical Alarm	31:	Walk Test Active	50	Sounder Mimic	
		13: Auxiliary Alarm	32:	Zones Omitted	51	Detector Fault	
		14: Tamper Alarm	33:	24Hr Zones Omit	t 52	Detector Masked	
		15: Alarm Abort	34:	Reset Required	53	Fault Present	
		16: Ready	35:	Door Strike	54	LED Control	
		17: Entry Mode	36:	Chime Mimic			
		18: 2 nd Entry Mode	37:	Chime Enabled			
3 _{def}	Zone:	Use 🔍 - 🦭 to enter an ou	utput typ	e or use 🗢 to se	earch, 座 to	o accept	
		01 - 24 Zone 1 to 24 Mimic		25 – 48	Zone 1 to 24	4 Alarm	

Key	Attributes	Attribute Types					
Yes	Attributes	Press (Yes) to edit, (1) - 4_{sl} to	select attributes, 🐨 to accept				
		User Test = U	(3.) Latch Until = L				
		(2) Inverted = I	(4,) Use Pulse Timer 1 = 1				

(7,sp	UDL/Digi Options							
0_	Reset Digi	Press Reset to reset digimodem						
1	Start Test Call	Press (res) to send test call to the ARC, (1) - (2) to initiate a call to the remote UDL computer (using Call Back numbers 1, 2 or 3)						
(3 _{oet}	Program Digi	Use ① - ② to select ARC 1 – 2, № to edit						
	Protocol	Press 🔊 to edit, 🔍 - 4 to select protocol, 🕬 to accept						
		0_	Disabled 2 Contact ID 4 SMS					
		1	Fast Format	3 _{def}	SIA Level II			
	Telephone Number 1	Press No to edit, O - 9 to enter the number, Yes to accept, pressing No repeatedly Inserts a *#,(3 second pause)W(10 second pause)+R(recall signal)						
	Telephone	Press No to edit telephone number 2, O - 9 to enter the number, Nes to accept						
	Account Number	Press No to edit, O - O to enter number, Nes to accept						
	Dialling Attempts	Press No to edit	t, 🛈 - 🦦 to enter num	ıber, 倾				
	Reporting	Press 🔊 to edit	$t, (1) - (8_{w})$ to select cha	annels, (Ves to accept (only for Fast	: Format)		
	Restoring	Press 🔊 to edit	t, 1 - $(3 + 1)$ to select cha	annels, (Ves to accept (only for Fast	Format)		
	Open/Close	Press 🔊 to edit	t, 1 - $(3 + 1)$ to select cha	annels, (Ves to accept (only for Fast	Format)		
	Reporting Options	Press No to edit (only available for	t, ① - ⑧ to select opt Contact ID, SIA Level II, Ea	i on , (🕬 asyCom	➢ to accept Pager and SMS Messaging))		
		(2abc)	(2) A = Normal Alarms (6)					
		(3 _{cef}	$\mathbf{C} = Open/Close$	C = Test Calls				
		(4 _{ghi})	O = Omits & Reinstates	(8 tav	R = Restores			
	Config.	Press No to edit, 1 - 8 to select option, (1) to accept (only available for Contact ID, SIA Level II, EasyCom Pager & SMS Messaging)						
		1	D = Disable Zone	3 out	R = Enable RadioPad	(5 _⊮) F =Use		
		(2abc)	S = Use SIA I	(4 _{gh})	G = Enable GSM			
(4 ₉₁)	Digi Options	Press 🔊 to edit, 🔿 to select an option, 🔊 to change the option, 📧 to accept						
	-	1	E = Digi is Enabled		(4 _{ghi})	B = Blind Dialling		
		2 abc	P = Pulse Dialling		(5 _{j4})	R = Reserved		
		3 _{def}	3 = Pulse after 3		6 mo	A = Dial All		
(5 _{jst})	UDL Options	Press No to edit,	0 - 9 to enter the n	umber,	(Ves) to accept, pressing (Ves)	repeatedly		
	Call Back Number 1	Inserts a *#,(3 se	cond pause) W (10 second	pause)·	+R(recall signal)			
	Call Back	Press 🔊 to edit	call back number 2, 🔍	- 🧐 🗤 te	o enter the number, (Ves) to	accept		
	UDL Password	Press 🔊 to edit	t, 🕕 - 🥯 to enter num	ıber, 🕐	s) to accept			
	UDL options	Press 🔊 to edit	, 🗢 to select an option,	№ to	change option, Ves to acce	ept		
	A (1)		A = DL Attended		(4 _{ghi})	L = Armed DL		
		(2abc)	M = Manual Call-back		5 _{ju}	A = Only Full		
(3₀) D = Call Defeat On		(6m) K = Online						
	Number of Rings Press (No) to edit, (0) - (9) to enter number of rings, (Nes) to accept							
	Dialling Attempts Press (No) to edit, (0) - (9) to enter number of dialling attempts, (Yes) to accept							
	Radio/SMS	Use 🗢 to select	option, \textcircled{No} to edit, \textcircled{O}	- 🧐 🗤 to	o enter numbers, (Yes) to ac	cept		
	Option	1:	Pad ARC1 Pri	4:	Pad ARC2 Pri	7: SMS Centre		
		2:	Pad ARC1 Sec	5:	Pad ARC2 Sec	8: SMS Centre		
		3:	Pad ARC1 Prefix	6:	Pad ARC2 Prefix			

Quick Reference Guide

Premier 24 Quick Reference & Factory Defaults

	UDL/Digi Options continued					
(8 _{tuv})	Com Port Setup Use 🔍 - 🖭 to select a com port, 🔊 to edit, 🗢 to select an option, 🐨 to accept					
	Options depend	Nothing Fitted	Com2400	Radio Pad	Radio Plus	
	on com port	Com300	ComISDN	GSM Module		

(8 _{tuv})	Setup Users							
Yes	User Code	code Use ① - ⑨ to enter a code, 🐜 to accept						
Yes	User Types	Use 🕡	Use 🕕 - 🦫 to select a user type, 🐚 to accept					
		0_	Engineer	3 _{det}	Standard	6 Reset Only		
			Master	(4 _{ghi})	Shunt	(Terror Door Strike		
		2.00	Manager	(5 _{jal}	Duress			
Yes	User Options 1	Press 🔊 to edit, 🗢 to select an option, 🔊 to change option, 🐨 to accept						
	(only available to		Arming		(5 _µ)	Lock CODE by PGM3		
Custom users)		2.00	Disarming		6 mmo	Lock USER by PGM4		
		3 _{def}	Omitting		(7 _{pqrs})	Auto 'YES'		
		(4 _{ghi})	Lock TAG by PGM2		8 tuv	Send Open/Close		
Yes	User Text	Press (No) to edit, (1) - (9) to select characters (press the required key the appropriate number of times), (Nes) to accept						
		1	.,?!1@"-	(5 _{jkl}	JKL5	9 WXYZ9		
		2.00	ABC2	6 mno	M N O 6	• • • • • • • • • • • • • • • • • • •		
		3 _{def}	DEF3	(7 _{pqrs})	PQRS7	Move Cursor		
		(4 _{ghi})	GHI4	(8 tur	TUV8			

9 _{wayz}		Engineer Utils					
0_	View System Log	Use (to move up and down through log (down moves back in time, up moves forward again), (Par) to show other information () - () to find specific events					
1	Do Bell Test	Use 📀 to select an option, use ① - ⑧ or 🐚 to activate outputs					
		1: Test Bell 5: LCD Display					
		2: Test Strobe 6: Test Panel					
		3: Test Speaker 7: Test Comms					
		4: User Outputs					
2 _{atc}	Do Walk Test	Press (Area) to display zones that have been tested/still need testing, (Chine) to make zones Chime every time they are activated.					
3def	View Zone Status	Use ① to enter zone number or use (to search, (to walk test selected zone, (m) to omit zone temporarily					
(4 _{ghi})	View Version No.	Press 🐨 to view hardware information					
(5 _µ)	Confirm Devices	Use 🗢 to select network, 🐚 to confirm Devices					
6 mmo	Check RKP Status	Use ① - 4 to select keypad, 🔊 to test output, 🞯 to test sounder,					
(7 _{PPI})	Check Exp. Status	Use 1 - 2 to select expander, 0 to select network, (Area) to display					
		zones/voltage/outputs, \textcircled{Chine} to test zones, \textcircled{Omt} to test sounder, $\textcircled{1}$ - $\textcircled{8}_{w}$ to test outputs					
(8 tav	Set System Time	Use ① - 9 to enter time (24-hour format) H H M M, Ves to accept					
9 _{wyg}	Set System Date	Use ① - 9 to enter date ② ② M M Y Y, Ves to accept					
۲	Change Eng Code	Use 🕕 - 🖭 to enter a code, 🕬 to accept					

Part	Alter Part Arms						
	Press ① - ⑨ to enter zone number or use 🗢 to search, 이때, আ or Part to select Part Arms 1, 2						
	Omit Part Arm 1		Part Arm 2	Part	Part Arm 3		



Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden, Lancashire BB4 4PW, England.

Technical Support:

UK Customers Tel: 08456 300 600 (Calls charged at 3.36 pence per minute from a BT landline. Calls from other networks may vary.) International Customers Tel: +44 1278 411707

Email: techsupport@texe.com

© Texecom Limited 2007

INS249-2